

BIFROST ELITE 160 User Guide

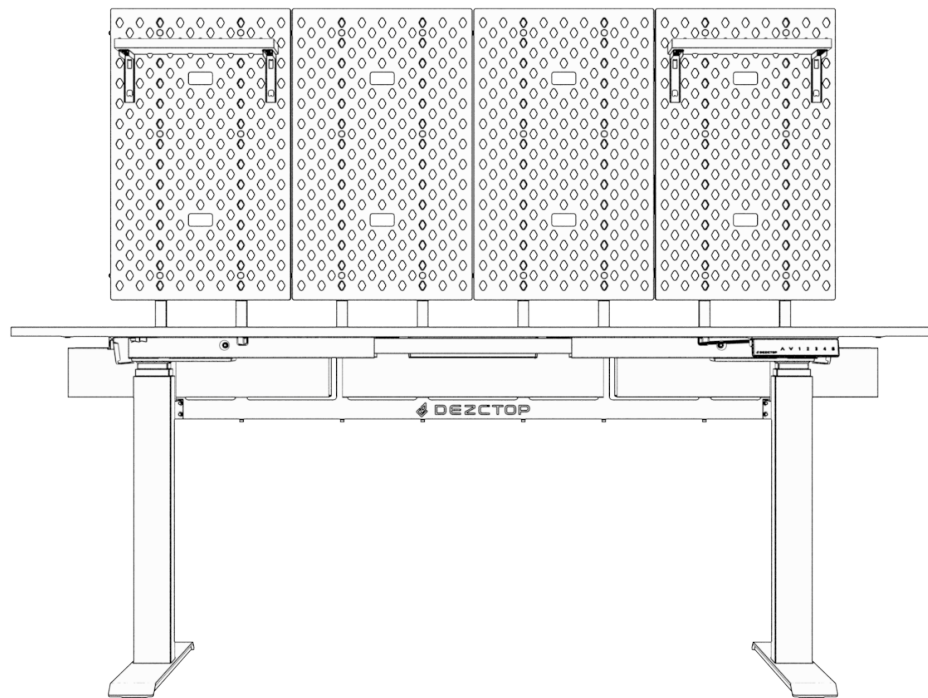 


TABLE OF CONTENTS

1 Overview 01

2 Dimensions 02

3 Component List 04

4 Screws & Relevant Tools 13

 
5 Assembly 15

6 Compatible Accessories 93



7 DEZCTOP Warranty Policy 98

8 Support & Service 100



1 OVERVIEW

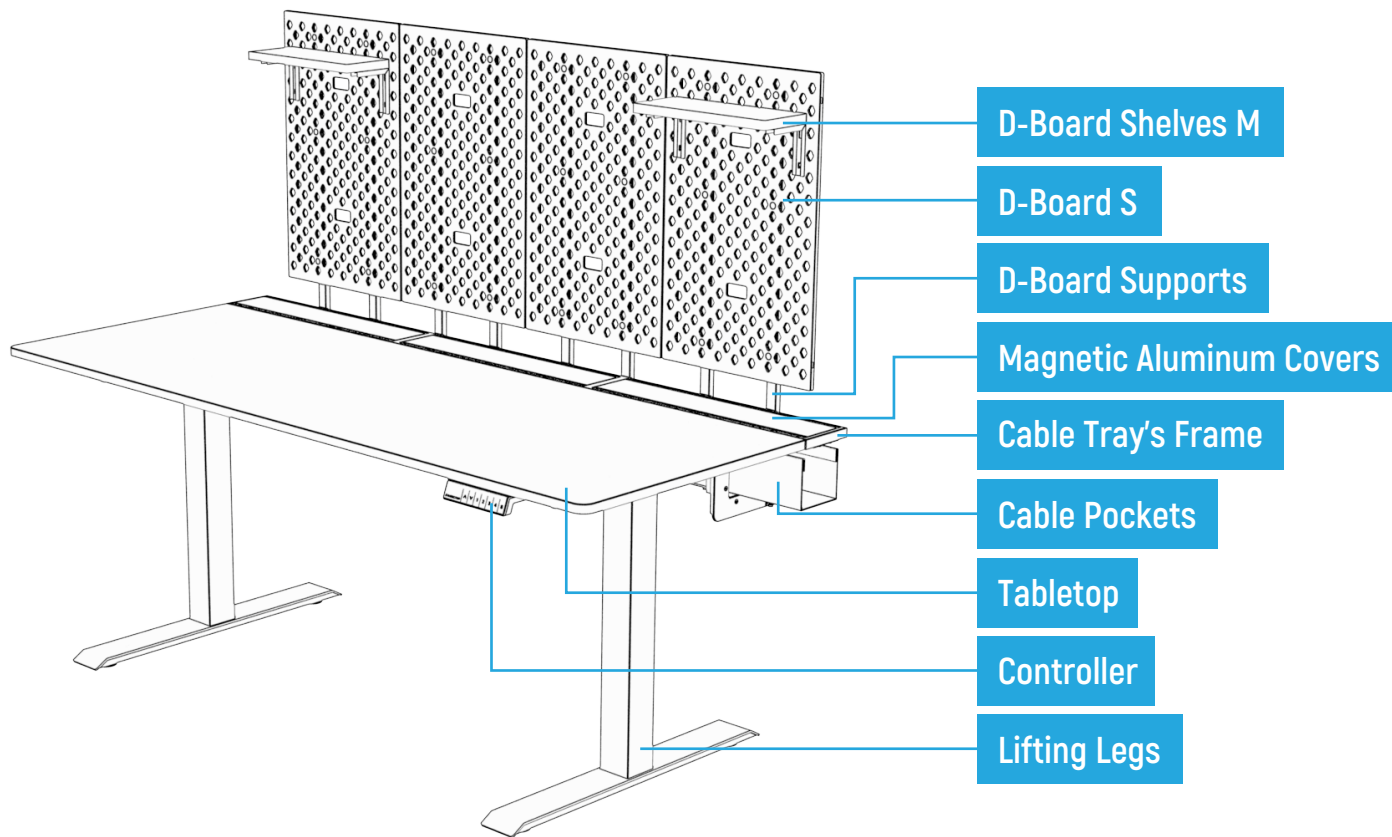

2 DIMENSIONS

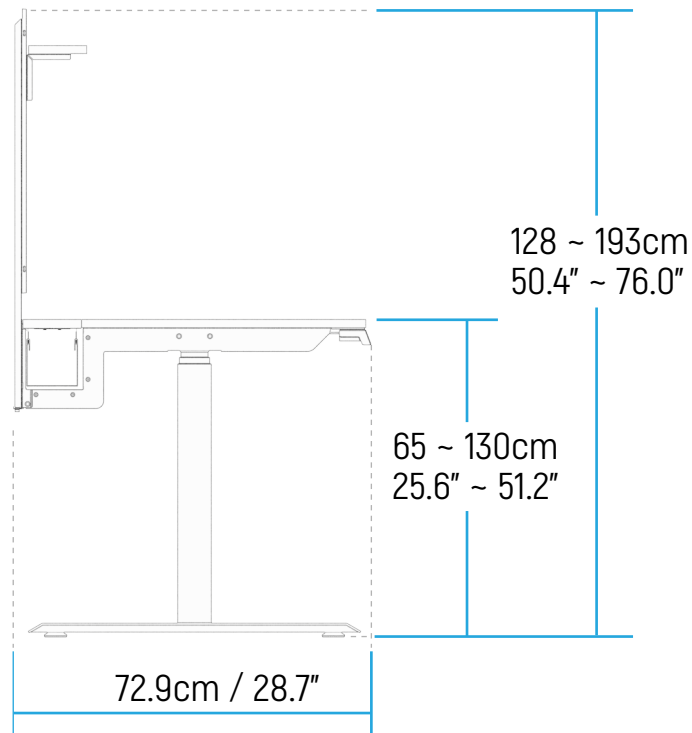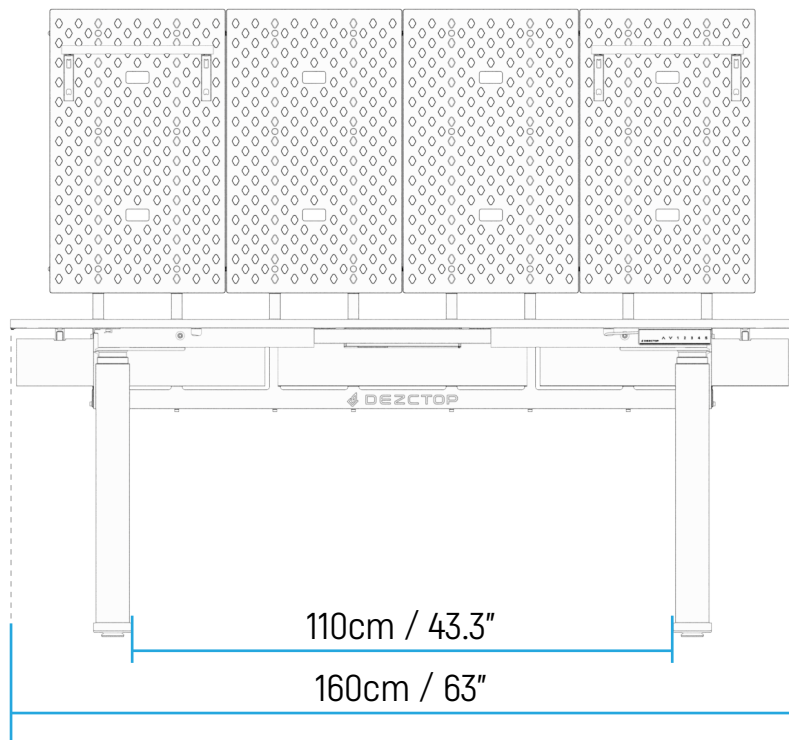  

2 DIMENSIONS

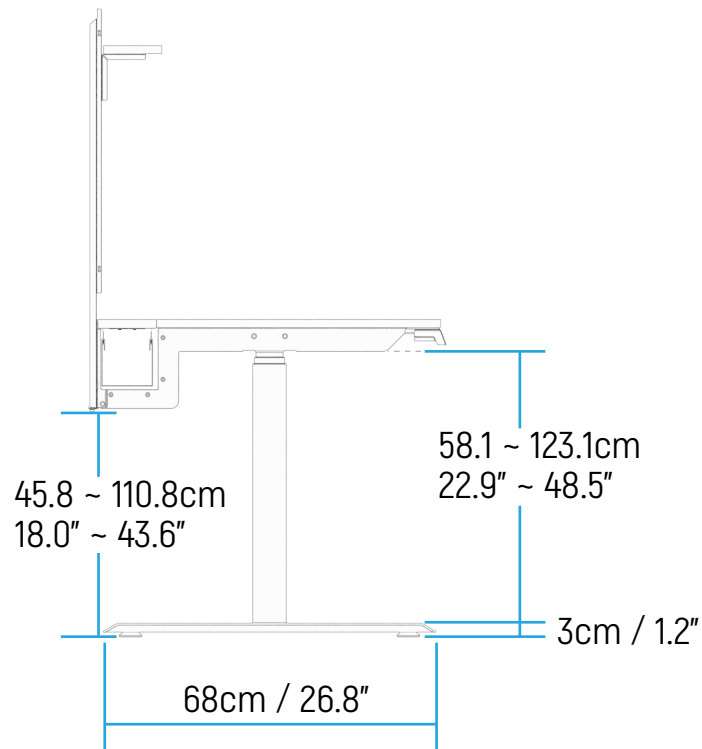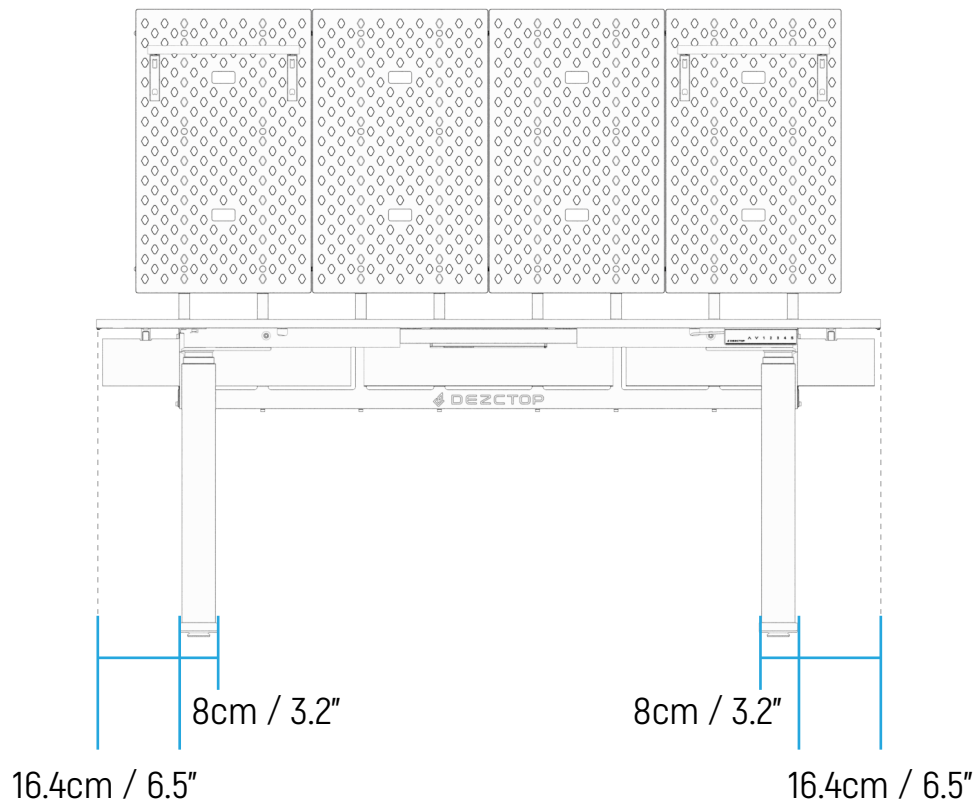  

3 COMPONENT LIST



3.1 The Tabletop Box 05

3.2 The Underframe Box 07

3.3 The Accessory Box Inside The Underframe Box ... 09

3.4 The D-Board Kit (4 Pieces) 10

3.5 The Accessory Bag Inside The D-Board Kit (4 Pieces) ... 12

 
3.1 THE TABLETOP BOX



3.1 THE TABLETOP BOX



T1

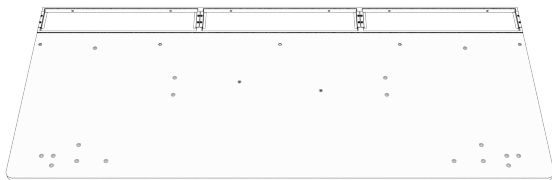

x 1

Tabletop With Cable Tray's Frame

T2



x 1

Support Panel

T3



x 3

Cable Pocket

T4



x 3

Magnetic Aluminum Cover

3.2 THE UNDERFRAME BOX



3.2 THE UNDERFRAME BOX



U1



x1

Extendable Underframe

 
U2



x2

Lifting Column


U3

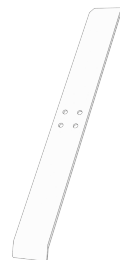

x2

Foot

 
U4

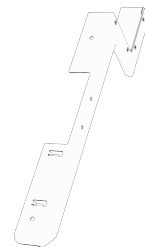

x1

Frame Support - Right

 
U5

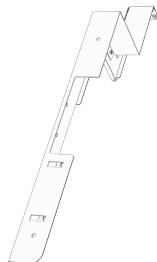

x1

Frame Support - Left

 U6

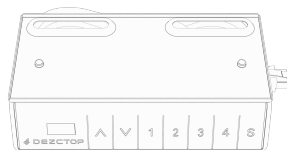

x1

Controller & Holder

 
U7



x1

Control Box

U8







x1


Power Cord

    3.3 THE ACCESSORY BOX INSIDE THE UNDERFRAME BOX



U9  x 4 Cable Clip	U10  x 8 M10 x 16 Socket Head Cap Screw	U11  x 4 M6 x 16 Socket Head Cap Screw	U12  x 26 M6 x 10 Socket Head Cap Screw
U13  x 2 M4 x 12 Cross Screw	U14  x 2 M6 x 10 Cross Screw	U15  x 1 5mm Hex Key	U16  x 1 Cross Screwdriver

 
3.4 THE D-BOARD KIT (4 PIECES) BOX

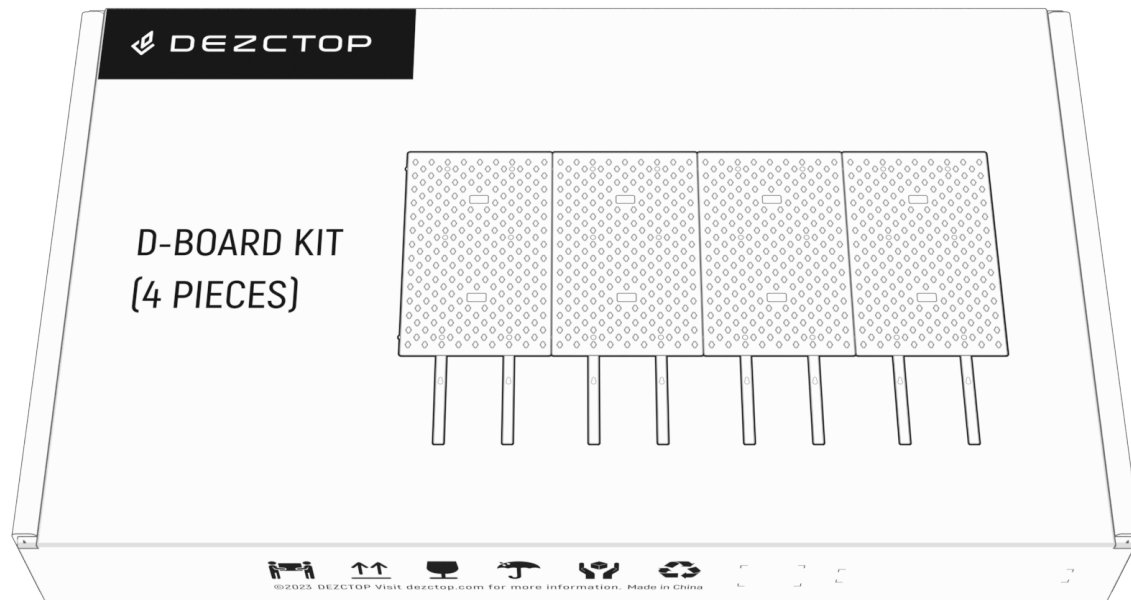

3.4 THE D-BOARD KIT (4 PIECES) BOX



 D1

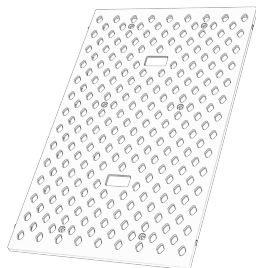

x 4

D-Board S

D2



x 8

D-Board Support

 
D3



x 2

Board of D-Board Shelves M

D4

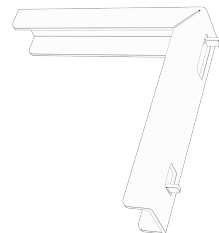


x 4

L-Bracket

3.5 THE ACCESSORY BAG INSIDE THE D-BOARD KIT (4 PIECES) BOX



 
D5



x 32

M6 x 10 Cross Screw

 
D6



x 8

M6 x 10 Socket Head Cap Screw

 
D7

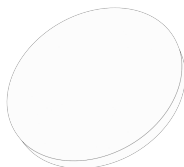

x 24

Screw Cap

 4. SCREWS & REVELANT TOOLS

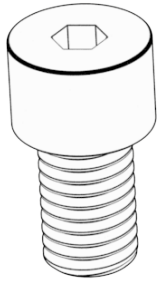

M10 x 16



 
M6 x 16



M6 x 10





M4 x 12



M6 x 10

  4. SCREWS & REVELANT TOOLS

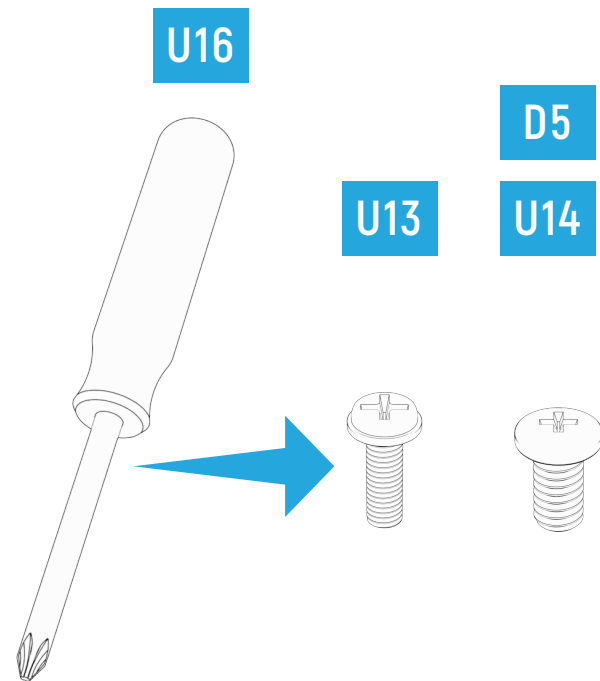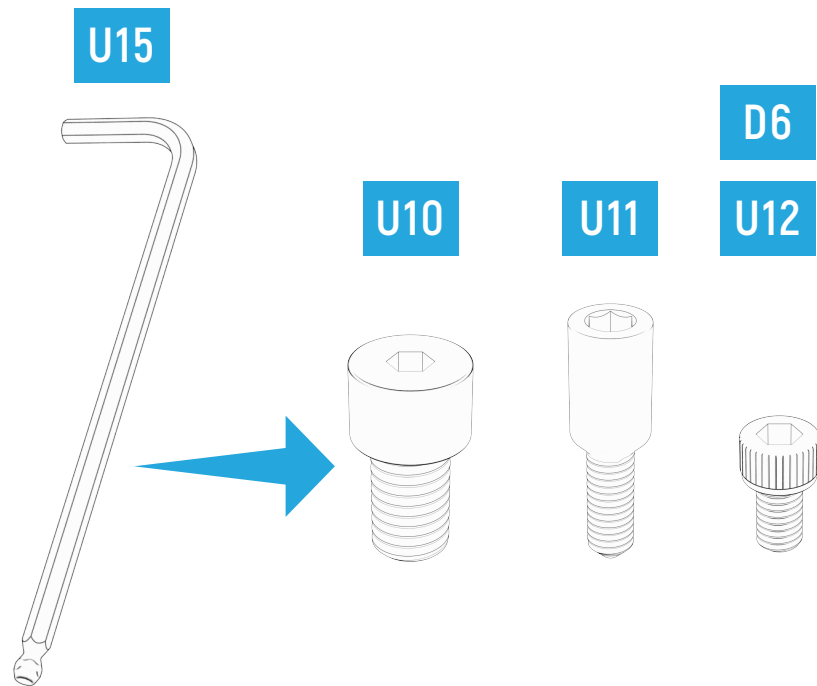

5 ASSEMBLY



5.1 Prepare The Extendable Underframe 16

5.2 Assemble The Frame 24

5.3 Install The Control Box 35

5.4 Install The Controller 44

5.5 Operation of The Controller 52

5.6 Troubleshooting 56

5.7 Assemble The Support Panel 58

5.8 Assemble The Cable Pockets 65

5.9 Assemble The Magnetic Covers 69

5.10 Assemble The D-Board 74

5.11 Assemble The Shelves 86

 
5.1 PREPARE THE EXTENDABLE UNDERFRAME

5.1 PREPARE THE EXTENDABLE UNDERFRAME




1

U1

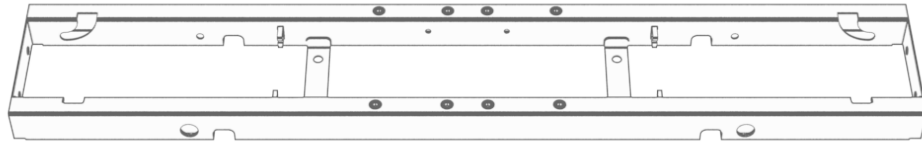

120


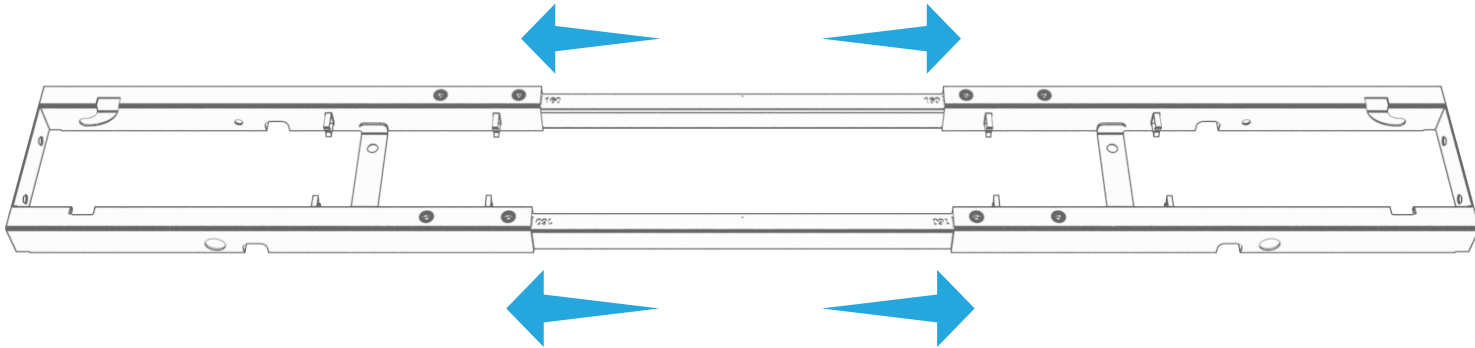 


160

5.1 PREPARE THE EXTENDABLE UNDERFRAME



 
 
2

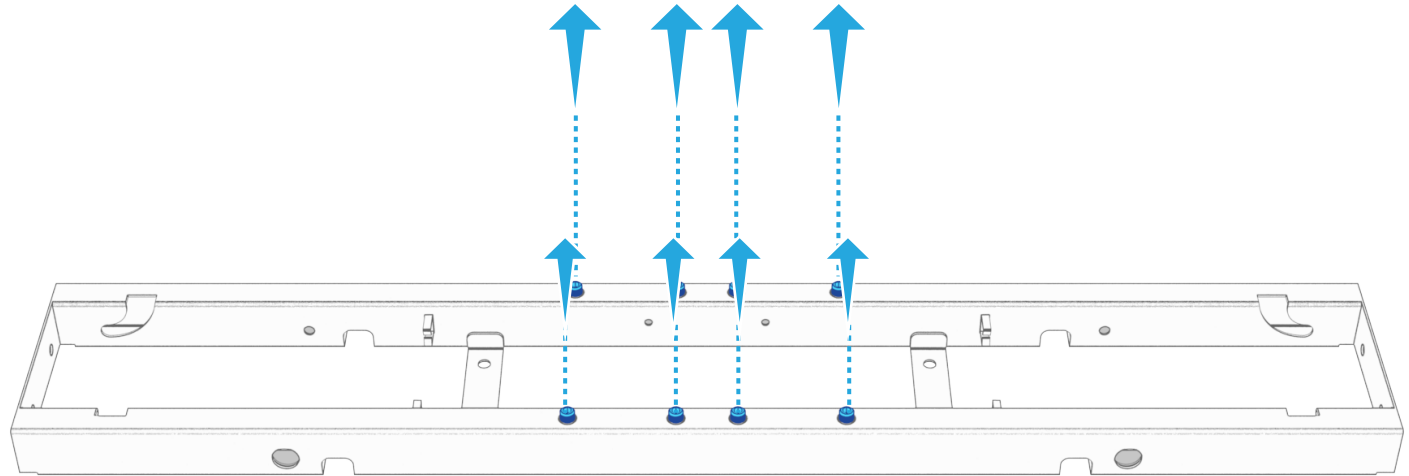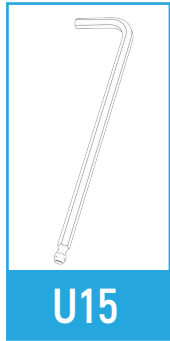

5.1 PREPARE THE EXTENDABLE UNDERFRAME



  
2

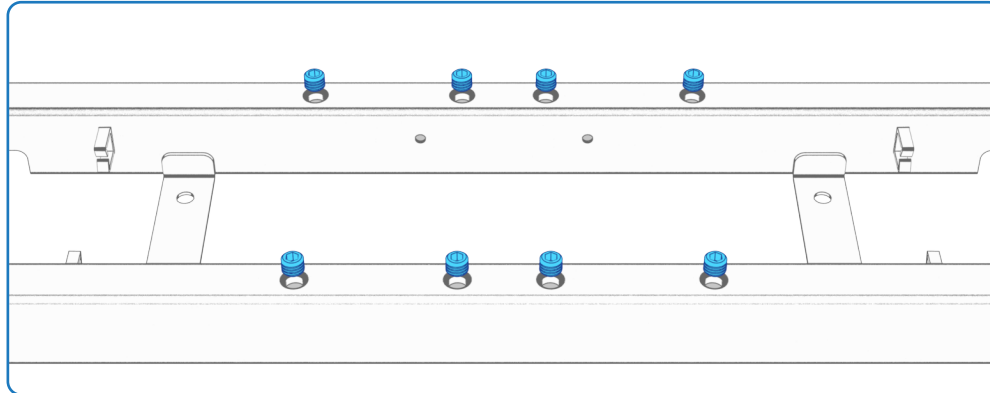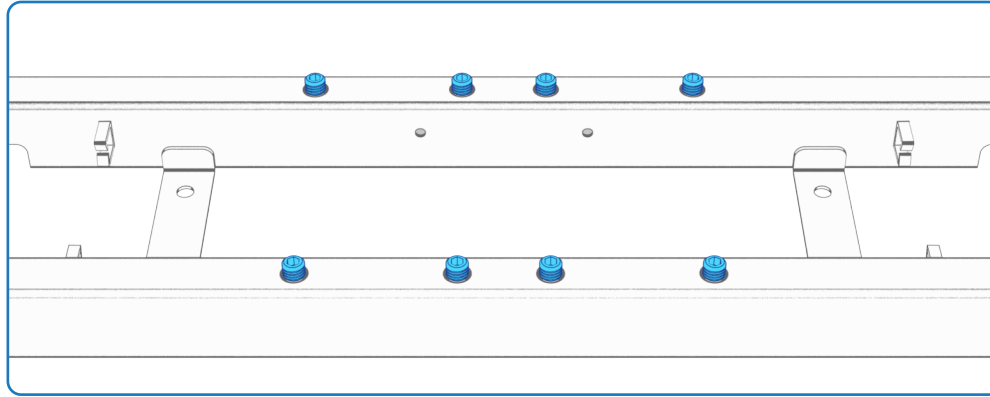

5.1 PREPARE THE EXTENDABLE UNDERFRAME



 
3

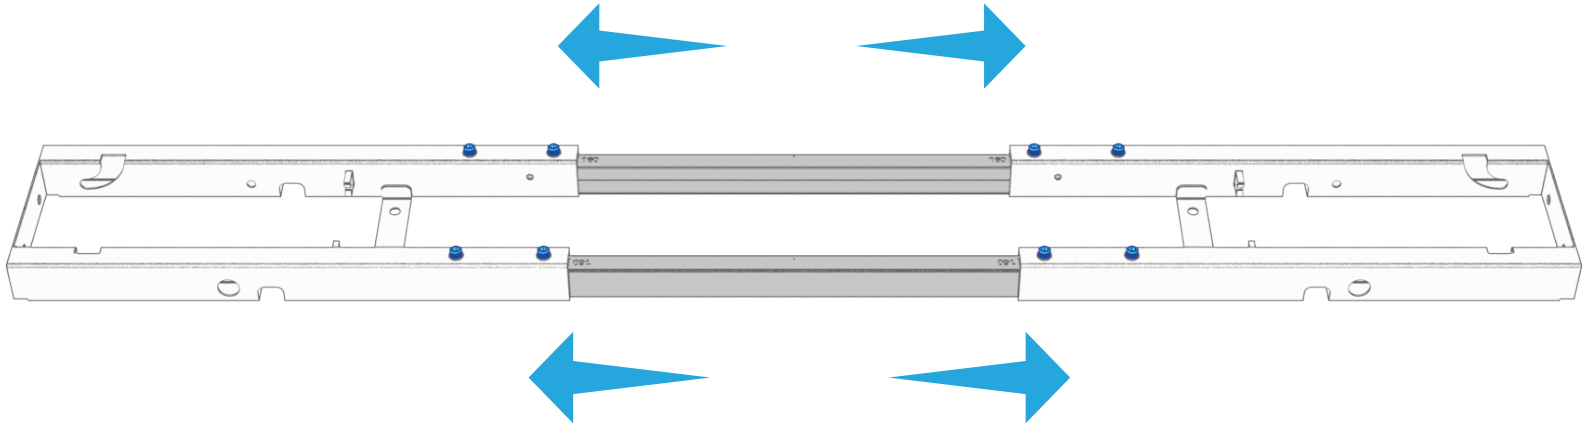

5.1 PREPARE THE EXTENDABLE UNDERFRAME




 
3

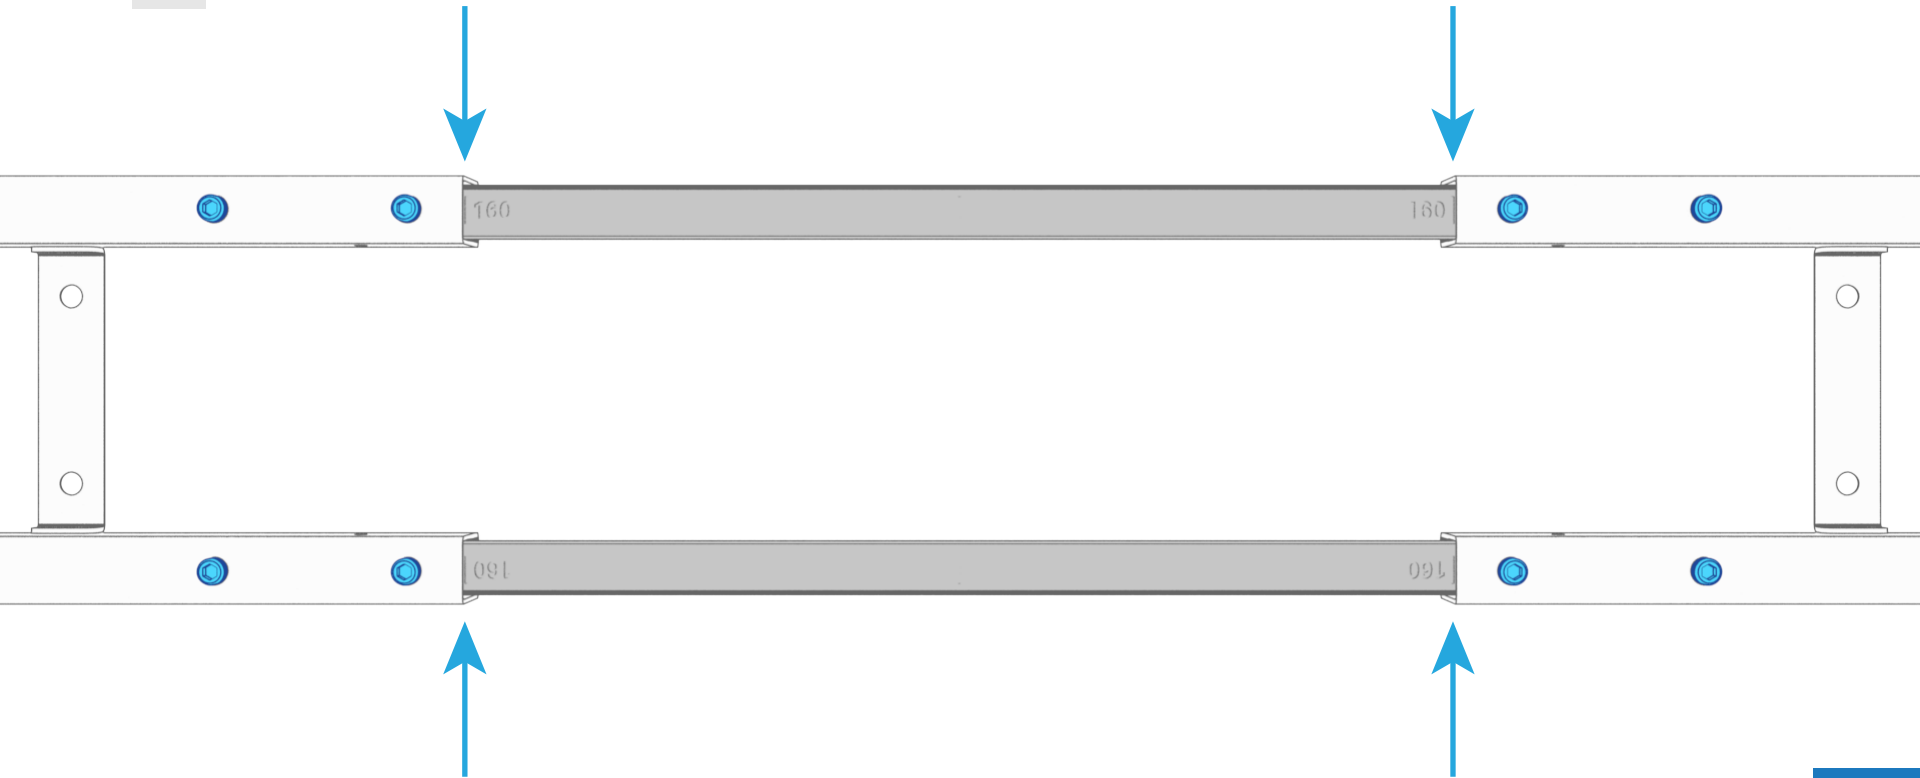

5.1 PREPARE THE EXTENDABLE UNDERFRAME



 
 
4

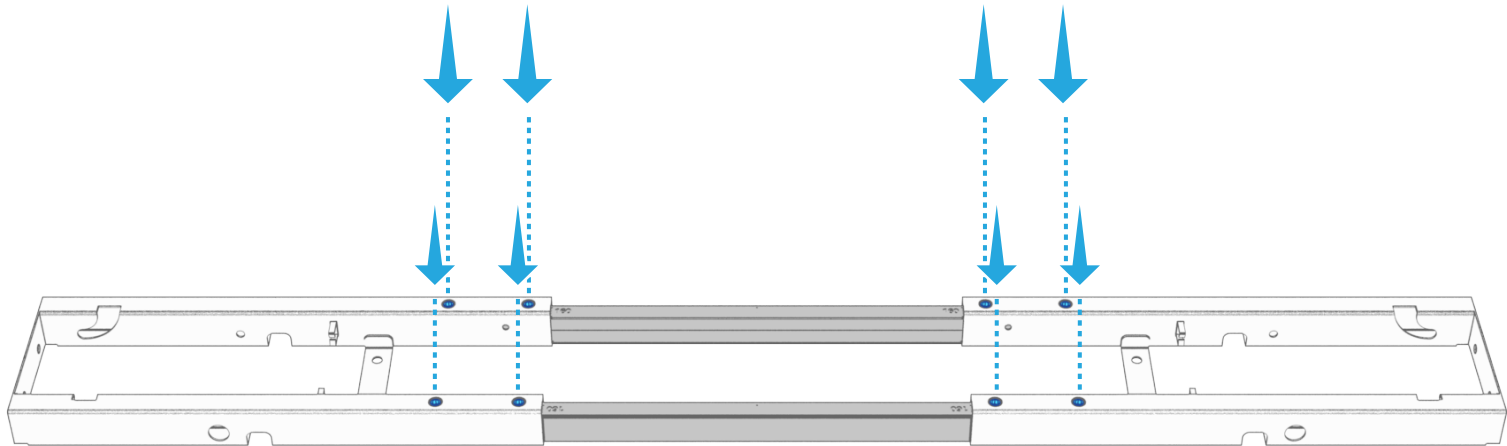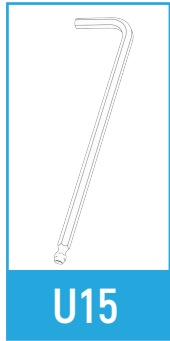

5.1 PREPARE THE EXTENDABLE UNDERFRAME



  5

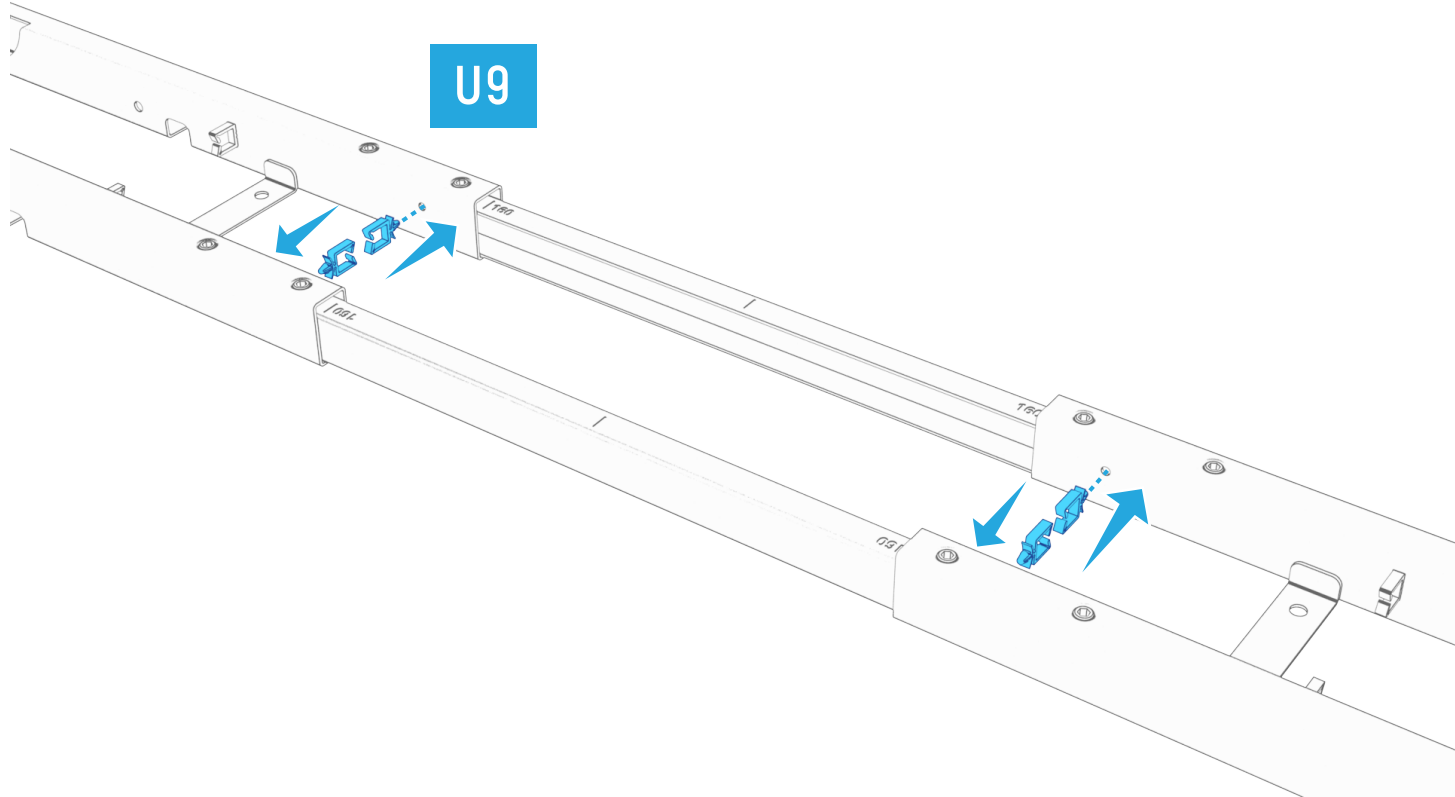
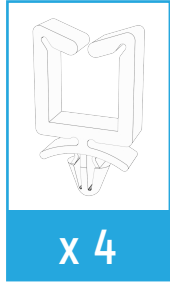


5.2 ASSEMBLE THE FRAME

5.2 ASSEMBLE THE FRAME



 
 
1

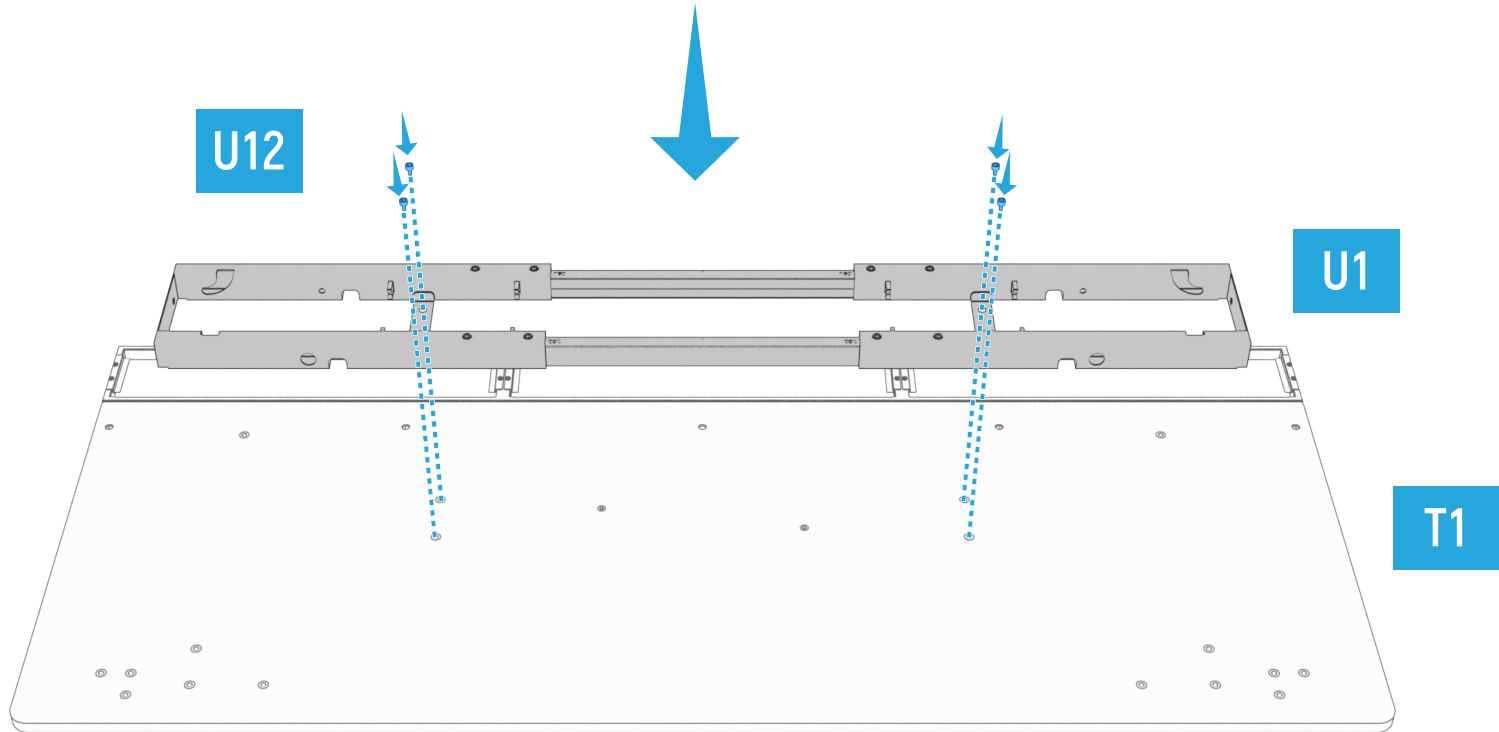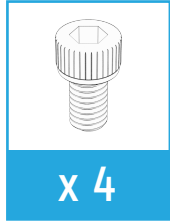

5.2 ASSEMBLE THE FRAME



  
1

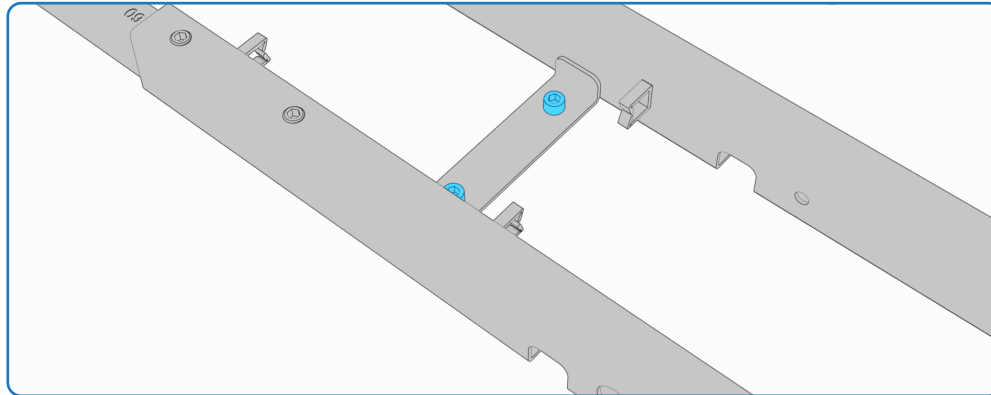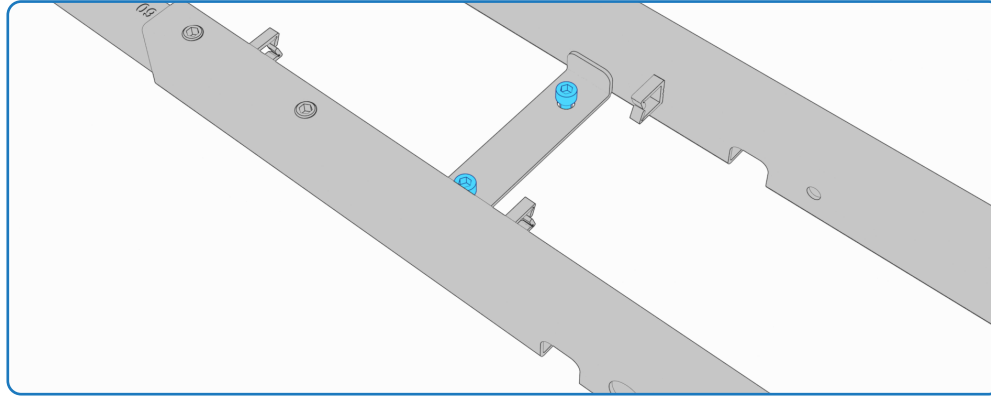

5.2 ASSEMBLE THE FRAME



 
2

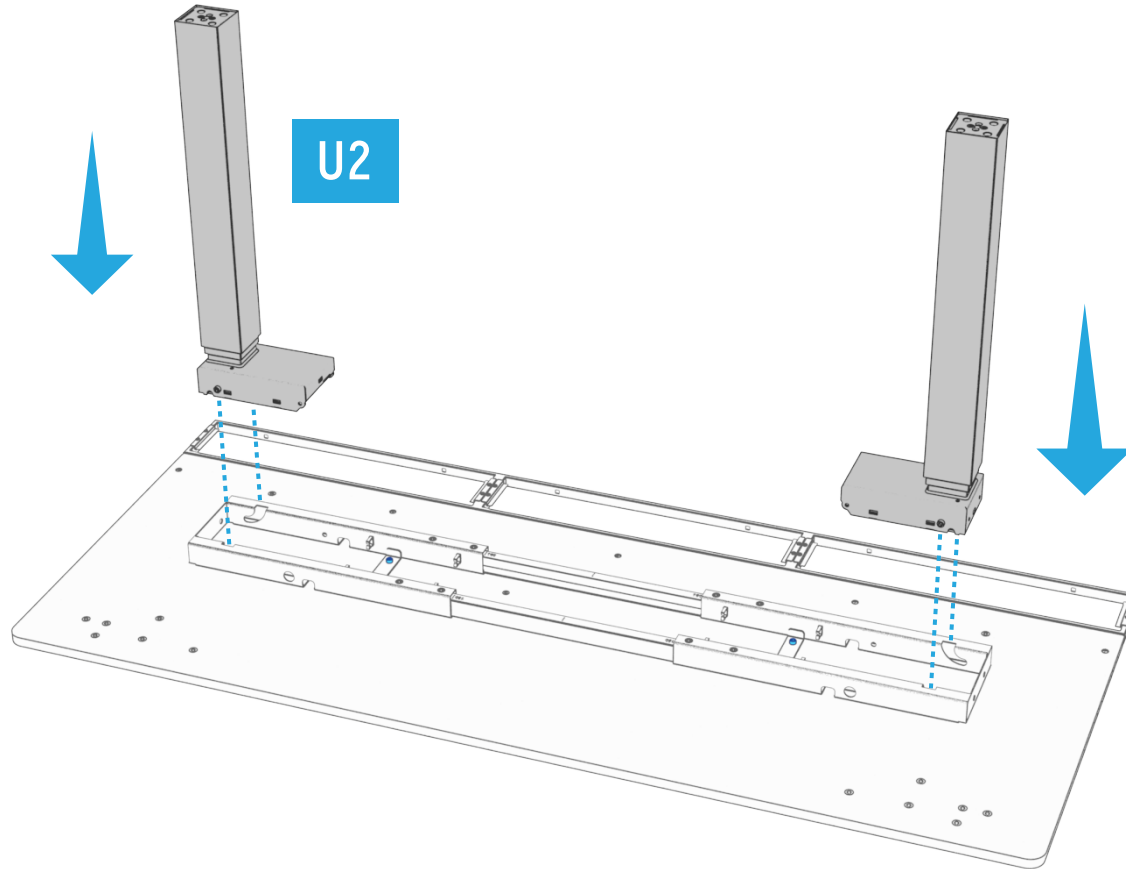

5.2 ASSEMBLE THE FRAME




 
2

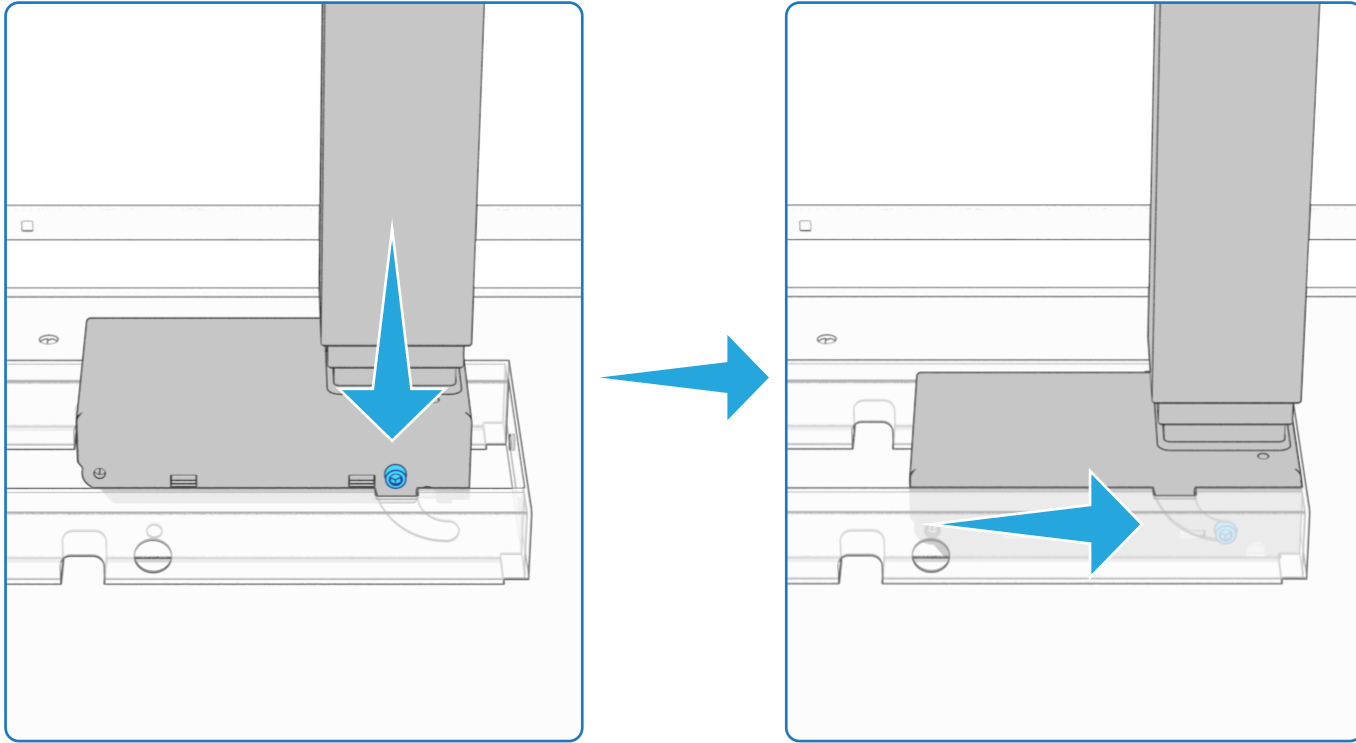

5.2 ASSEMBLE THE FRAME



 
 
2

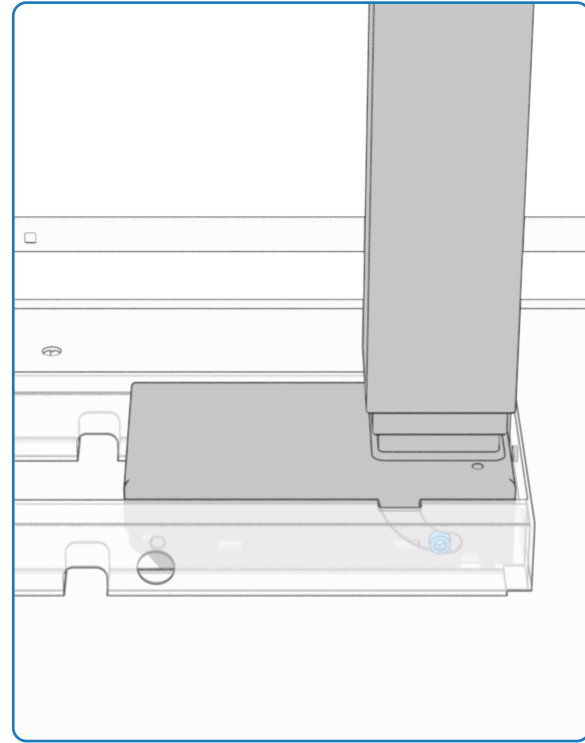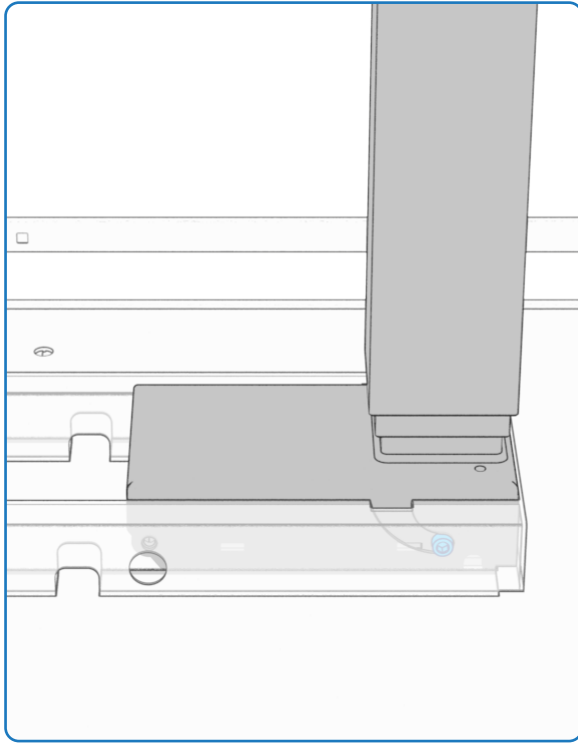

5.2 ASSEMBLE THE FRAME




 
 
3

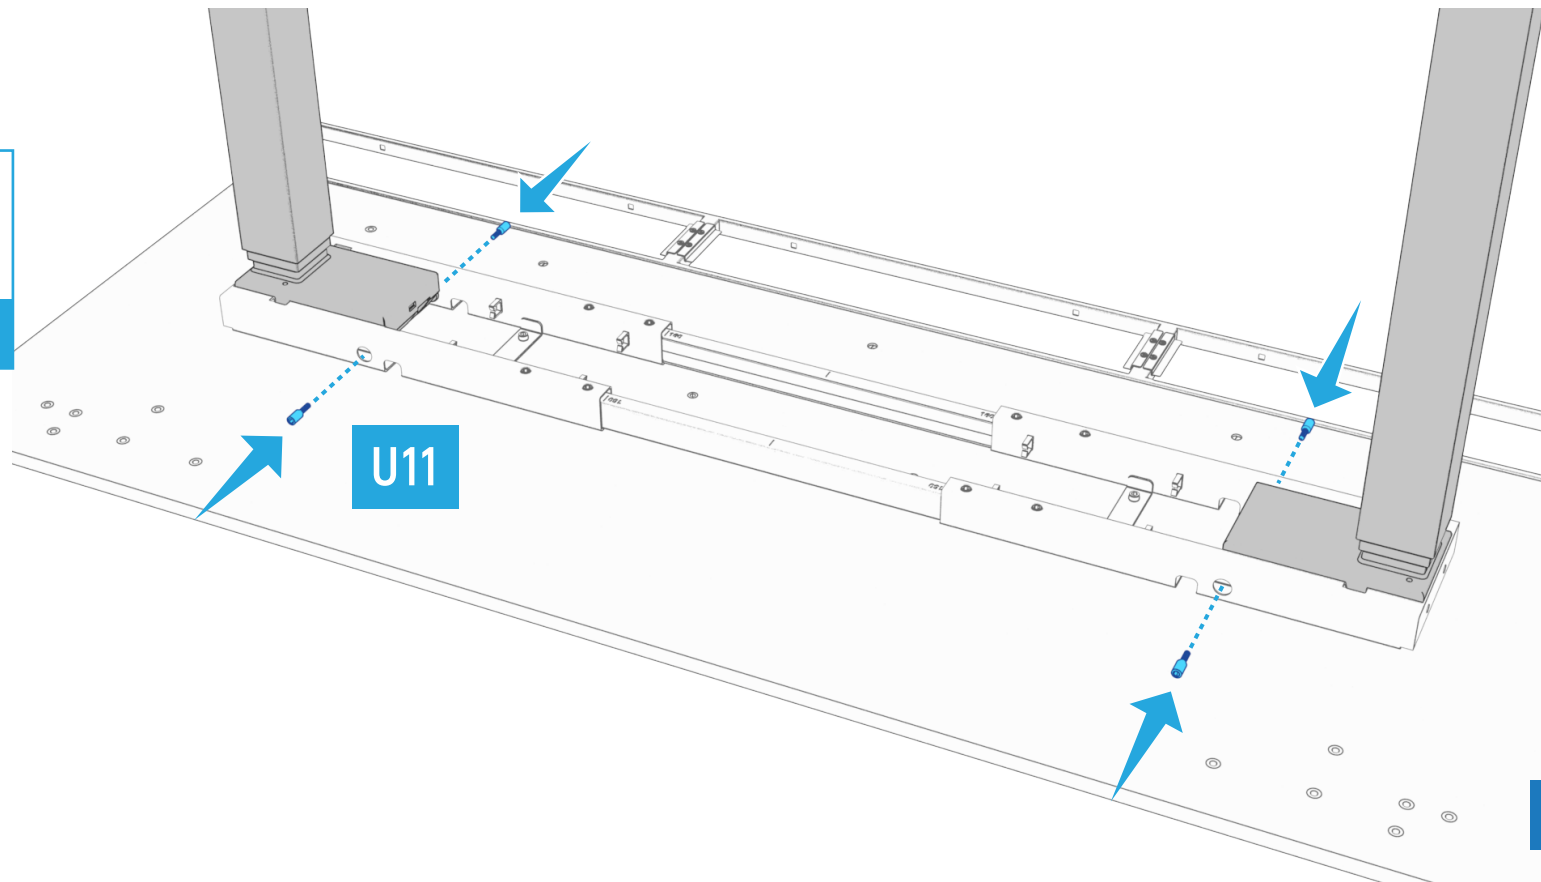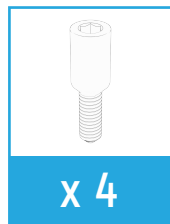

5.2 ASSEMBLE THE FRAME



   
4

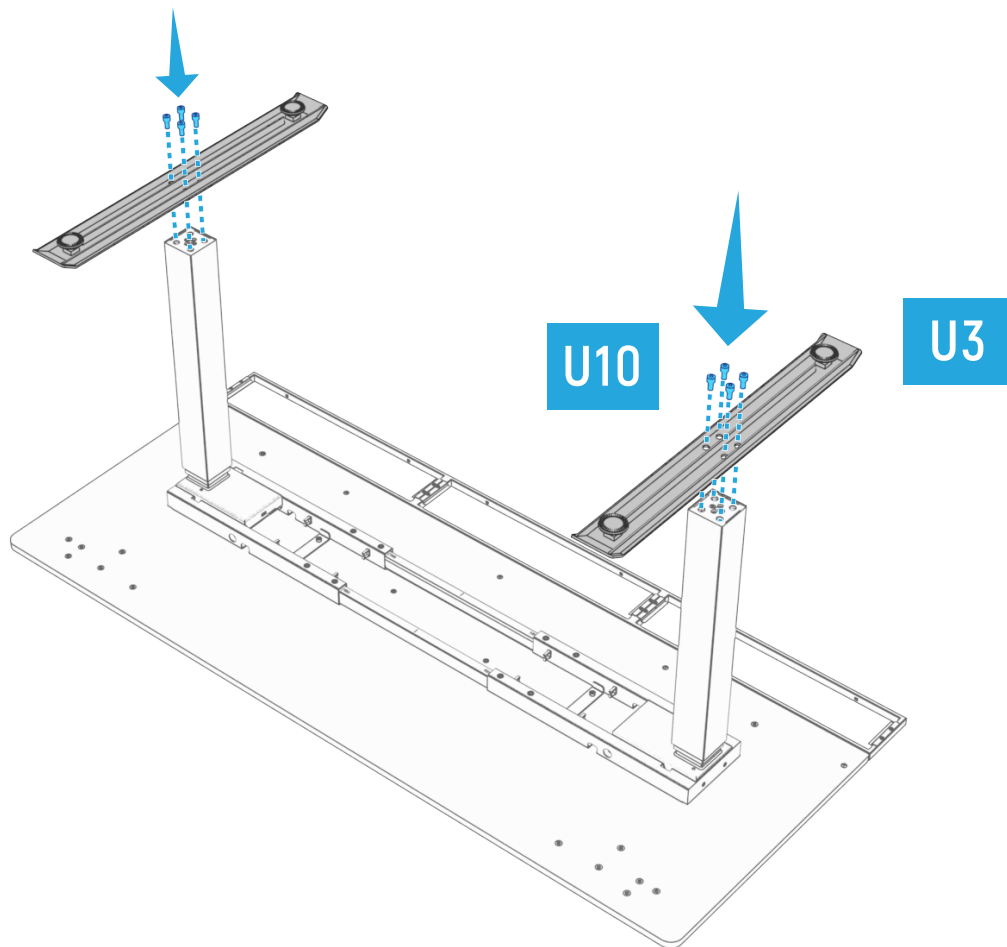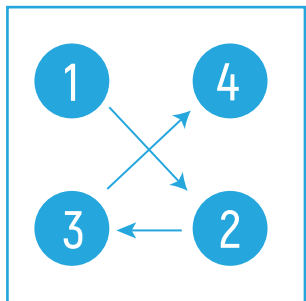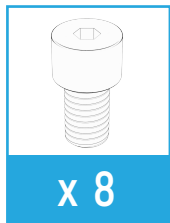

5.2 ASSEMBLE THE FRAME



 5


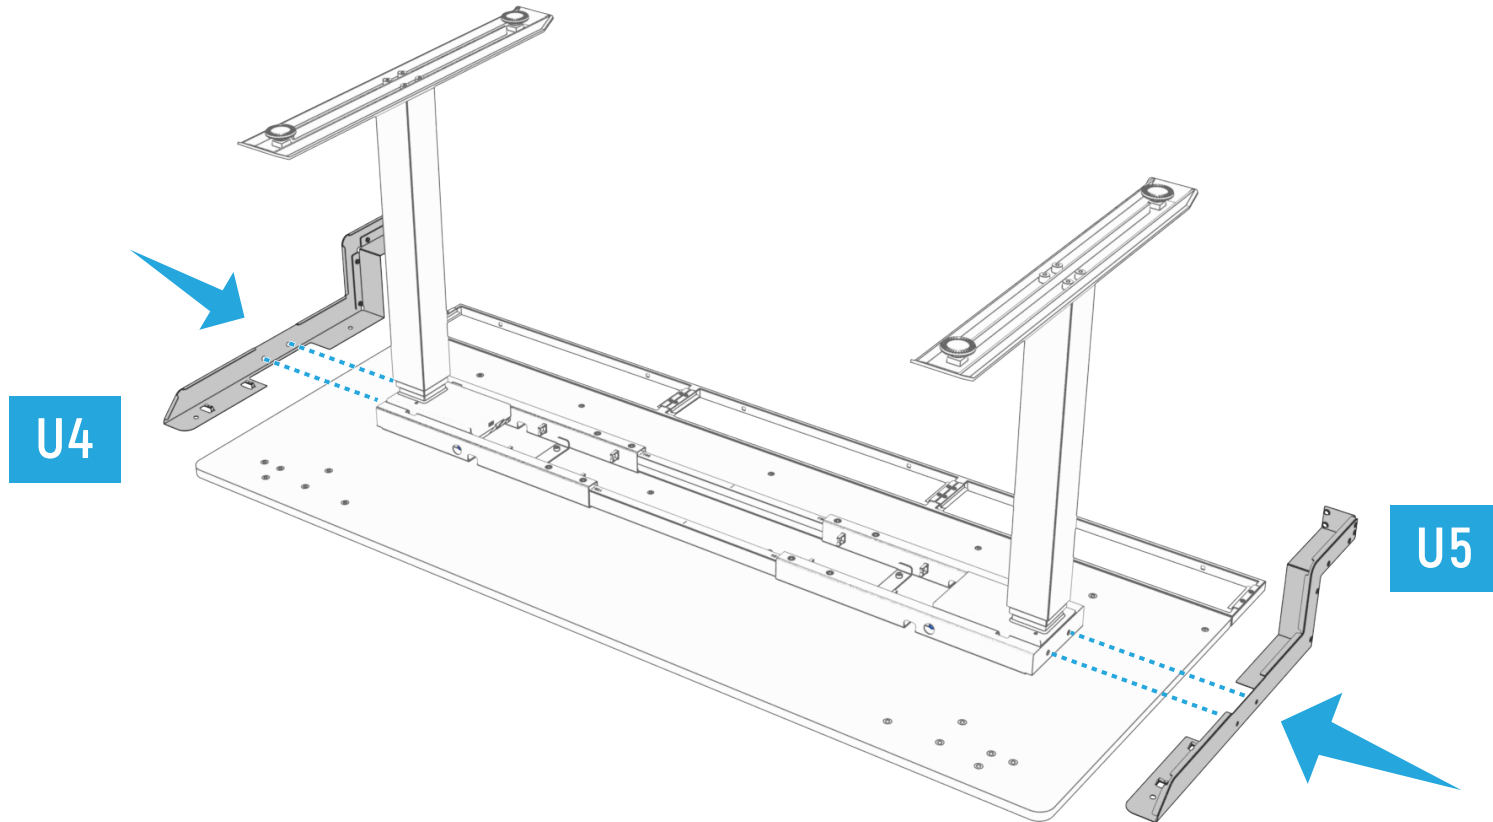


5.2 ASSEMBLE THE FRAME



6

  
U12

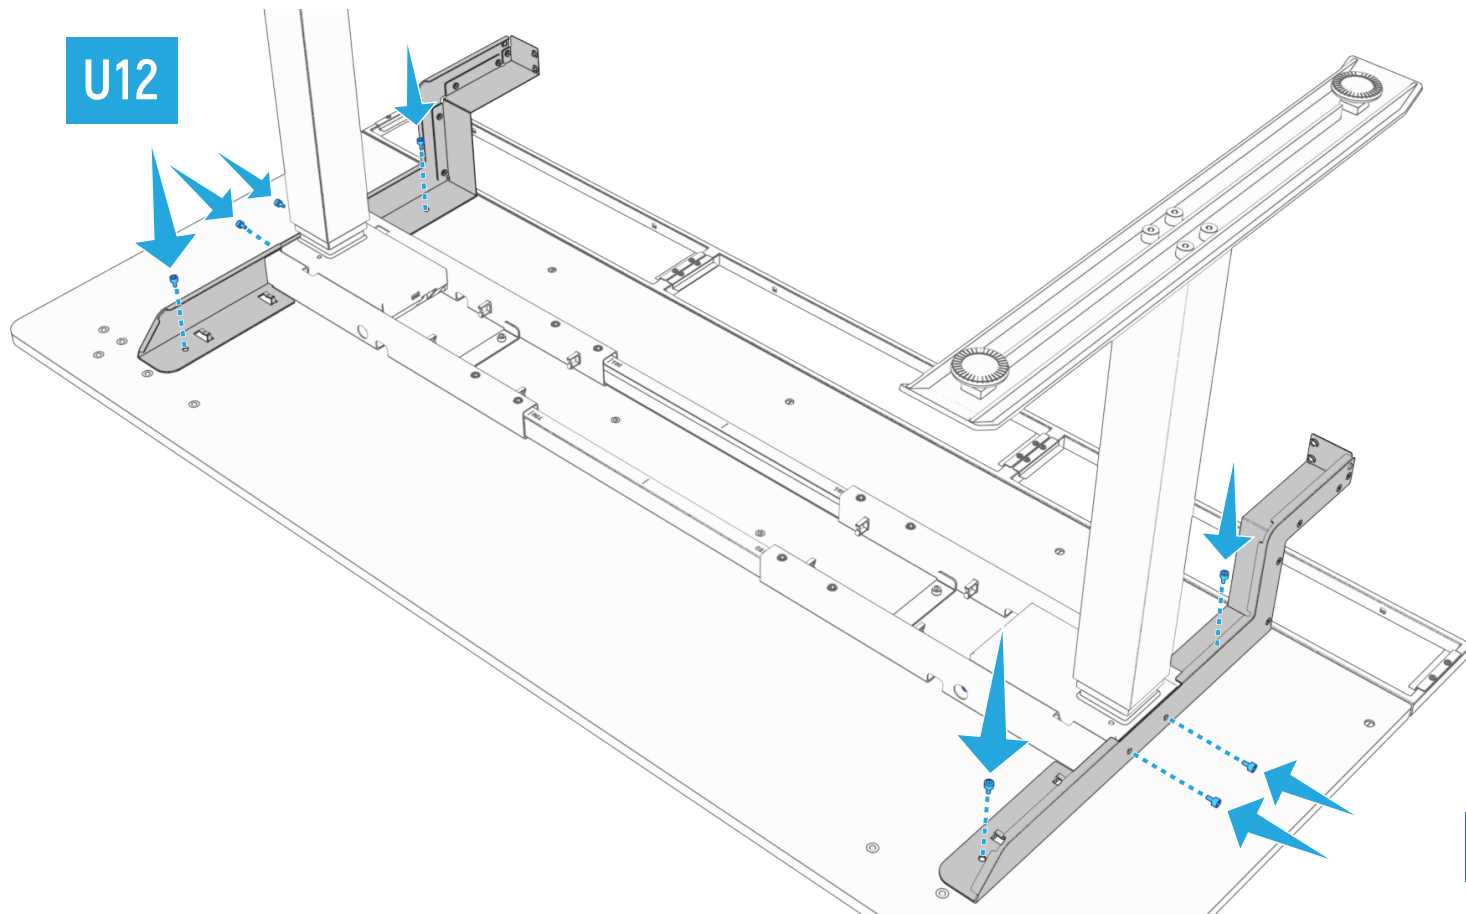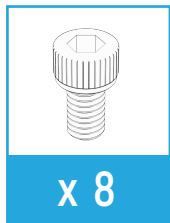

5.2 ASSEMBLE THE FRAME



 7

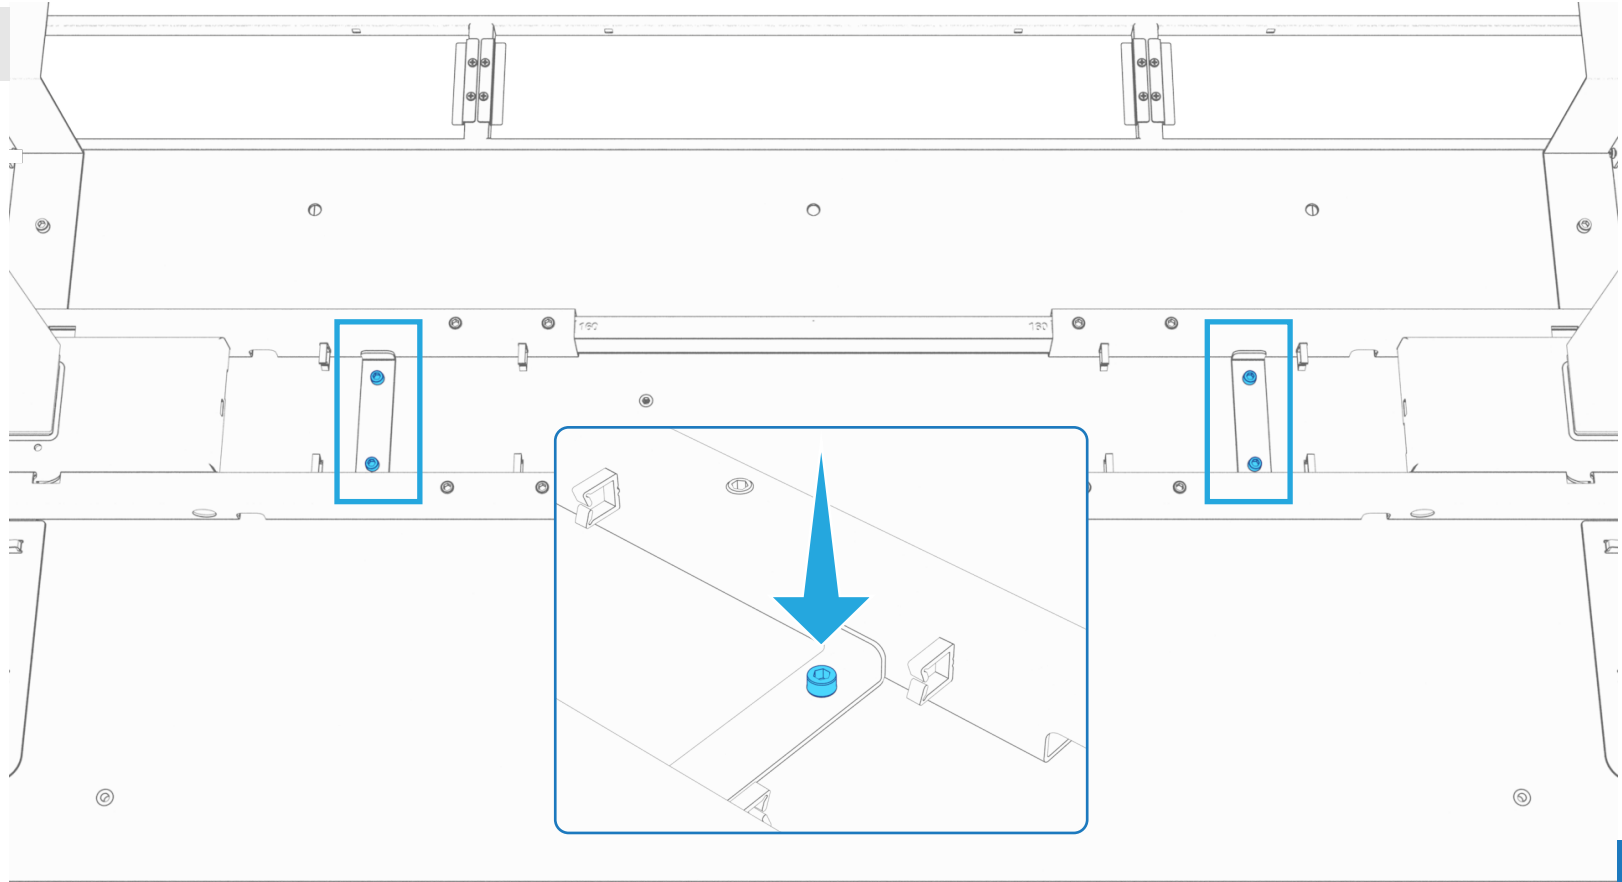




5.3 INSTALL THE CONTROL BOX

5.3 INSTALL THE CONTROL BOX



 
1

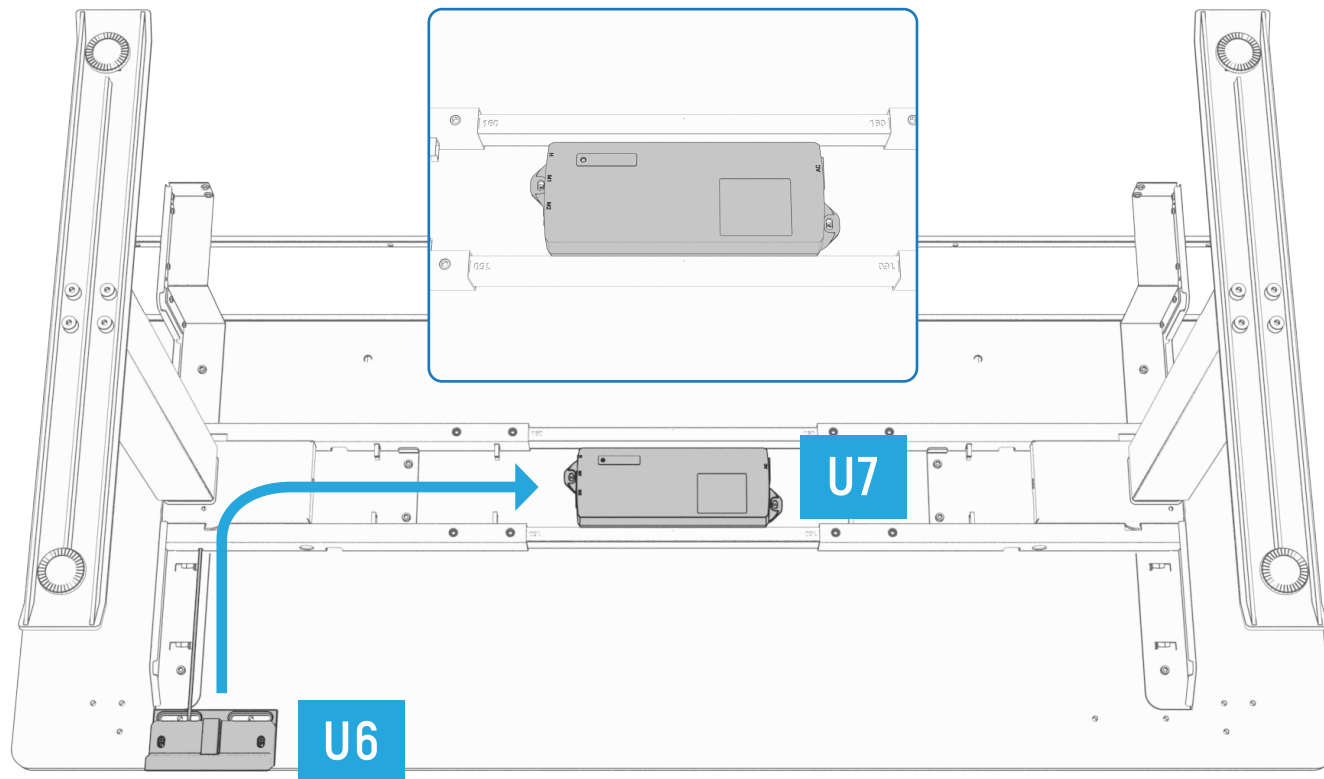

5.3 INSTALL THE CONTROL BOX




 
1

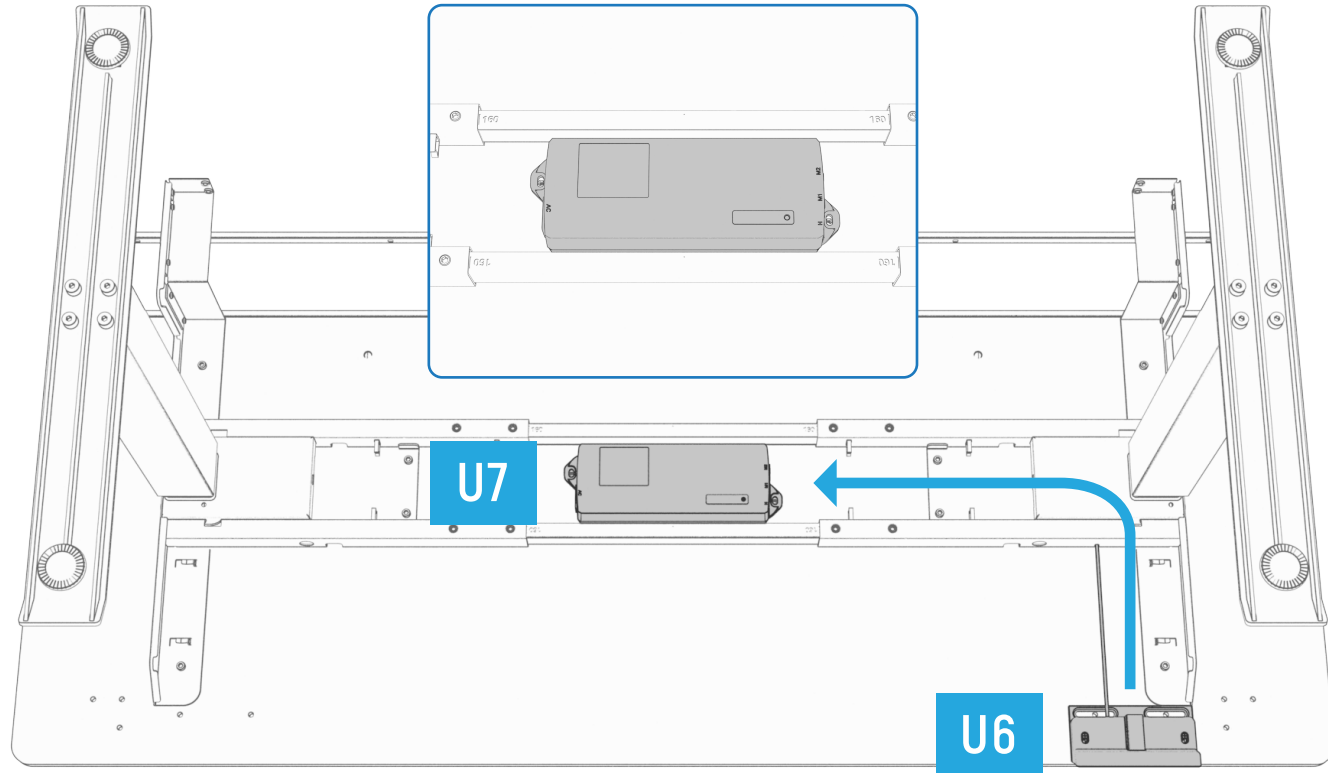

5.3 INSTALL THE CONTROL BOX



  
2

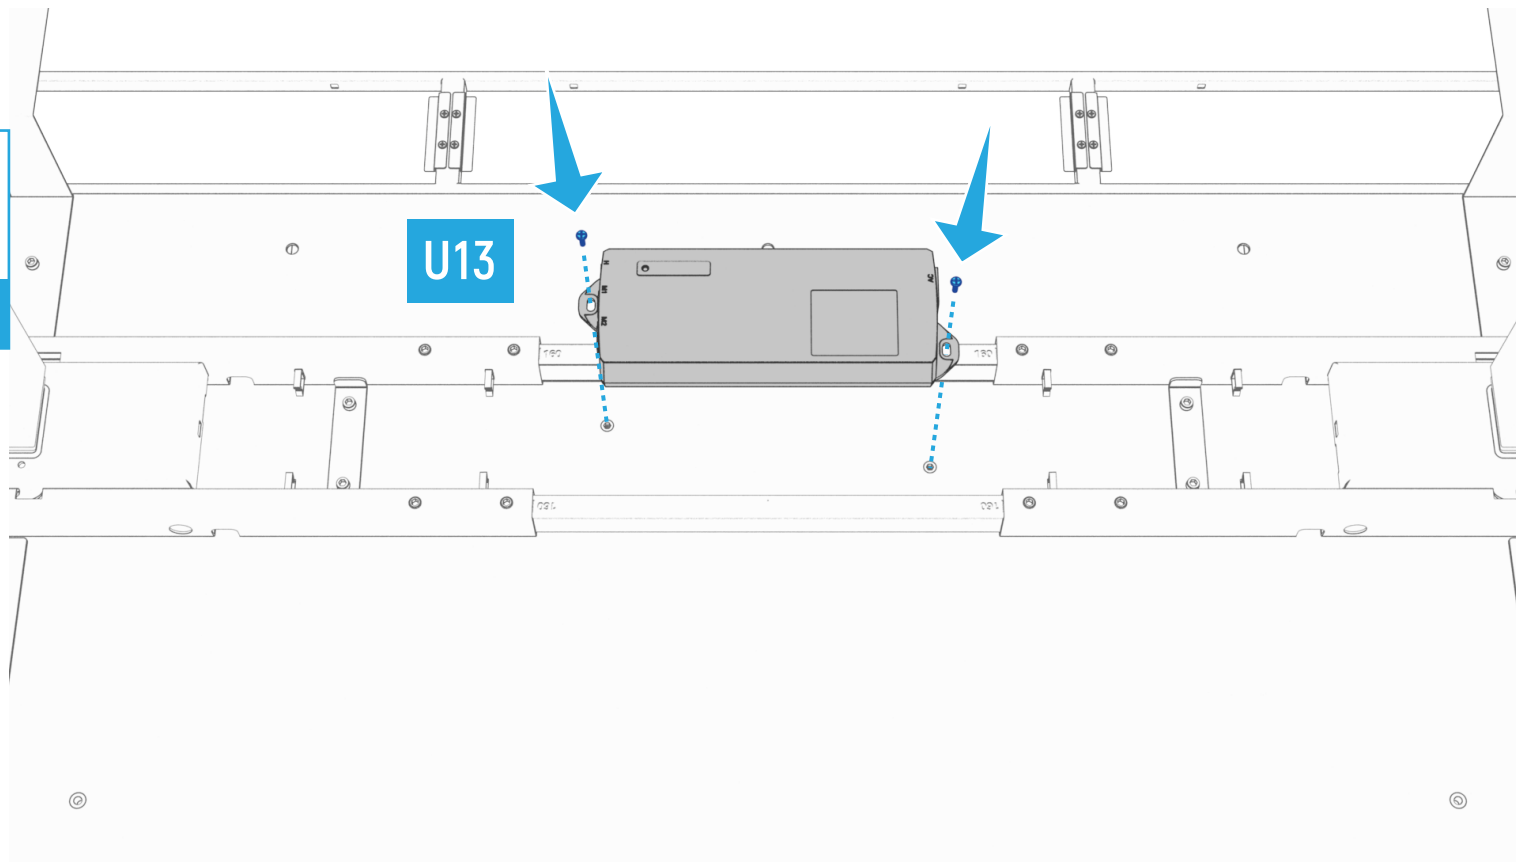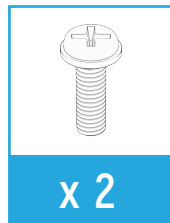

5.3 INSTALL THE CONTROL BOX



 
3

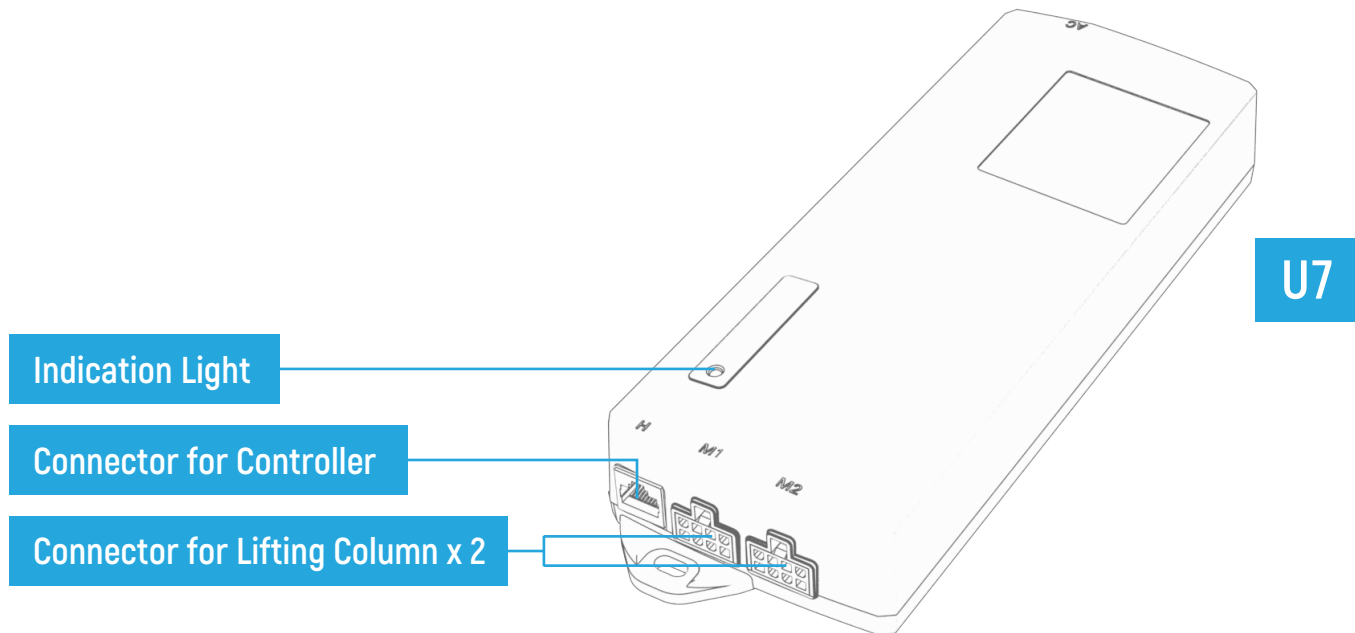

5.3 INSTALL THE CONTROL BOX



 3

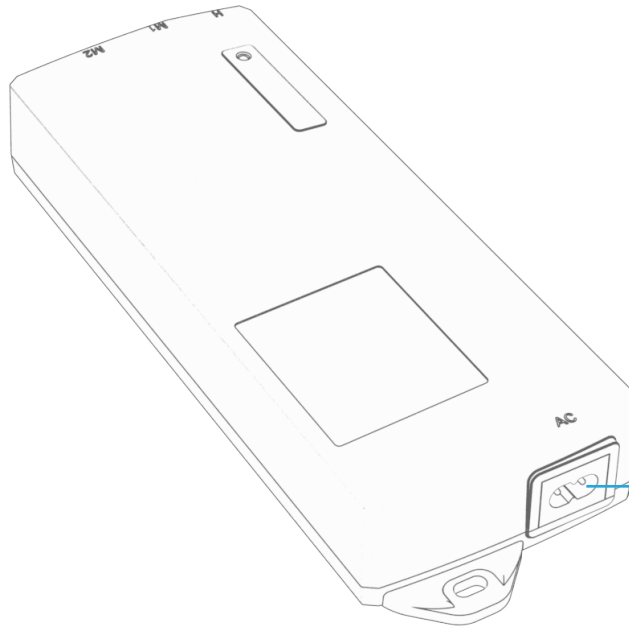


Connector for Power Cord

5.3 INSTALL THE CONTROL BOX



 
4

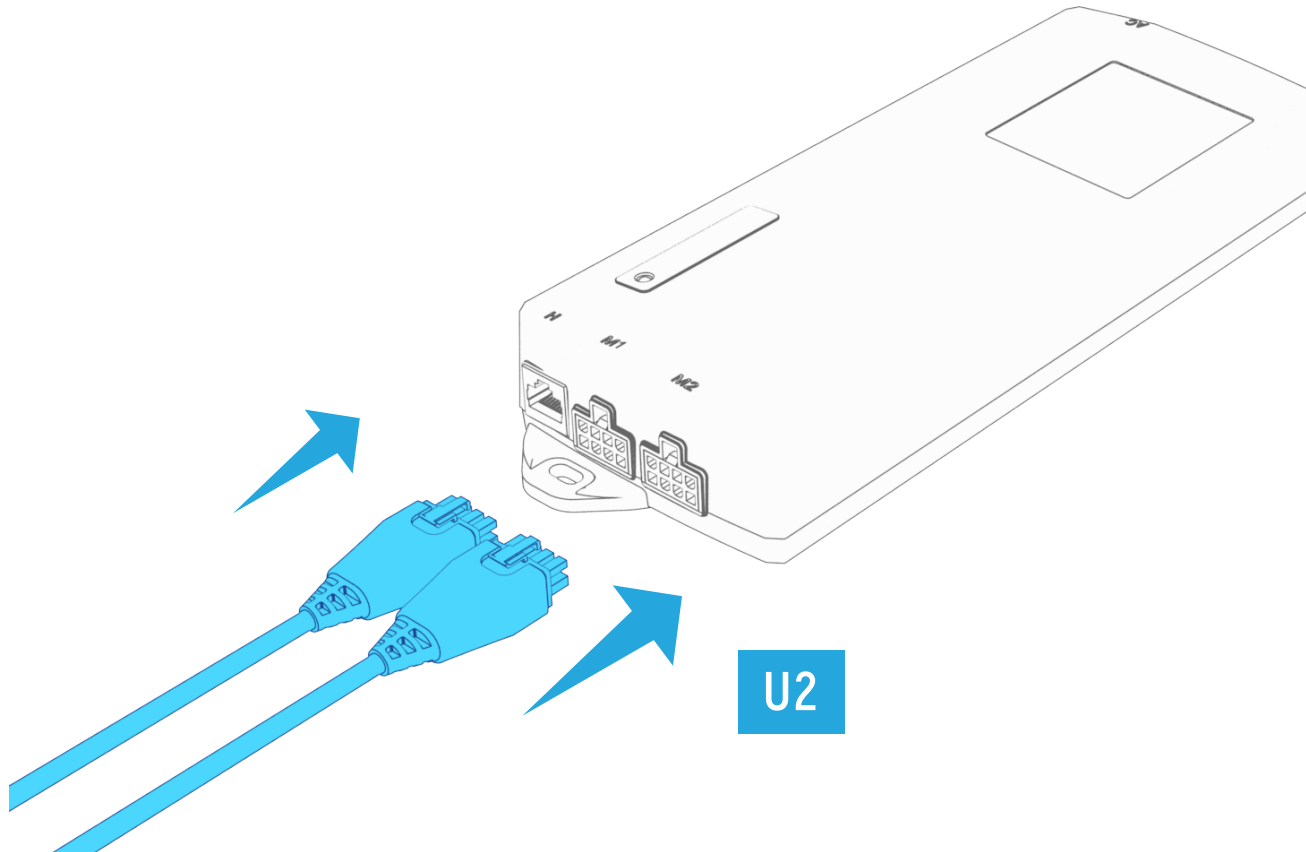

5.3 INSTALL THE CONTROL BOX



 
5

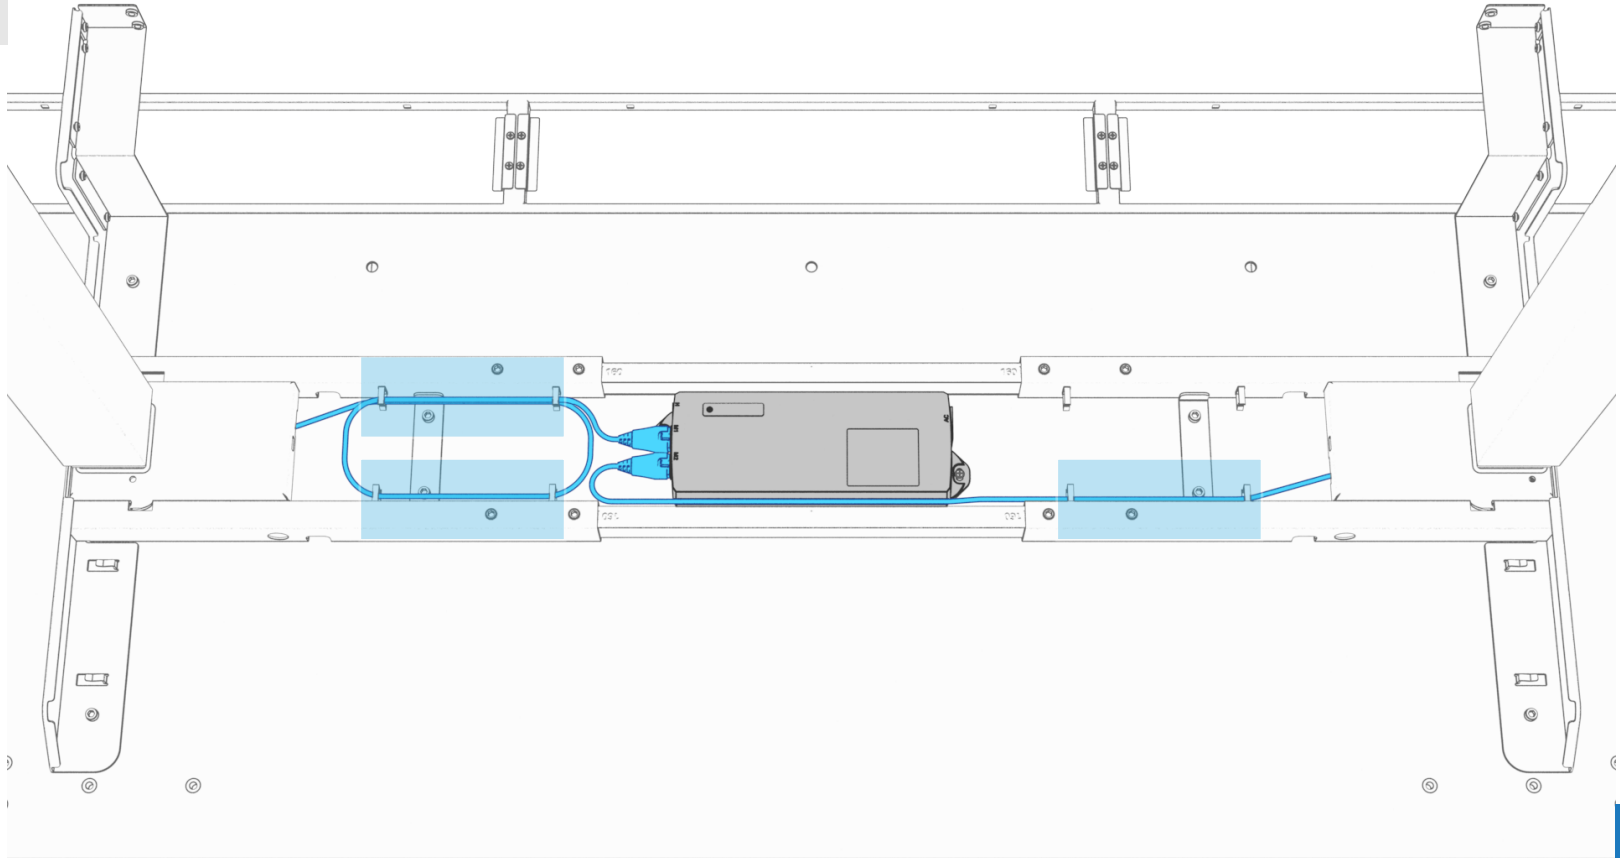

5.3 INSTALL THE CONTROL BOX



 6

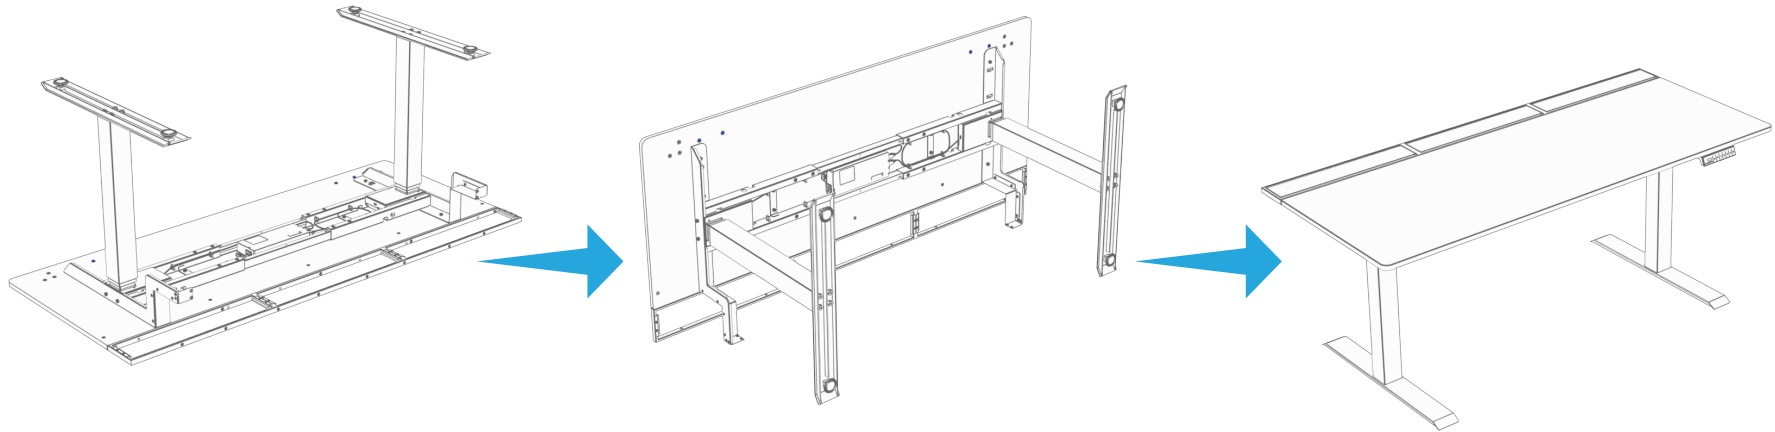




5.4 INSTALL THE CONTROLLER

5.4 INSTALL THE CONTROLLER




 
1

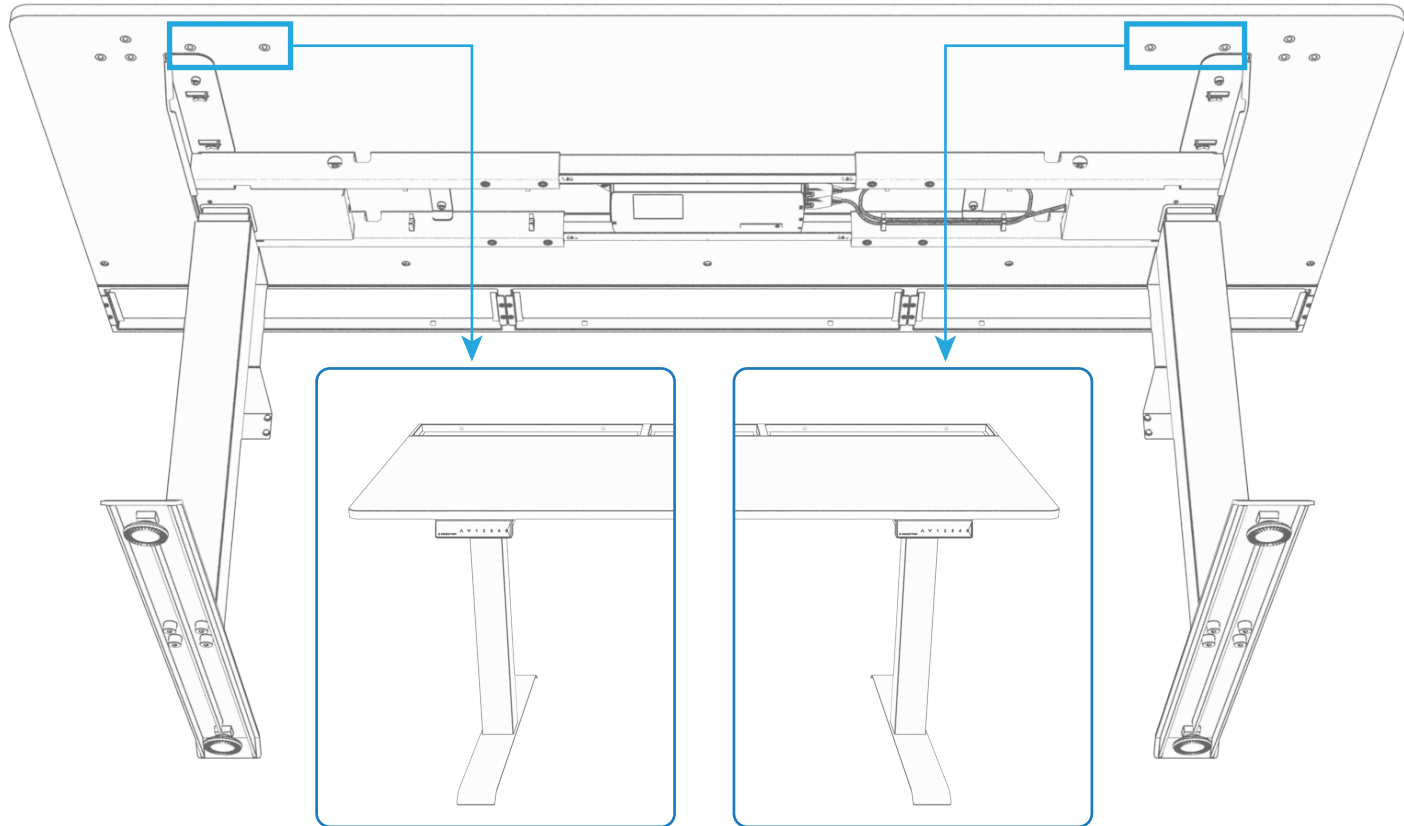

5.4 INSTALL THE CONTROLLER



 
 
2

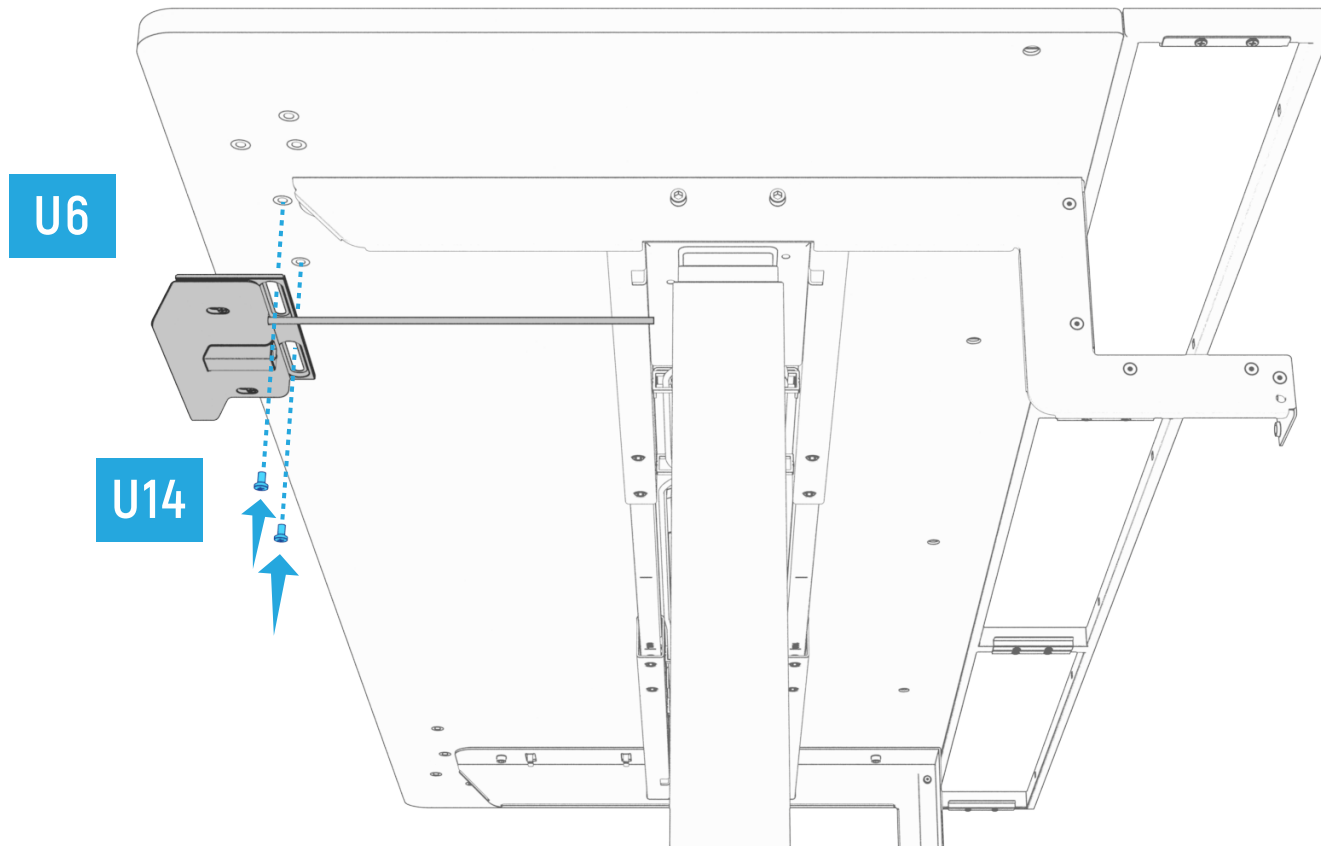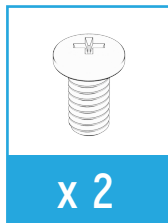

5.4 INSTALL THE CONTROLLER



  
3

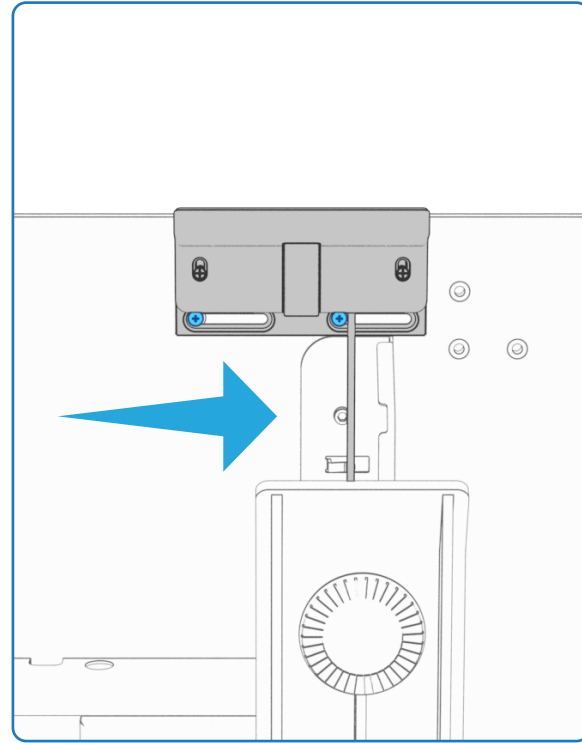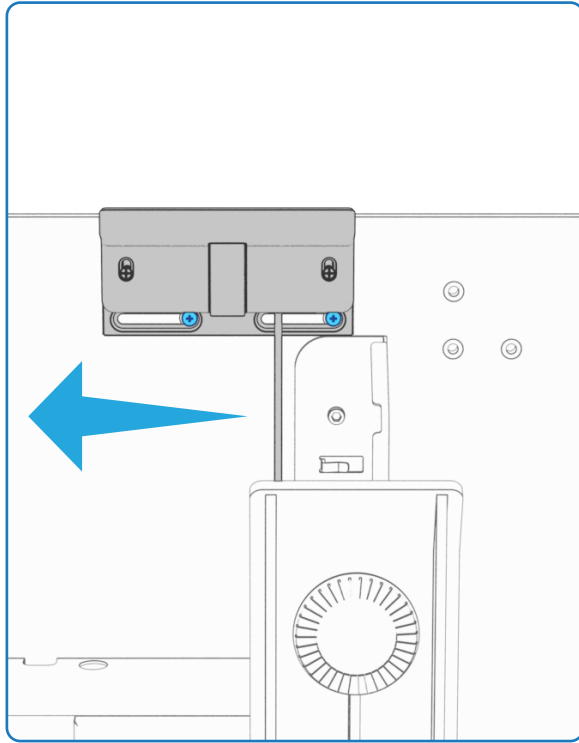

5.4 INSTALL THE CONTROLLER



 
4

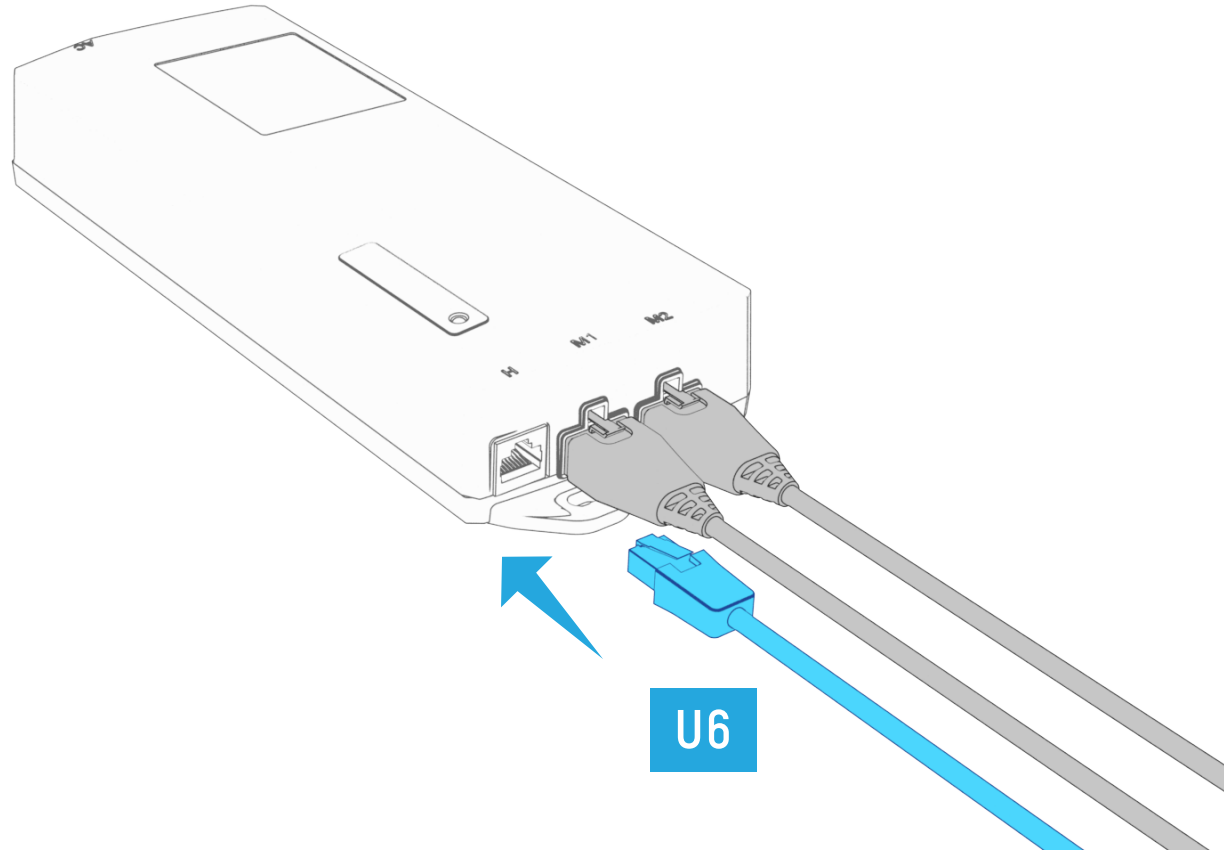


5.4 INSTALL THE CONTROLLER



 5

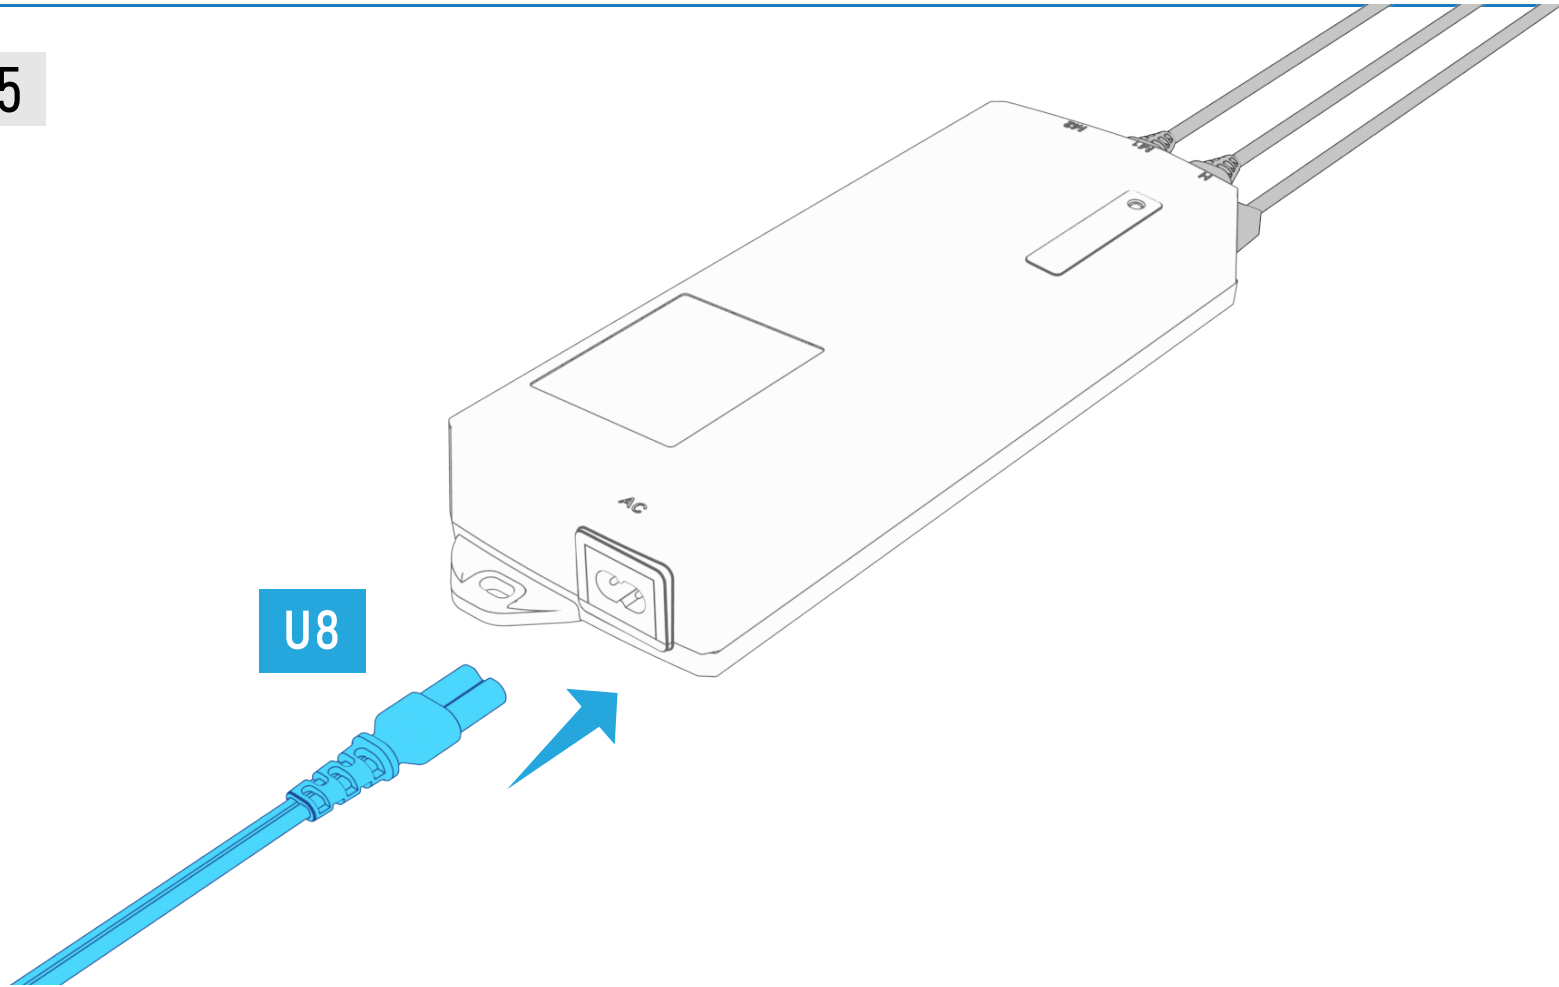


6

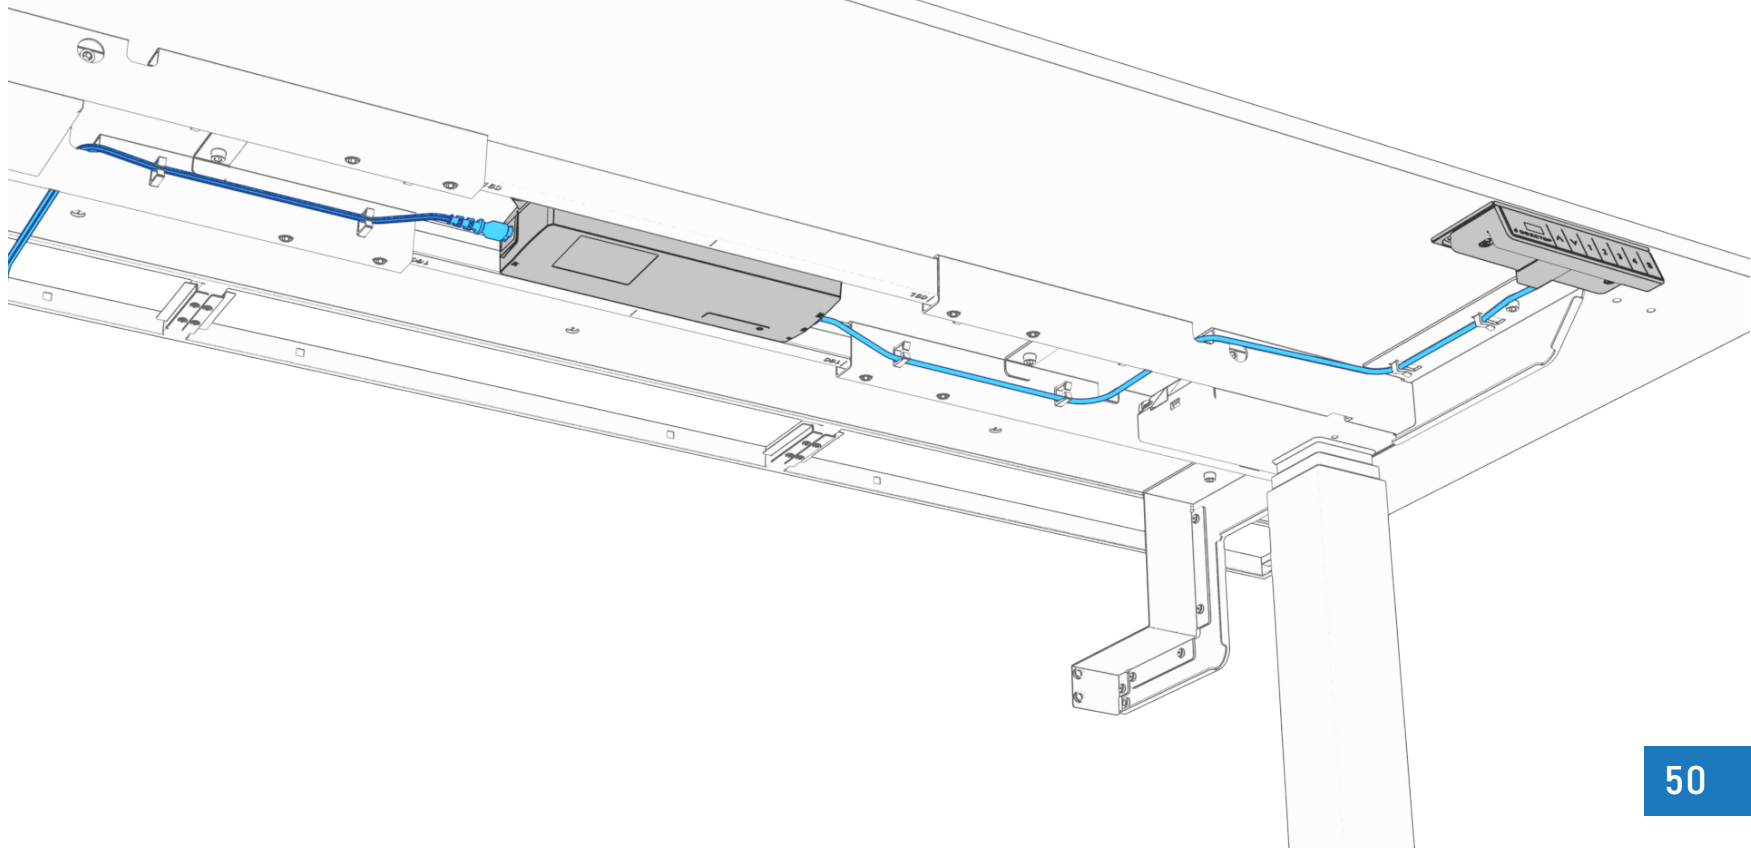 

5.4 INSTALL THE CONTROLLER



 7

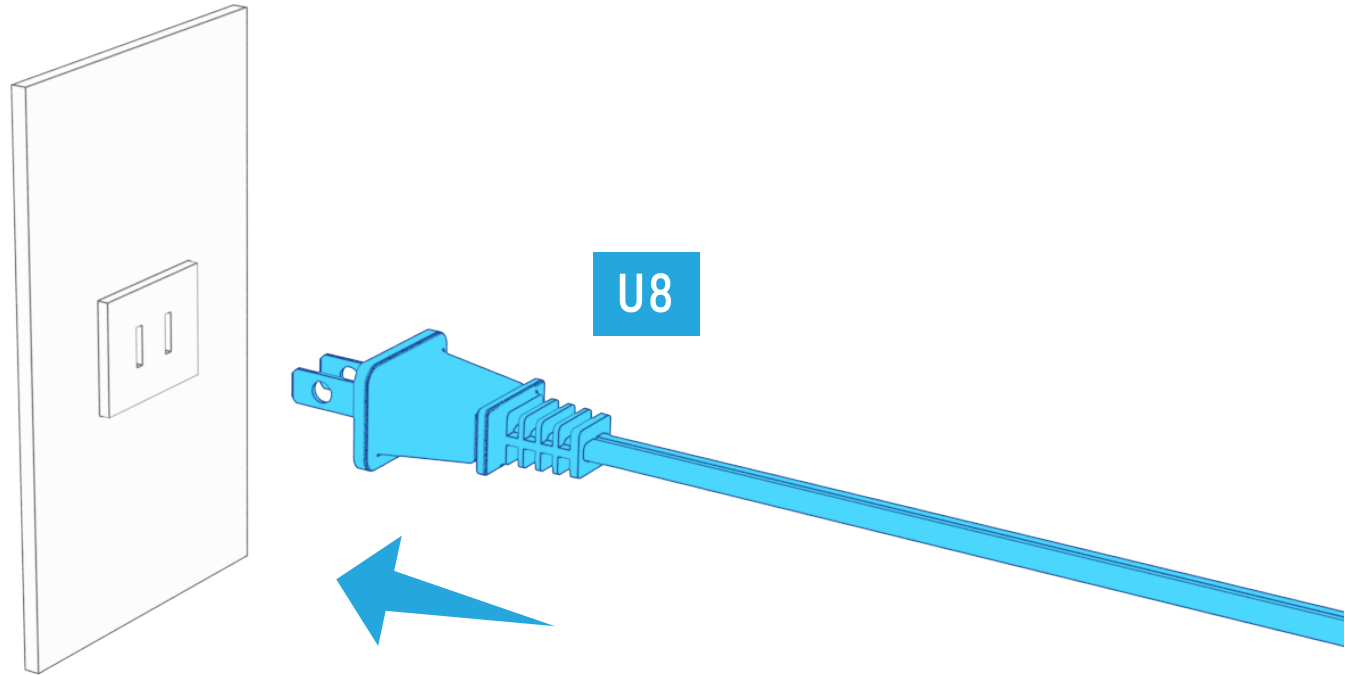


5.5 OPERATION OF THE CONTROLLER

5.5 OPERATION OF THE CONTROLLER



 1

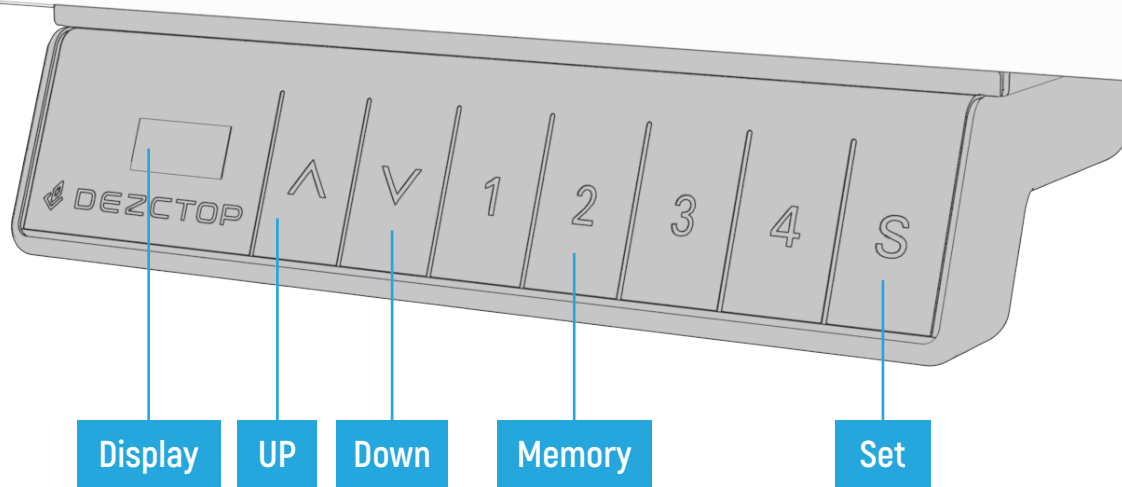

2

I. Enable For The First Time Use or Rest

- a. Press and hold the UP and DOWN buttons simultaneously.
- b. The tabletop will move down and the DISPLAY will start to flash "000".
- c. Release the UP and DOWN buttons as controller beeps once. And the DISPLAY will show the lowest height.

II. Set The Starting Height

- a. Lower the tabletop to the lowest height.
- b. Press the DOWN button for 5 seconds and then release. The DISPLAY will start flashing.
- c. Press the UP or DOWN button to adjust the tabletop position to the height you prefer. Please complete this procedure within 10 seconds.
- d. After 10 seconds, the DISPLAY will stop flashing and the new starting height will be stored.

 
 
III. Set The Memory Heights

- a. Press the UP or DOWN button to move the tabletop to the desired height.
- b. Press and hold the SET button for 2 seconds and the DISPLAY will start flashing for 5 seconds.
- c. There are 4 memory heights can be stored. Press button 1, 2, 3 or 4 to assign this memory position to the respective button, and the DISPLAY will show P1, P2, P3 or P4. This height is stored.

5.5 OPERATION OF THE CONTROLLER



3

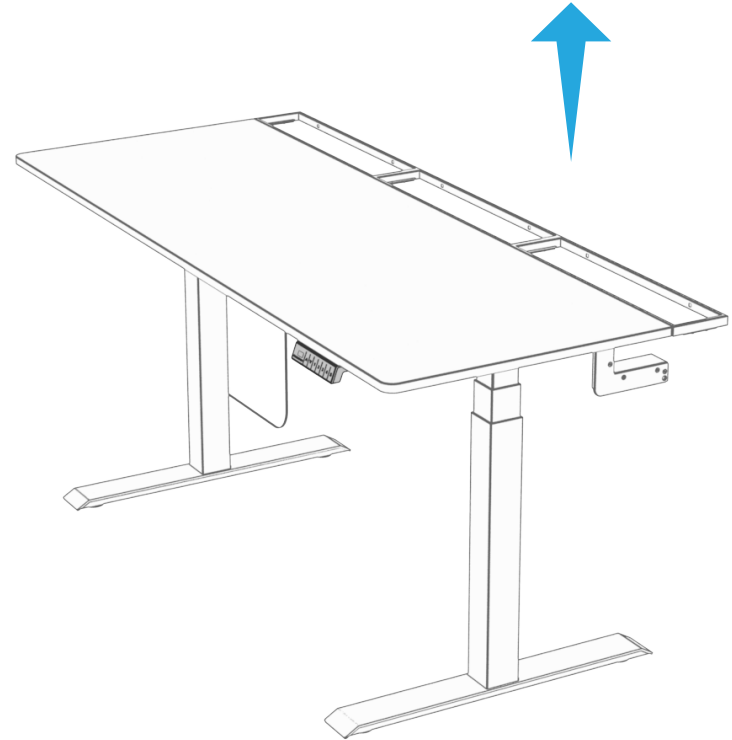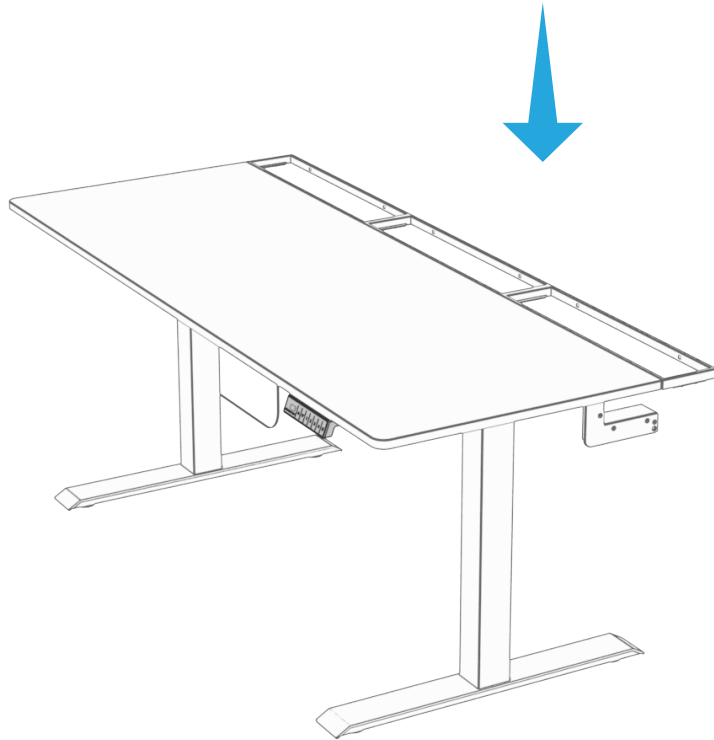

5.6 TROUBLESHOOTING

5.6 TROUBLESHOOTING




Error Code	Buzzer Alert	Cause	Solution
E00	None	Incomplete Reset	Please follow the procedure of RESET in operation of controller.
E01	3 Beeps	Frequent Operation in a short time	Please wait for 5 minutes and then continue to operate the controller.
E02	2 Beeps	Unbalance of Tabletop	1. Place the things on the tabletop evenly and run RESET. 2. If you can't complete the RESET or still have beeps after RESET, please contact customer service.
E03	The Tabletop Rebounds 30mm	Anti-Collision Protection	Please remove the obstacle above or under the tabletop.
E04	The Tabletop Rebounds 40mm	Anti-Collision Detected (T-Touch)	Please remove the obstacle above or under the tabletop.
E11	5 Beeps	Overcurrent Protection of the Lifting Column	1. Please remove the overweight things above the tabletop.
E12			2. If you are still unable to operate the desk, please run RESET. 3. If you can't complete the RESET or still have beeps after RESET, please contact customer service.
E21	Long Beep	No Signal Response from M1 Connector of Control Box	1. Please run RESET.
E22		No Signal Response from M2 Connector of Control Box	2. If you can't complete the RESET or still have beeps after RESET, please contact customer service.
E31	4 Beeps	Not Detect Current of from M1 Connector of Control Box	1. Make sure all power-connection cables of lifting columns have connected to the control box well.
E32		Not Detect Current of from M2 Connector of Control Box	2. Please run RESET. 3. If you can't complete the RESET or still have beeps after RESET, please contact customer service.

5.7 ASSEMBLE THE SUPPORT PANEL

5.7 ASSEMBLE THE SUPPORT PANEL



 1

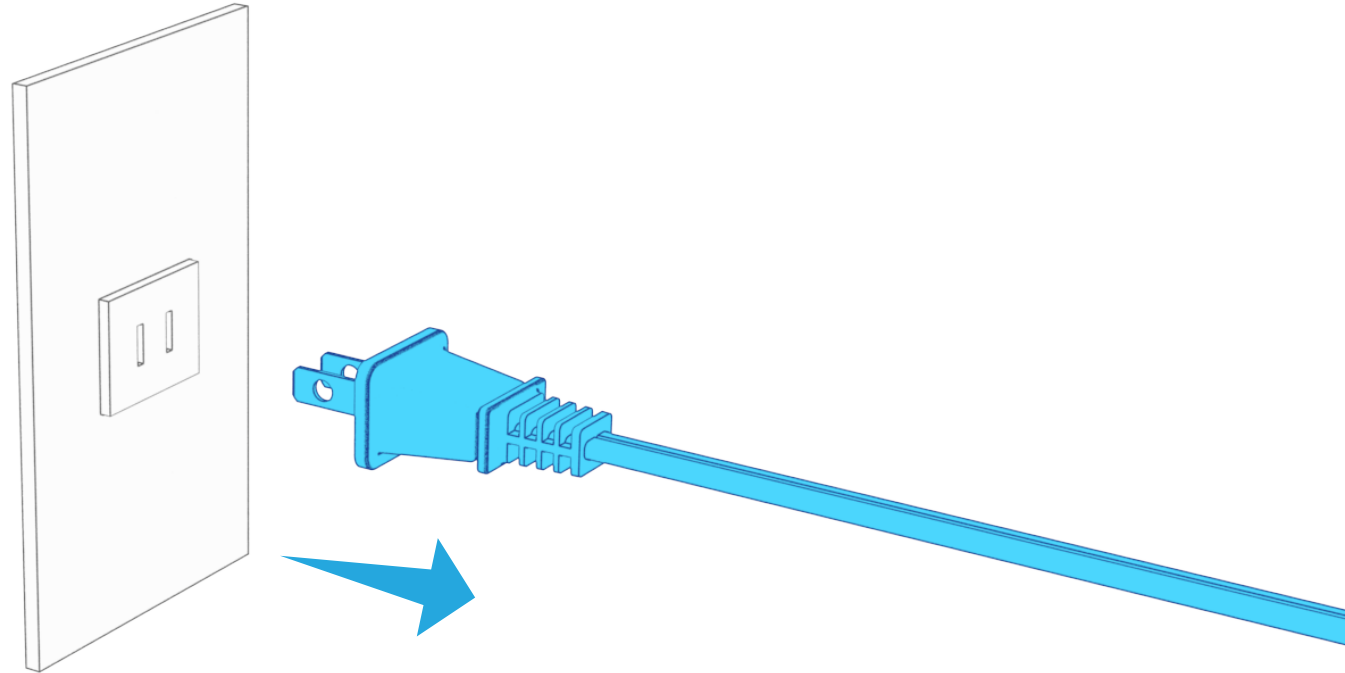


5.7 ASSEMBLE THE SUPPORT PANEL



2

 
T2

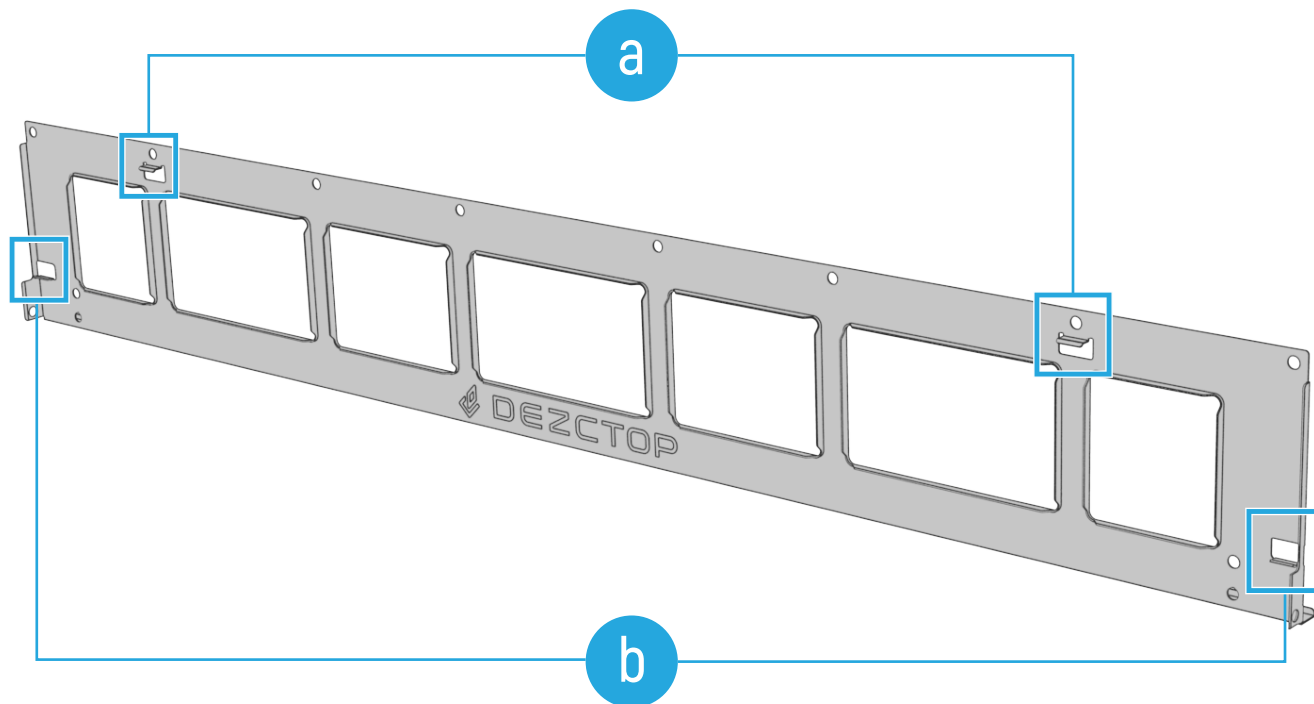

5.7 ASSEMBLE THE SUPPORT PANEL



 
3

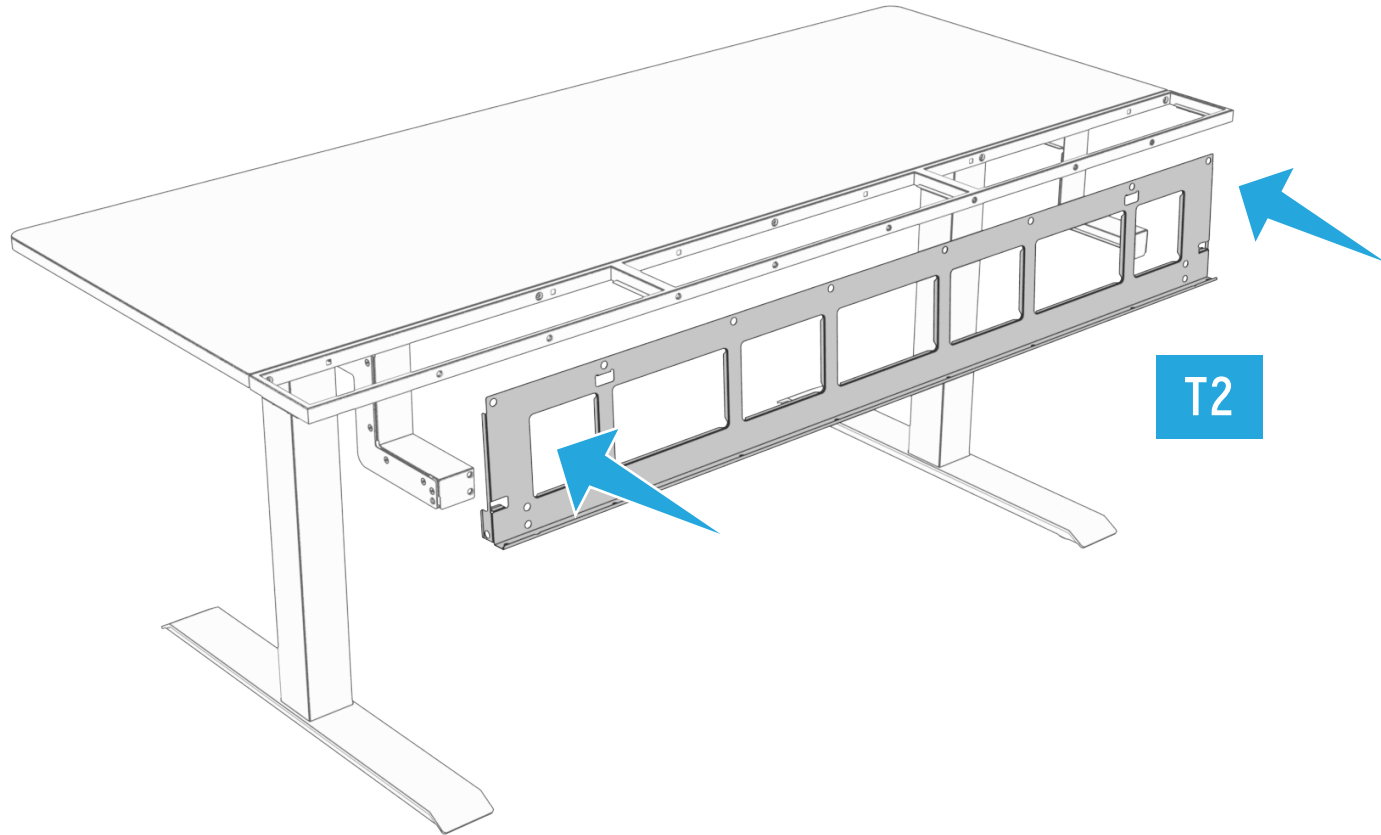

5.7 ASSEMBLE THE SUPPORT PANEL




 
3

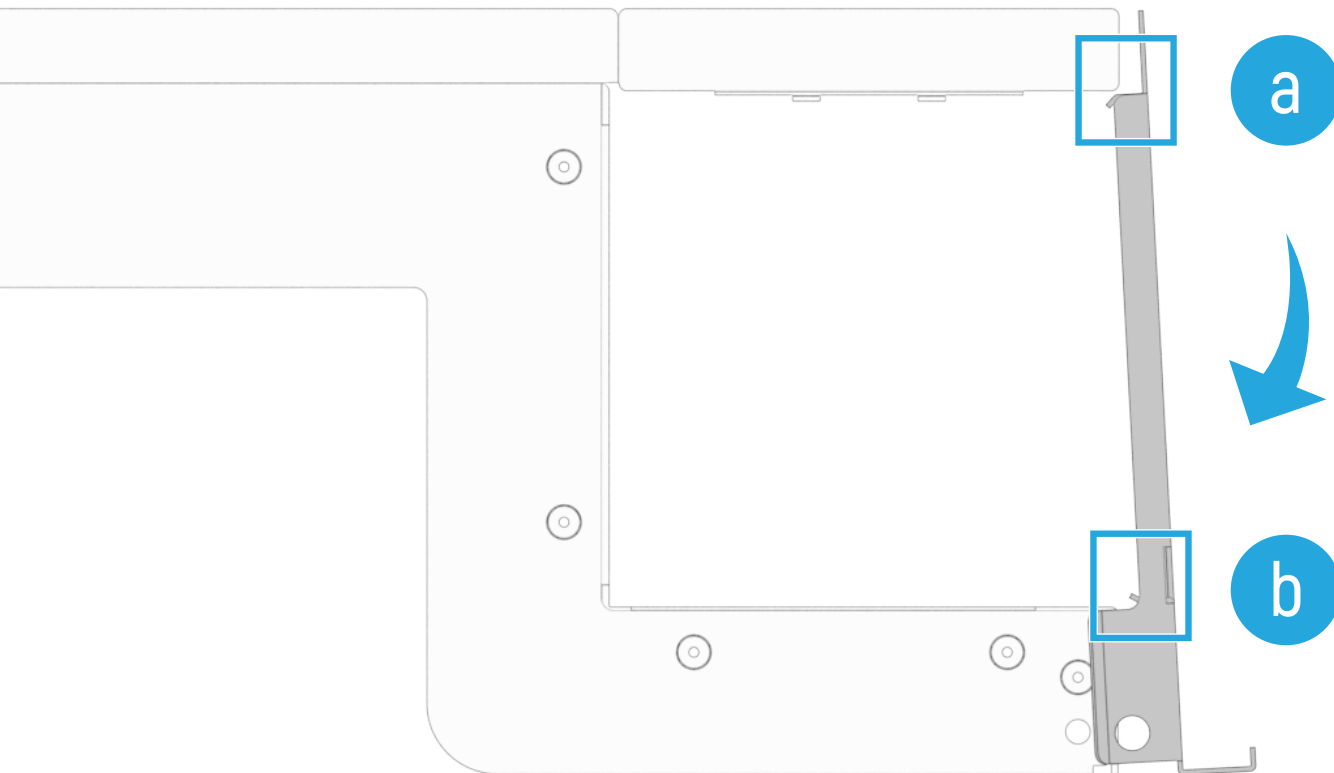

5.7 ASSEMBLE THE SUPPORT PANEL



 
 
4

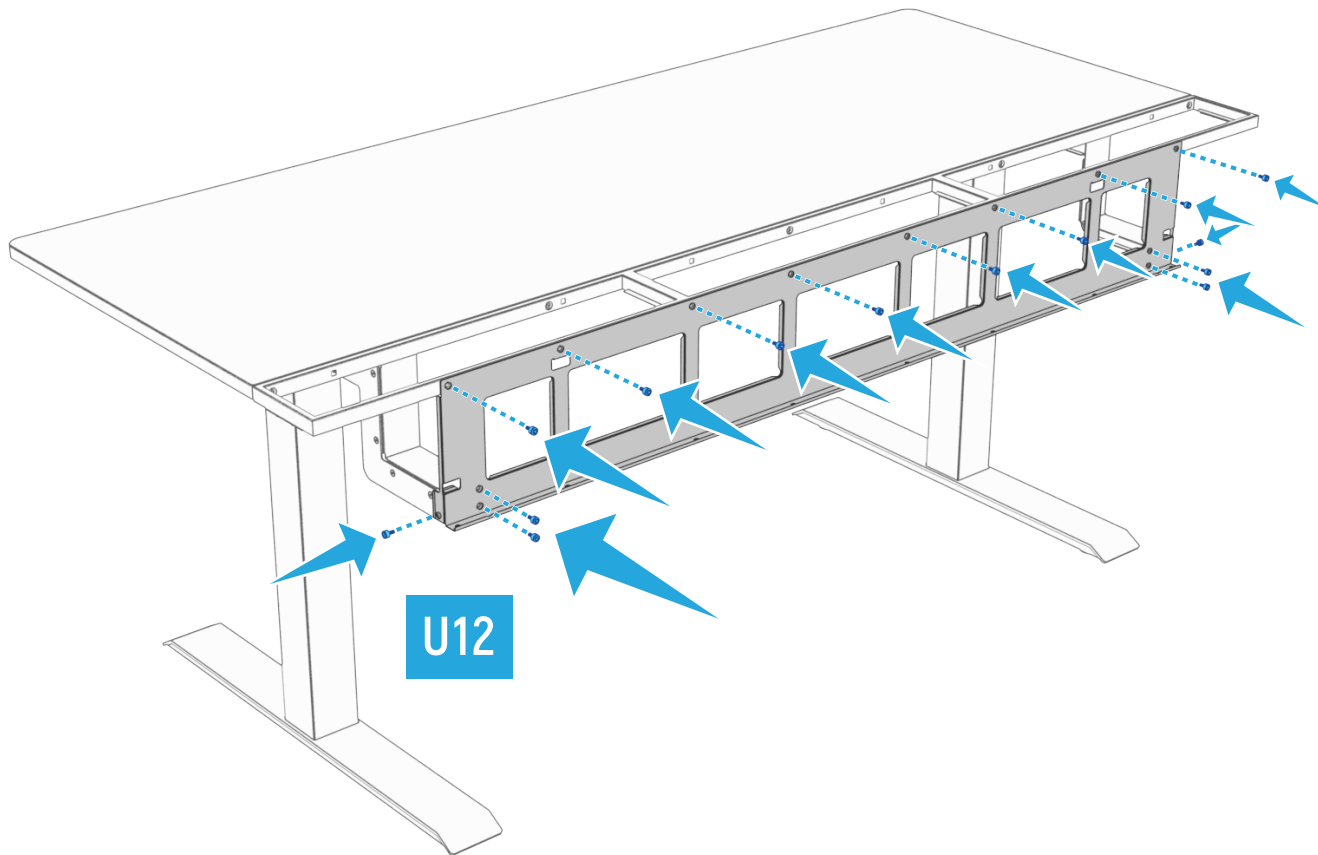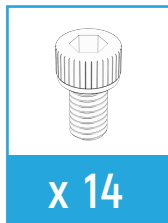

5.7 ASSEMBLE THE SUPPORT PANEL



  4

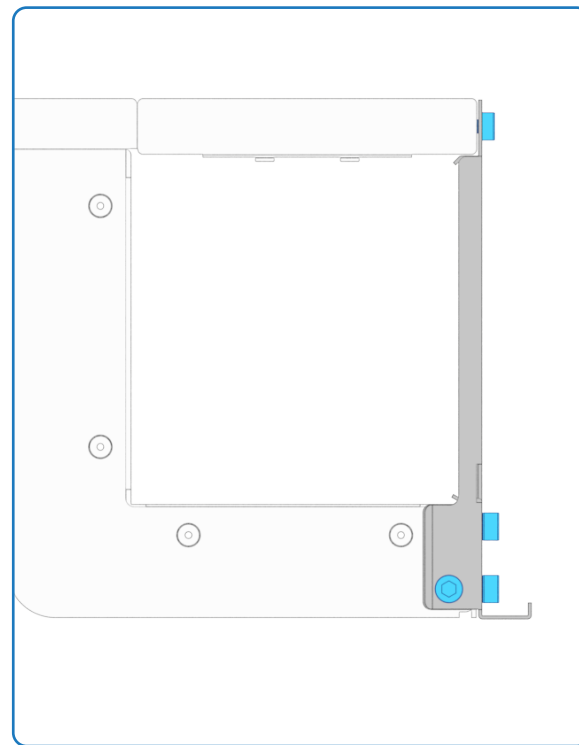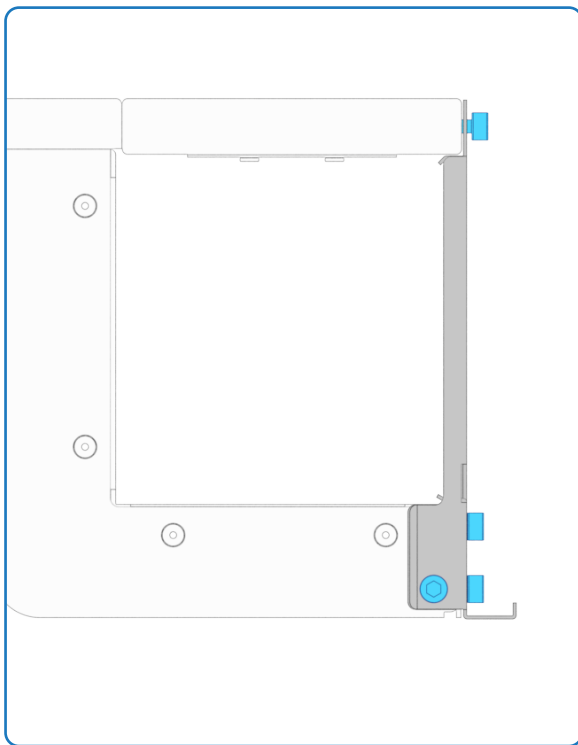




5.8 ASSEMBLE THE CABLE POCKETS

5.8 ASSEMBLE THE CABLE POCKETS



 
1

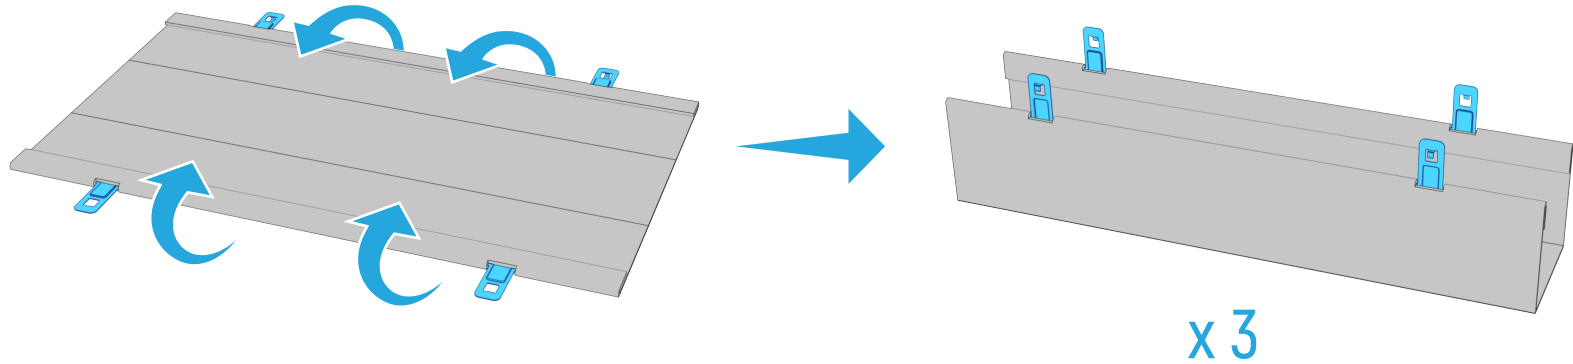

5.8 ASSEMBLE THE CABLE POCKETS



 
2

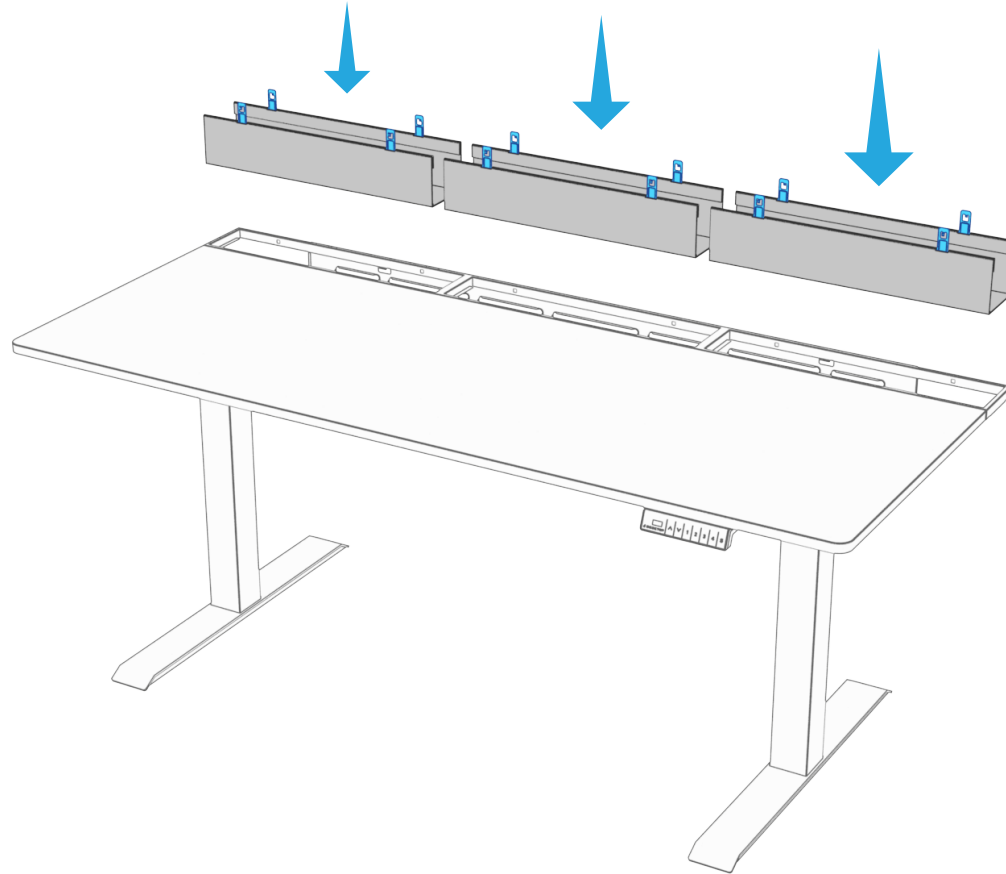

5.8 ASSEMBLE THE CABLE POCKETS



 3

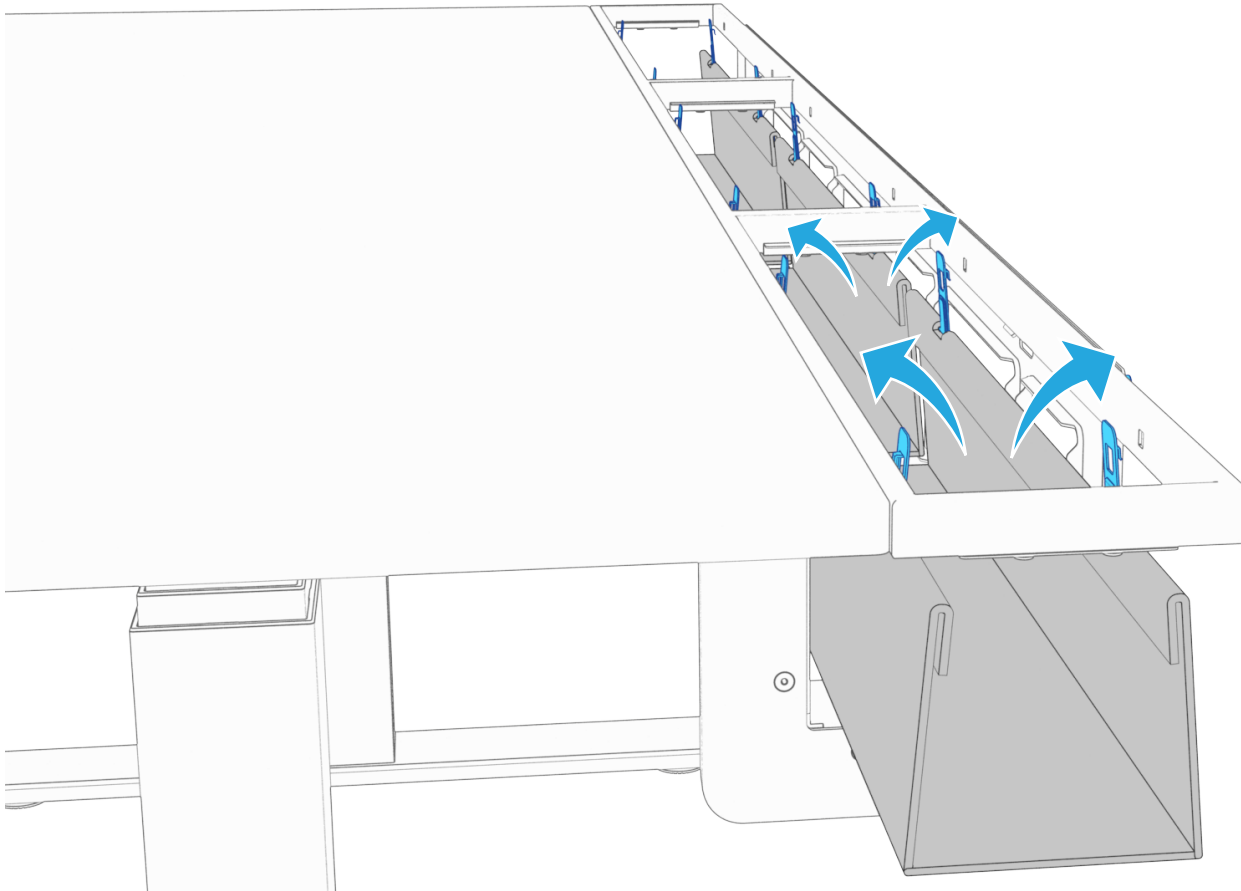




5.9 ASSEMBLE THE MAGNETIC COVERS

5.9 ASSEMBLE THE MAGNETIC COVERS



 
1

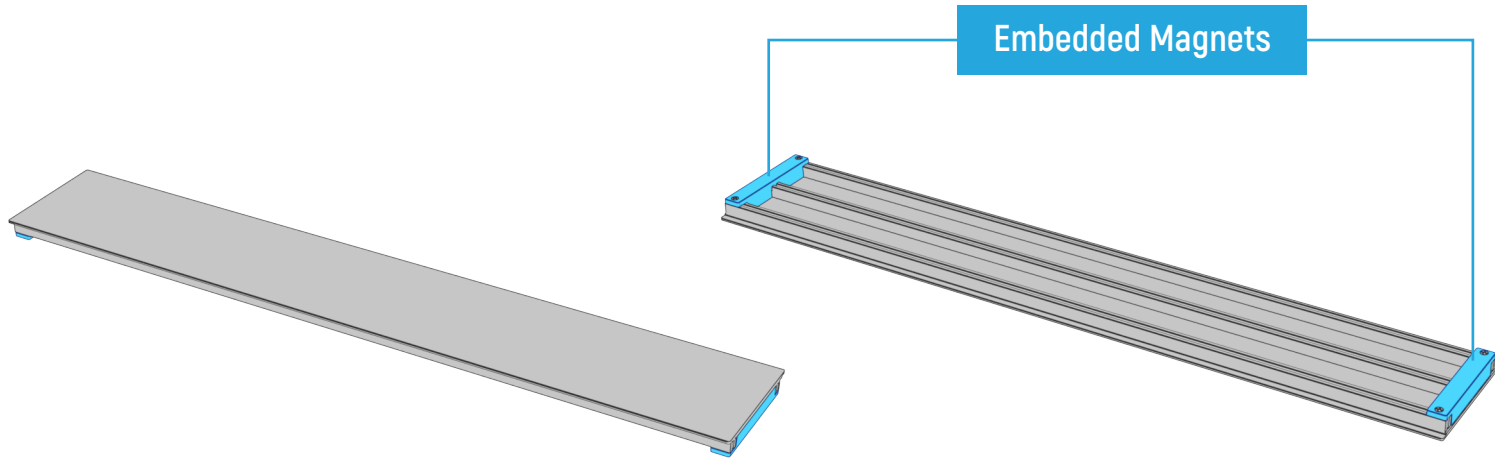

5.9 ASSEMBLE THE MAGNETIC COVERS



 
2

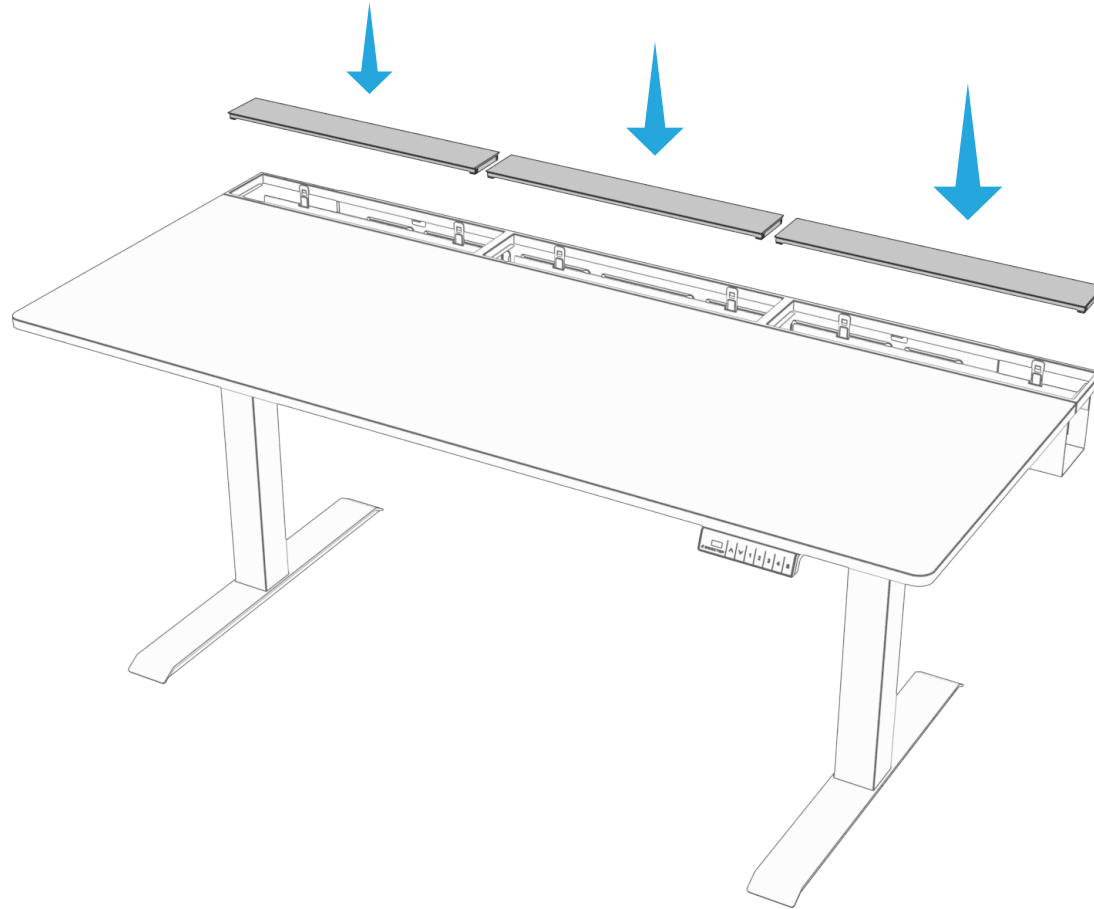

5.9 ASSEMBLE THE MAGNETIC COVERS




 
3

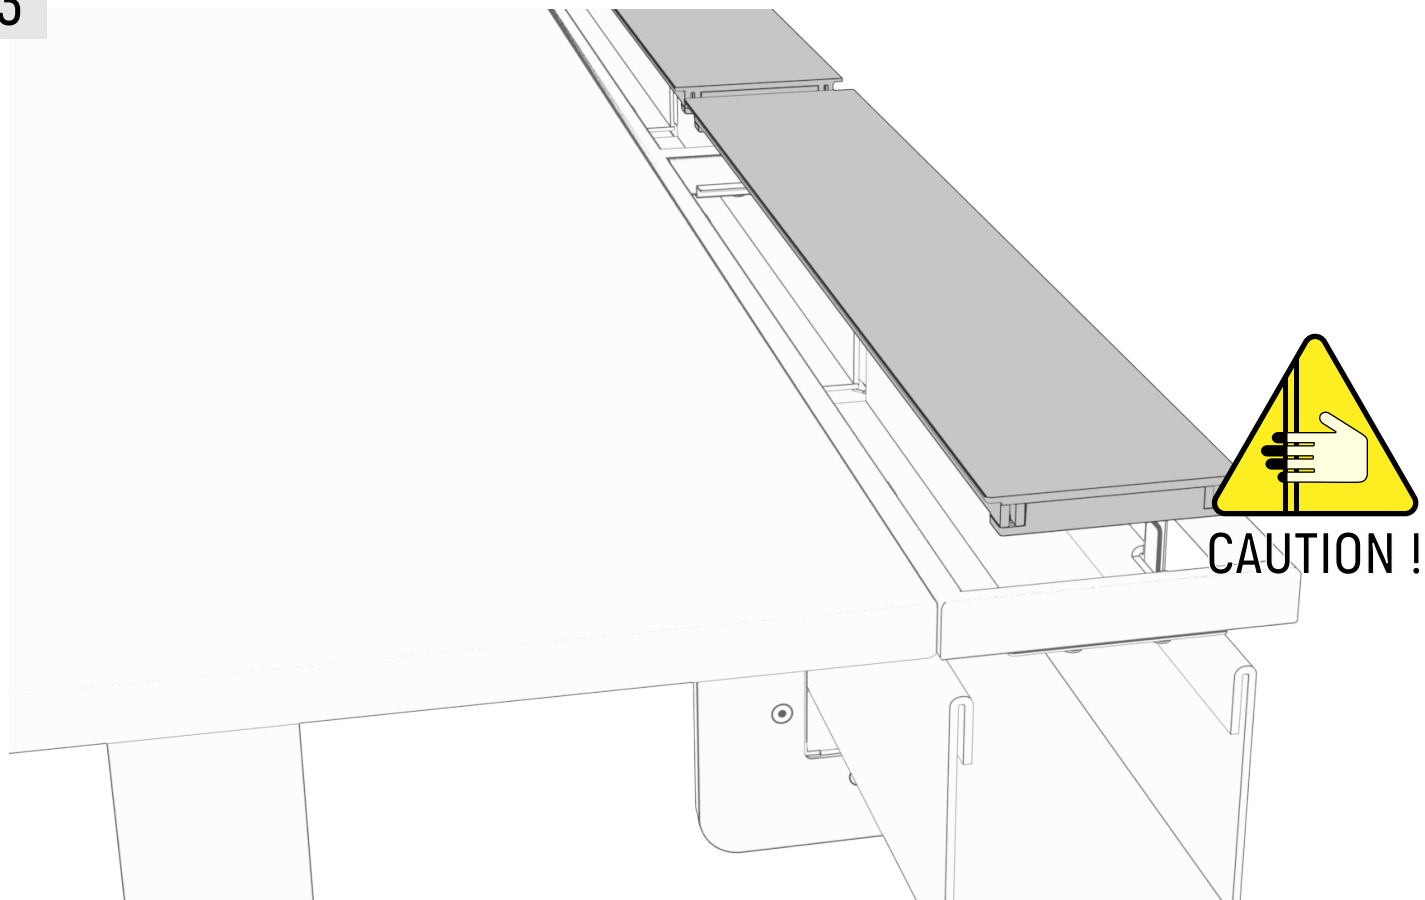

5.9 ASSEMBLE THE MAGNETIC COVERS



  3

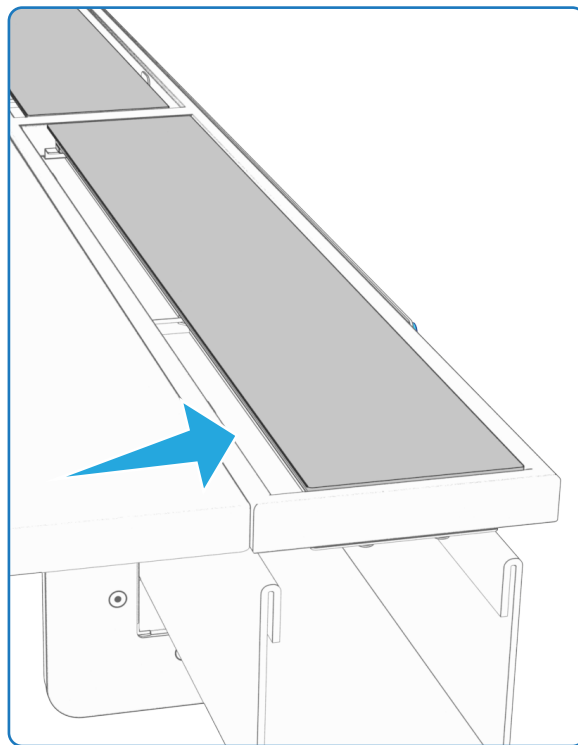
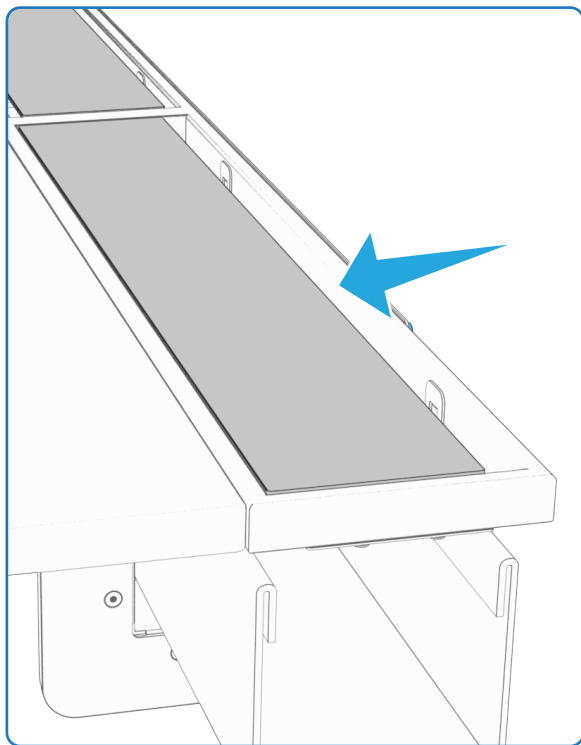


5.10 ASSEMBLE THE D-BOARD

5.10 ASSEMBLE THE D-BOARD



  1

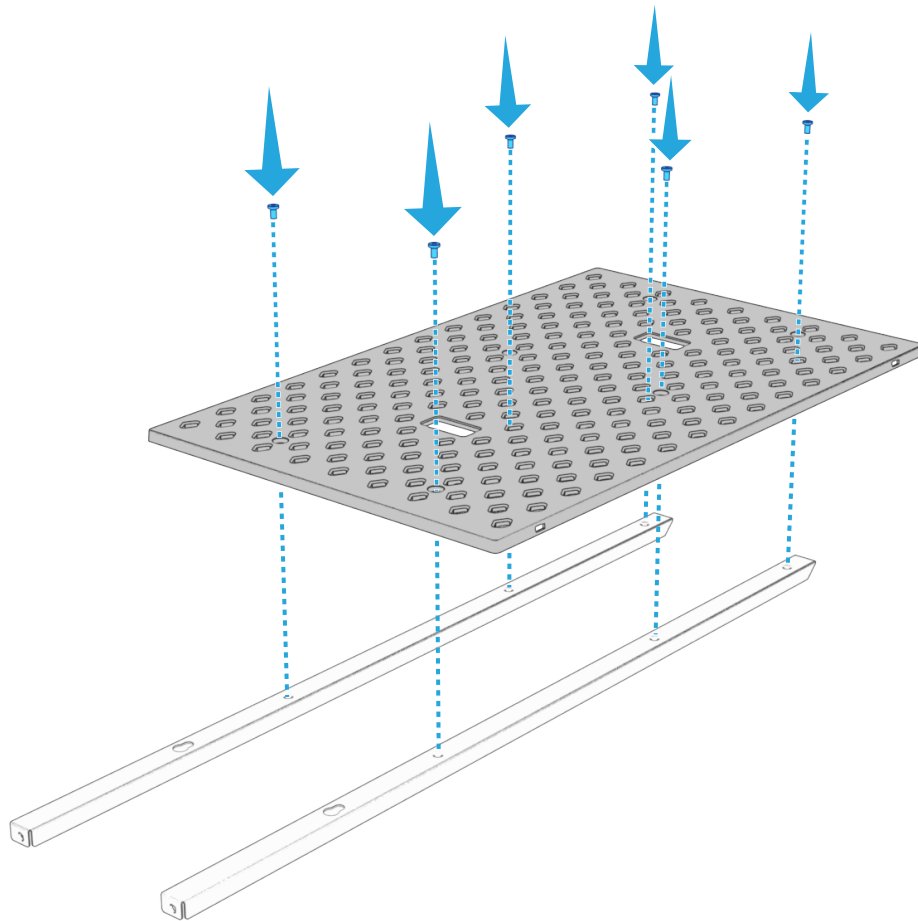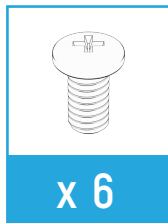

D5

 
 
D1

D2

5.10 ASSEMBLE THE D-BOARD




2

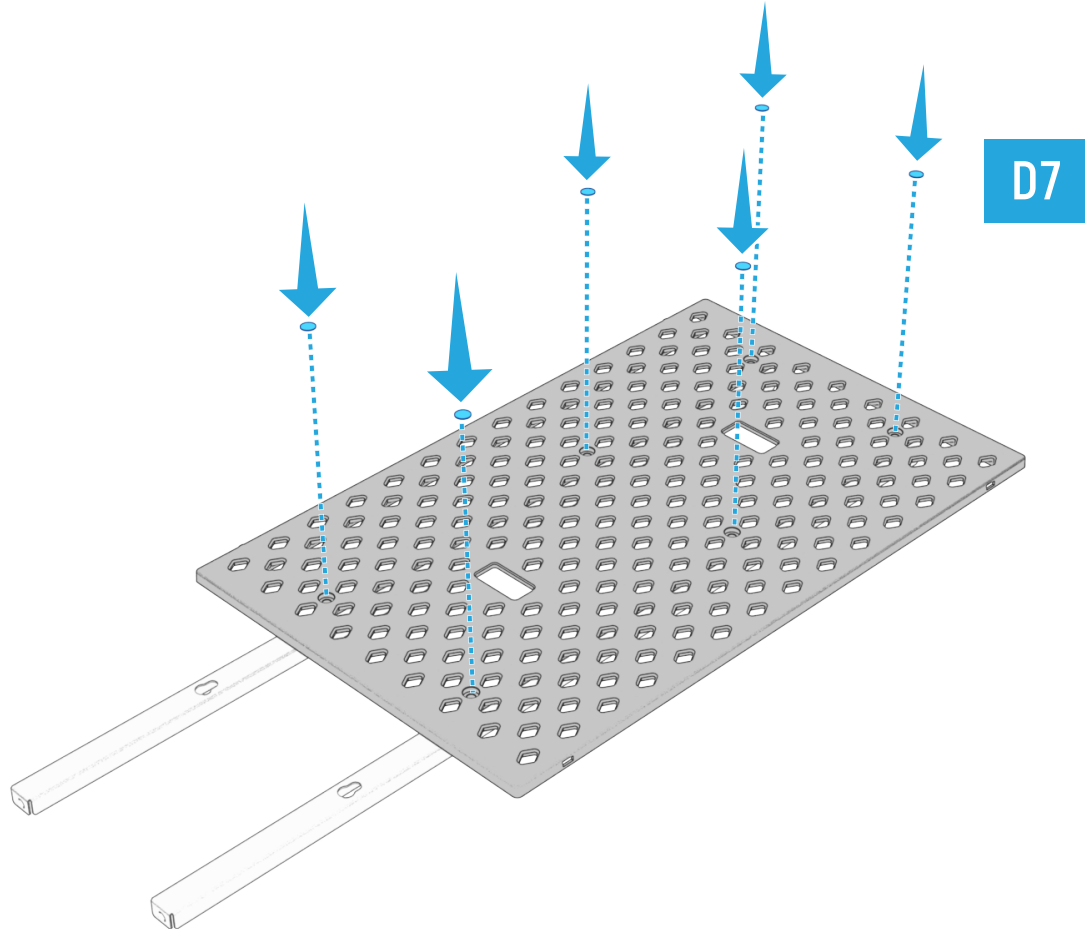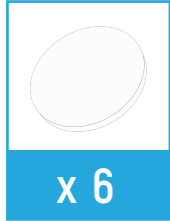

5.10 ASSEMBLE THE D-BOARD



 
3

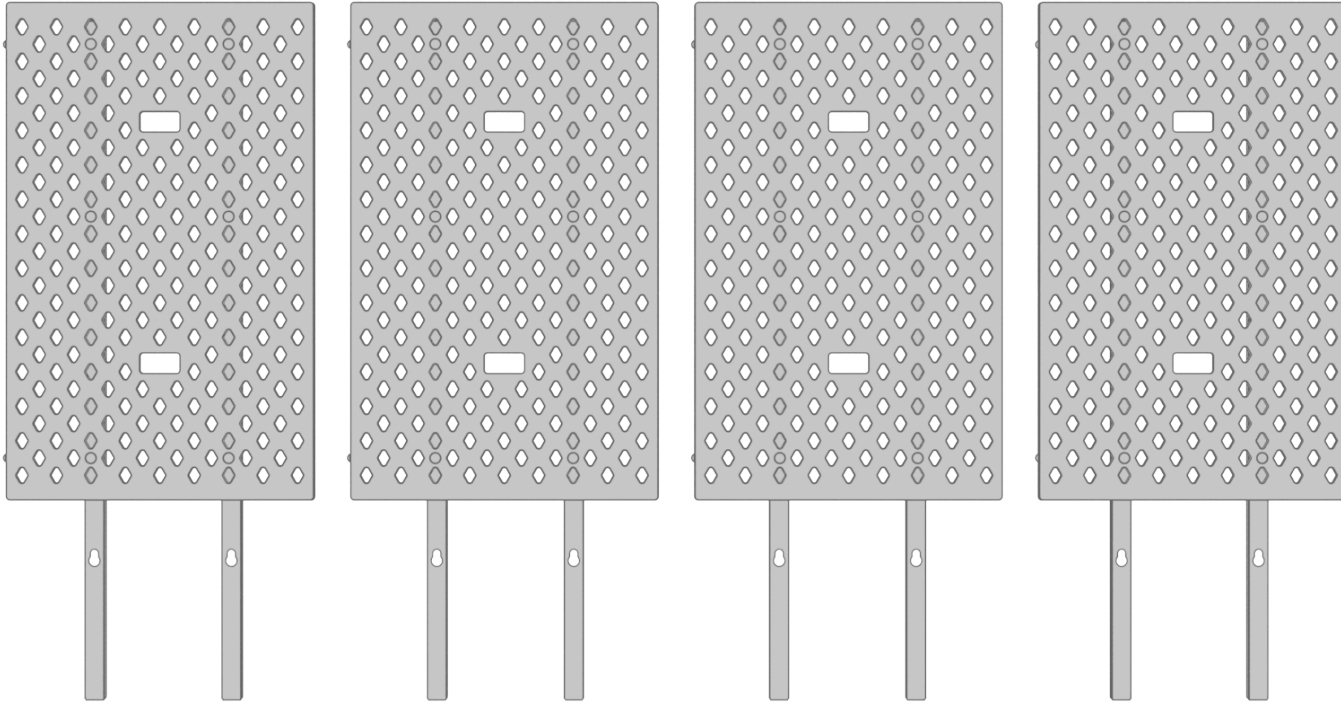

5.10 ASSEMBLE THE D-BOARD



 
4

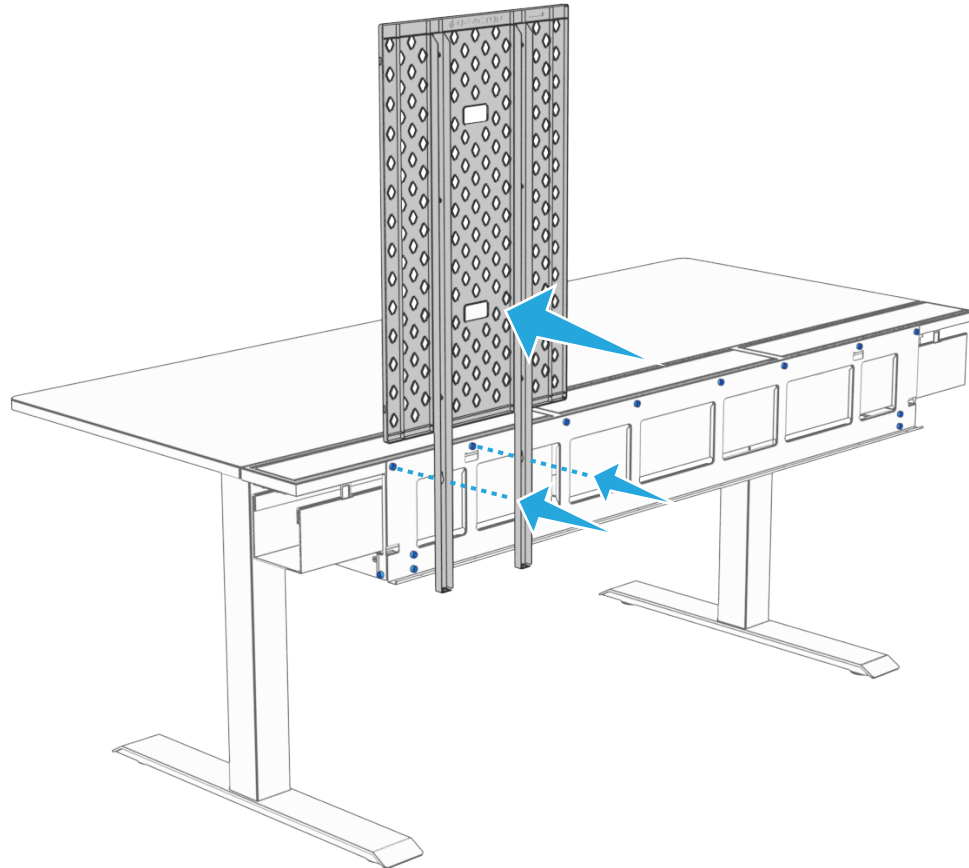

5.10 ASSEMBLE THE D-BOARD




 
4

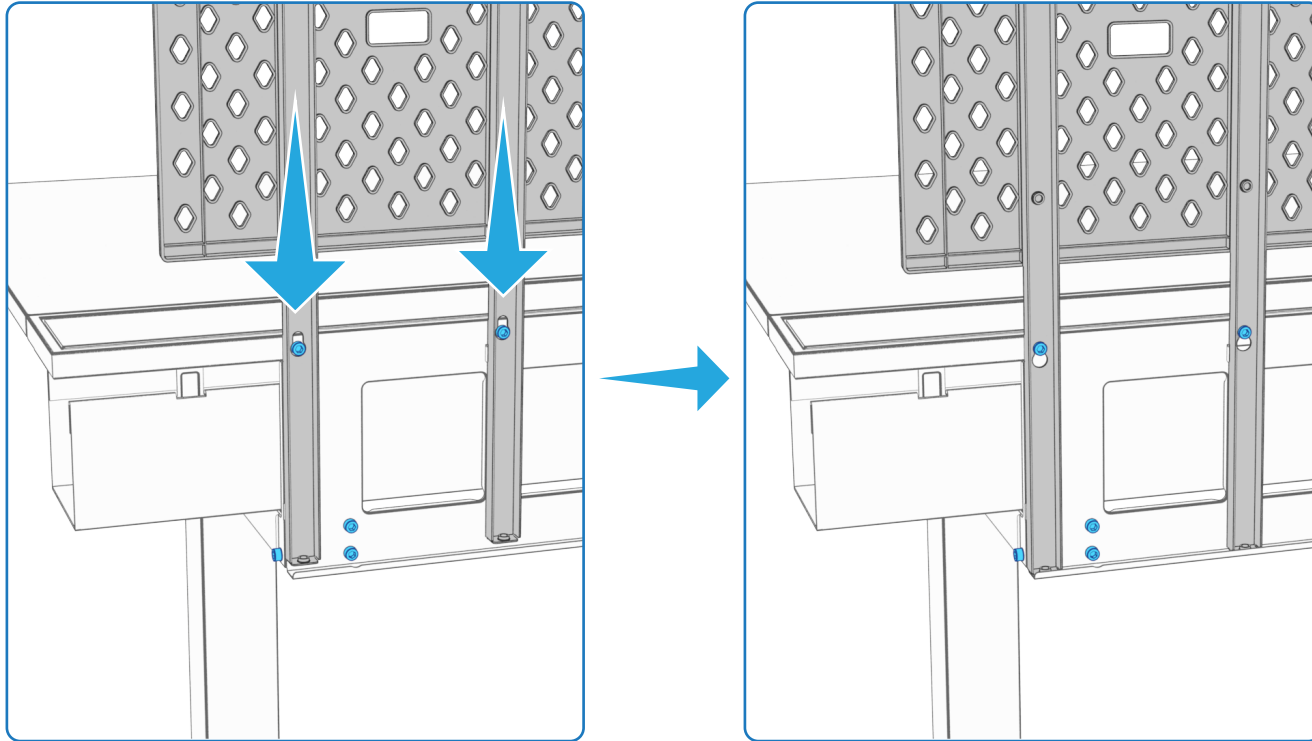

5.10 ASSEMBLE THE D-BOARD



 
 
5

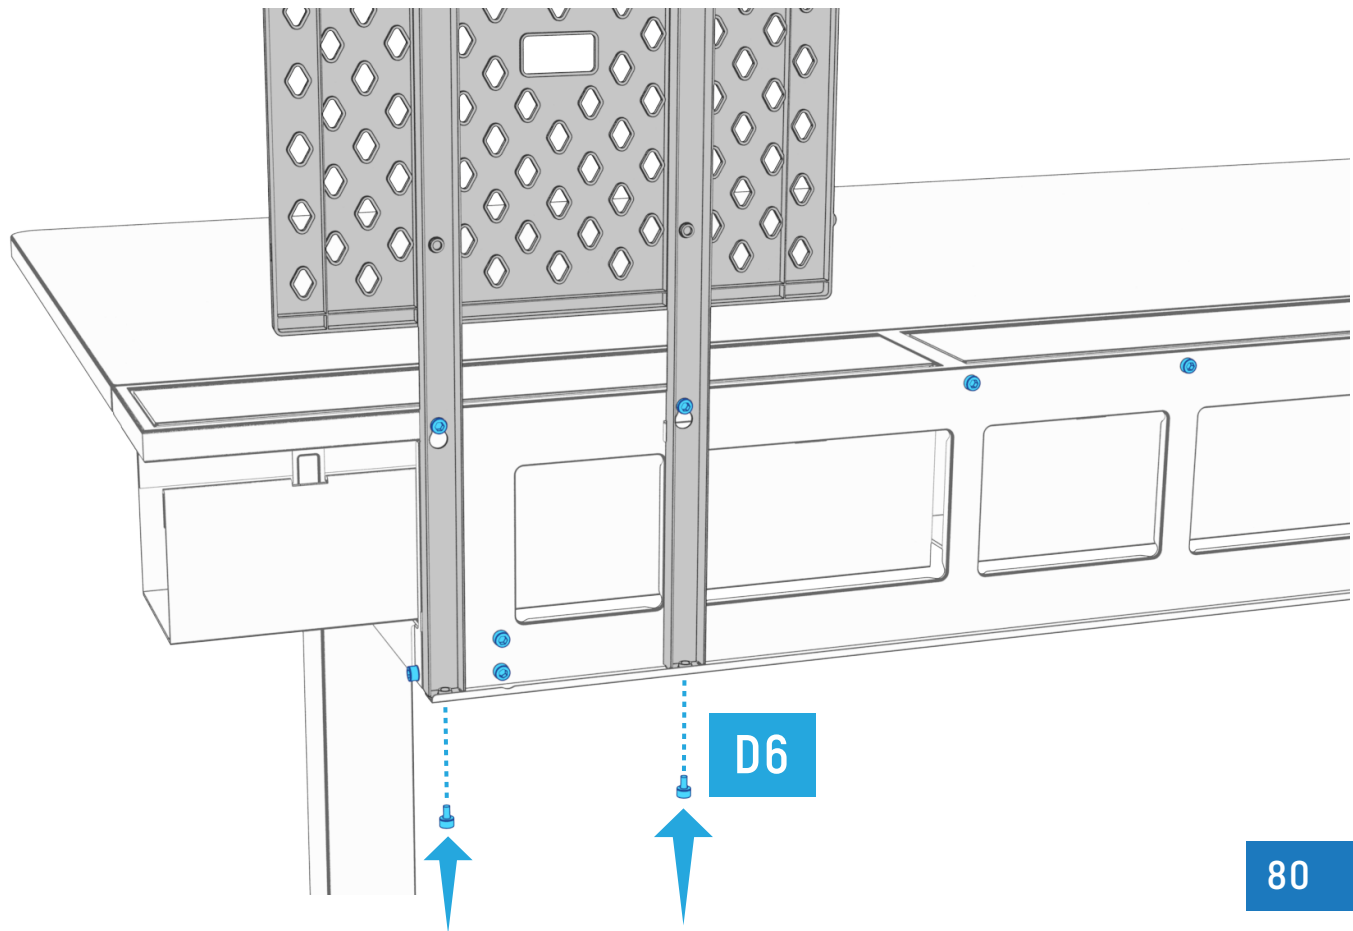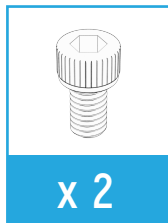

5.10 ASSEMBLE THE D-BOARD



  
5

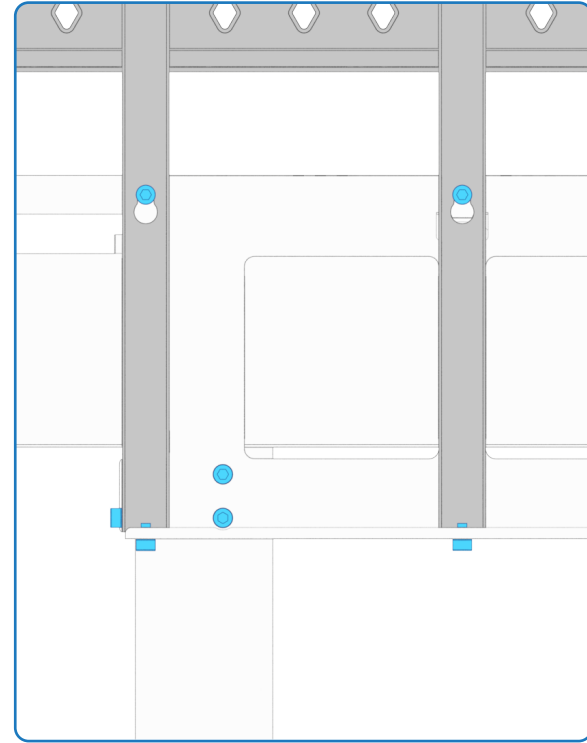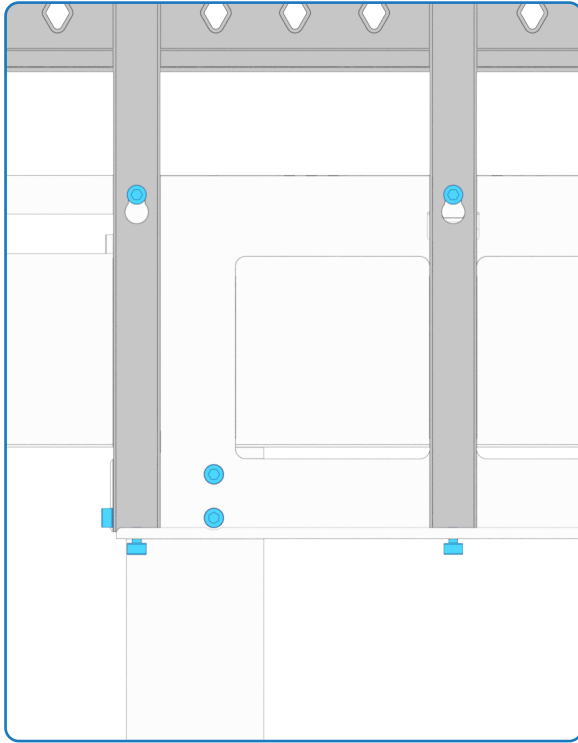

5.10 ASSEMBLE THE D-BOARD



 
6

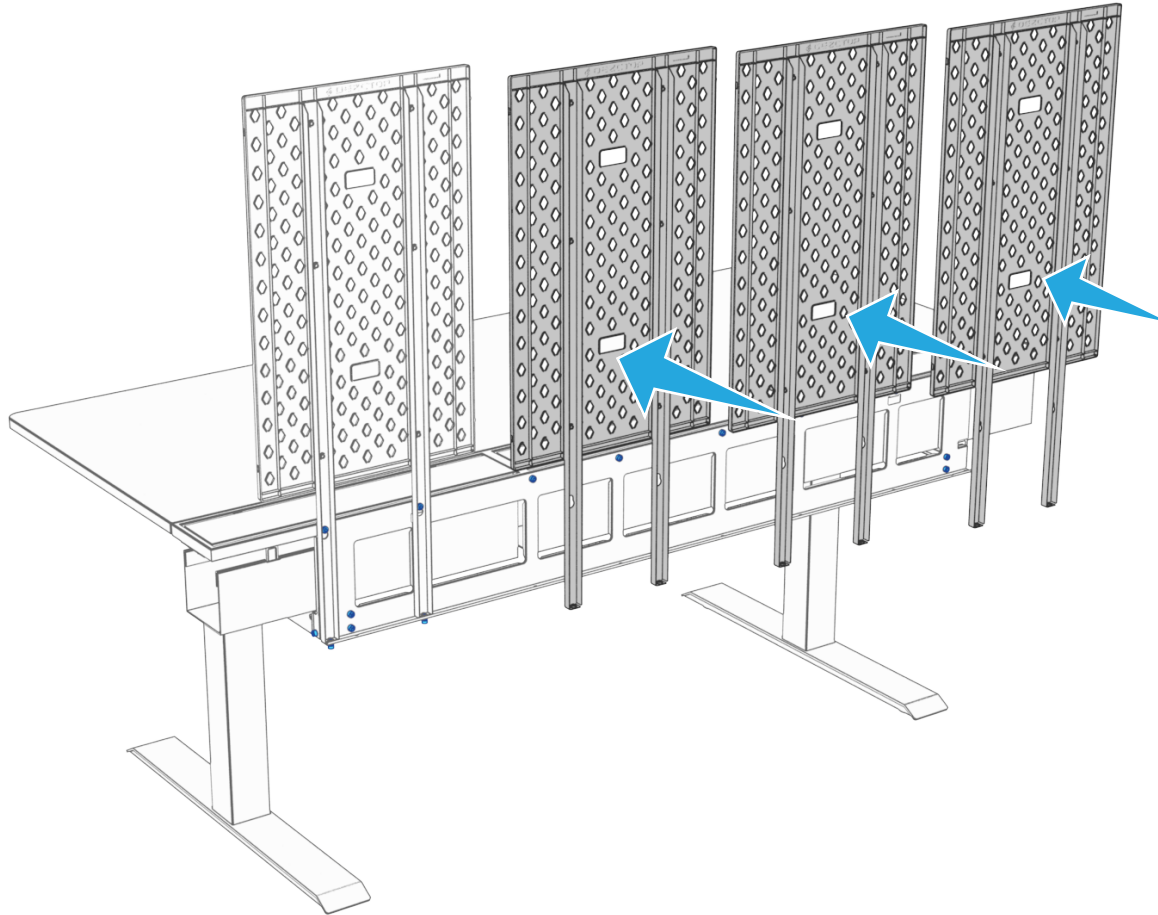

5.10 ASSEMBLE THE D-BOARD




 
6

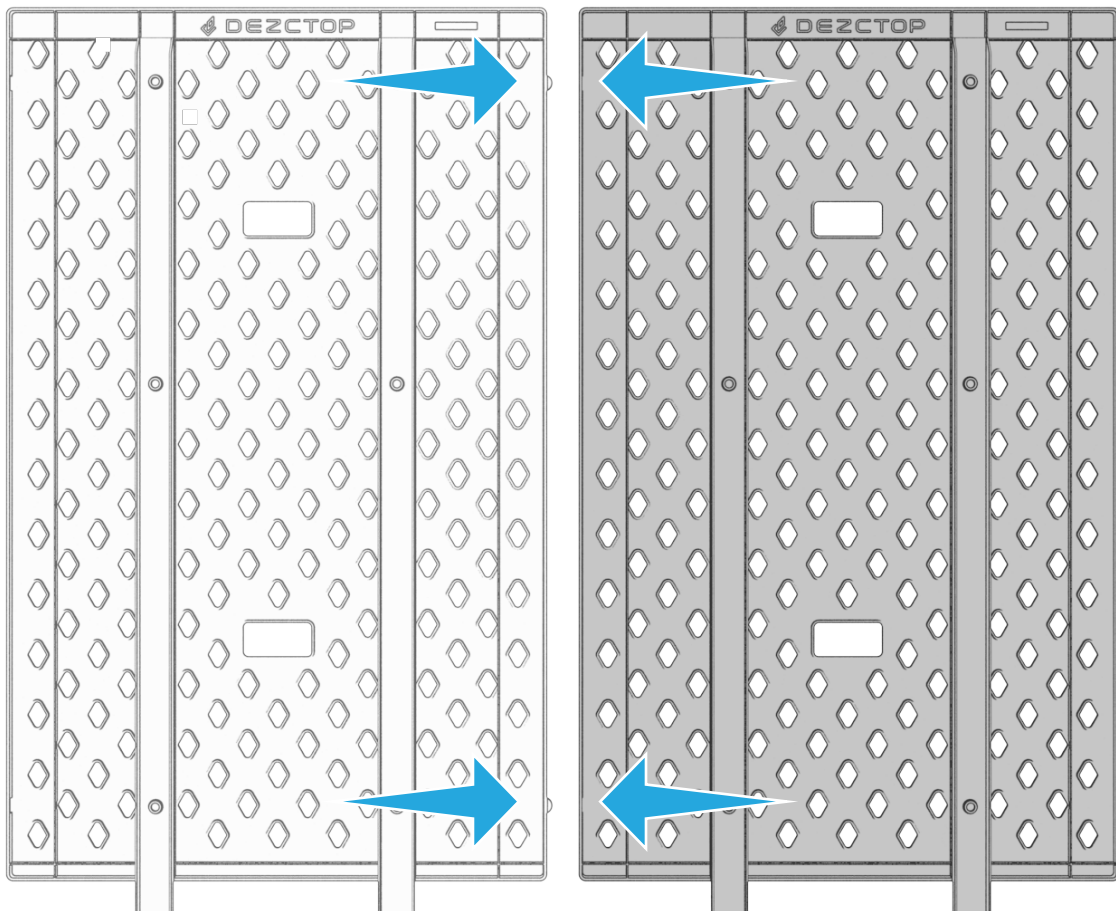

5.10 ASSEMBLE THE D-BOARD



  
7

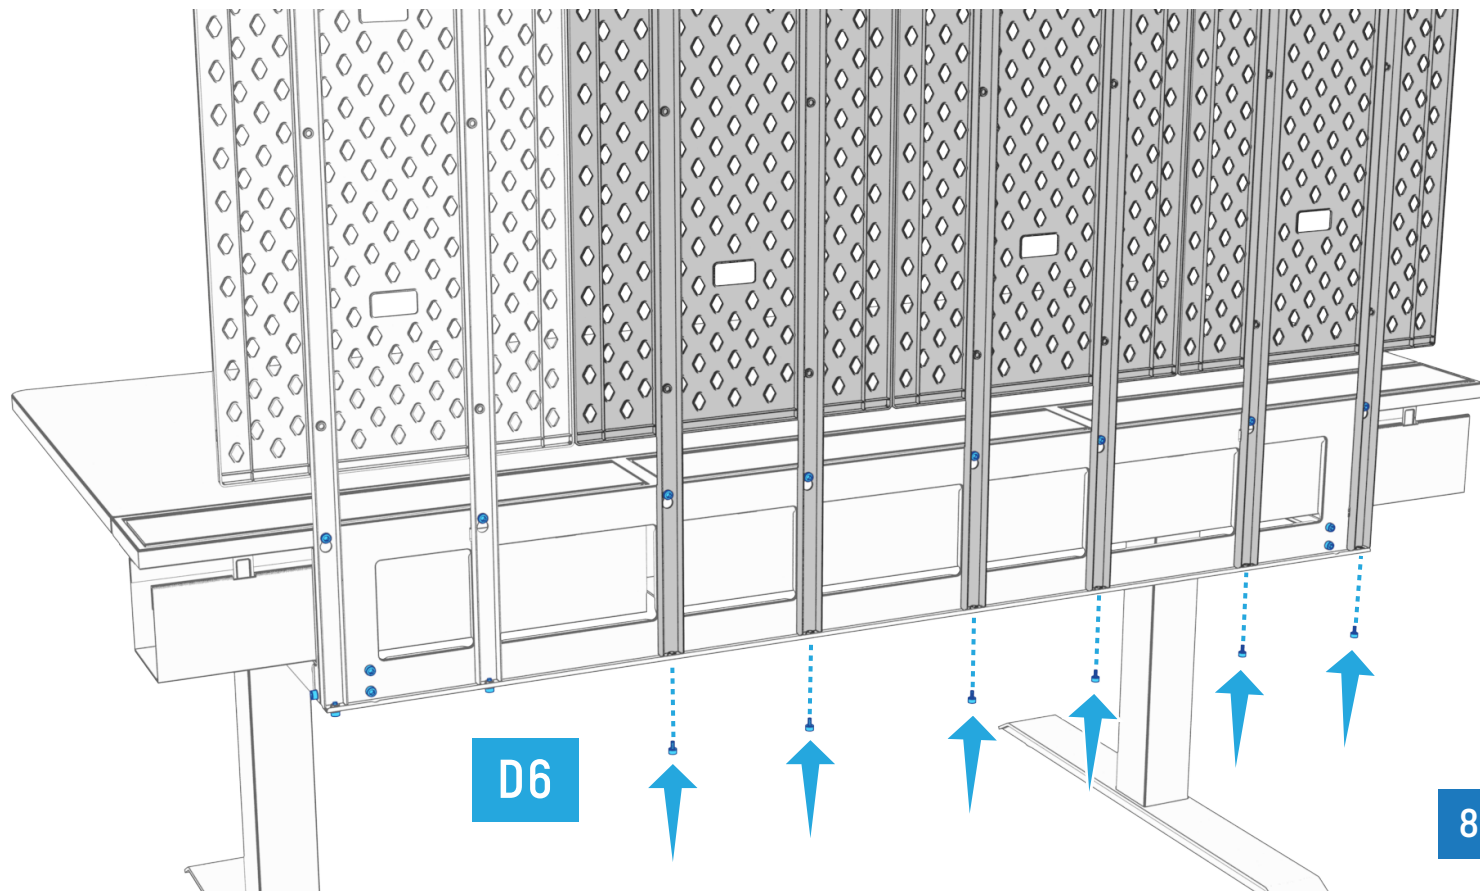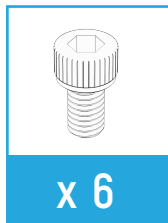

5.10 ASSEMBLE THE D-BOARD



 8

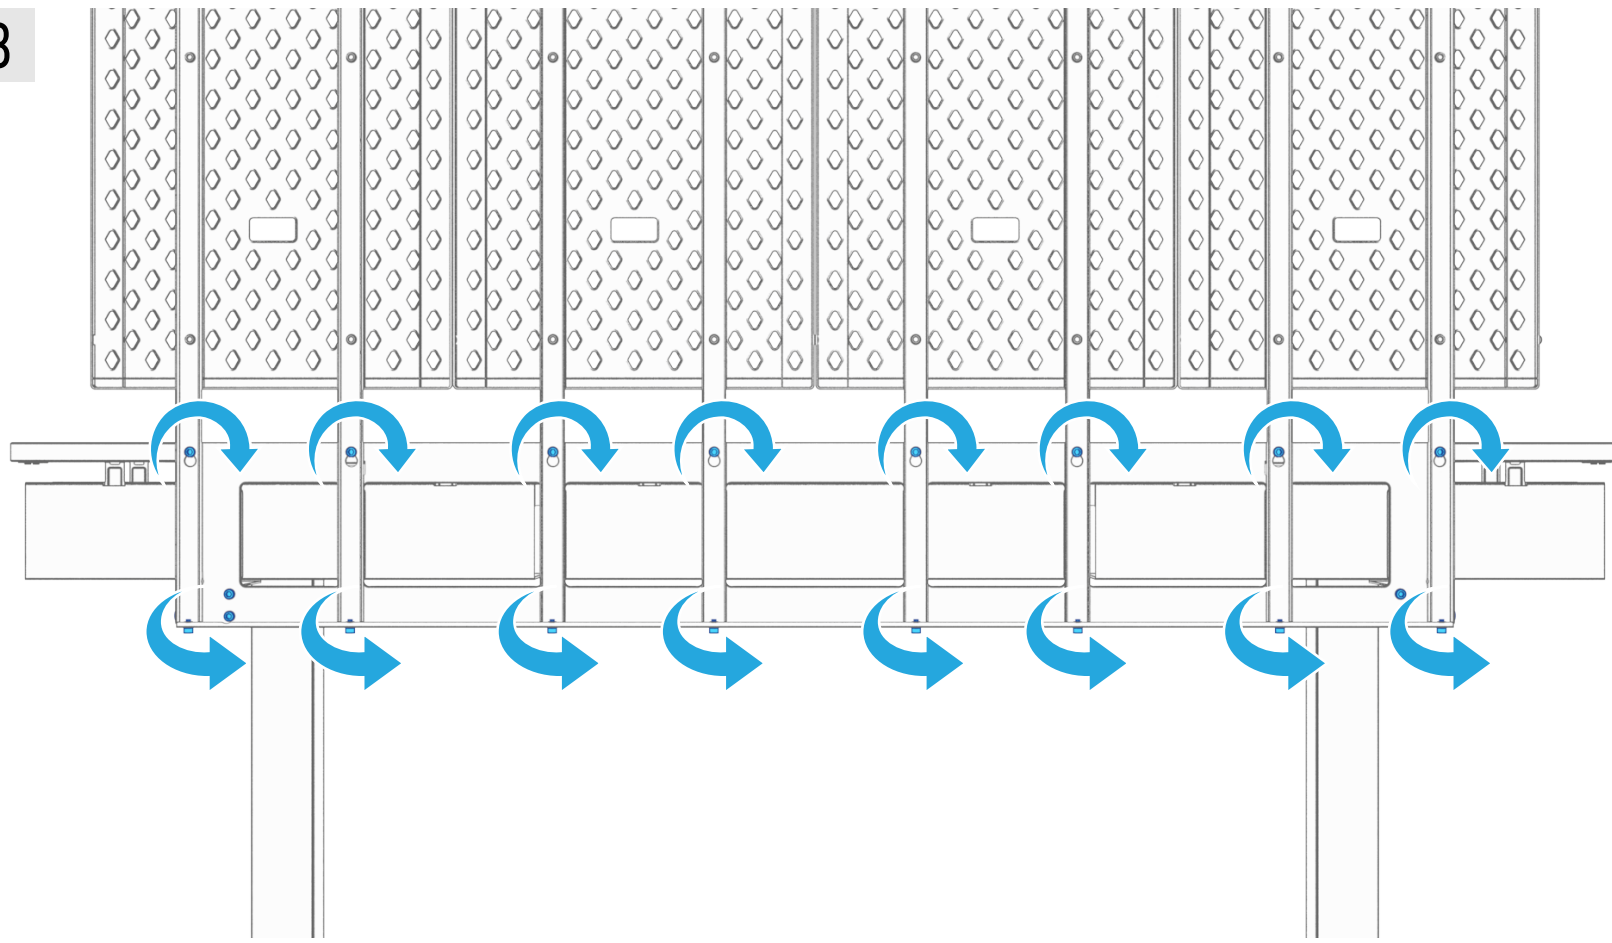





5.11 ASSEMBLE THE SHELVES

5.11 ASSEMBLE THE SHELVES



 
 
1

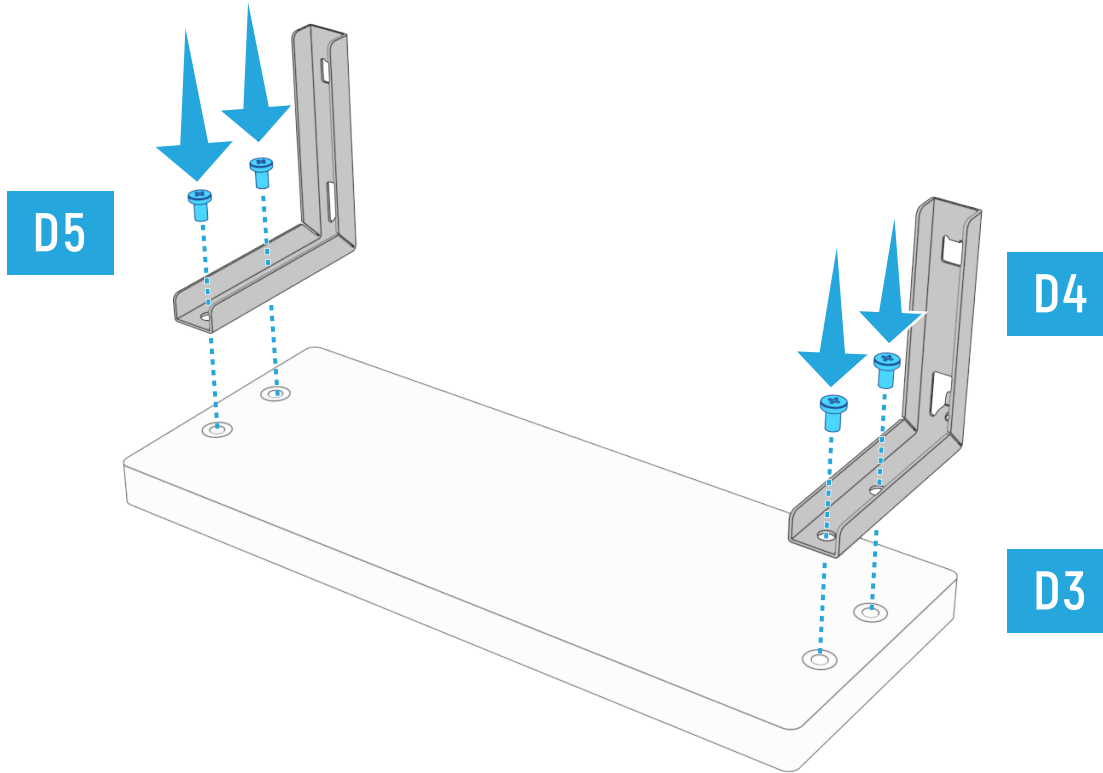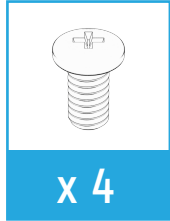

5.11 ASSEMBLE THE SHELVES



  
2

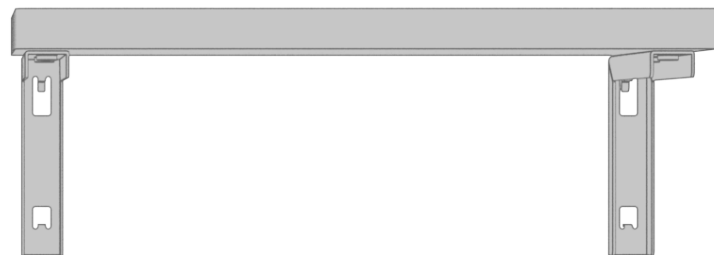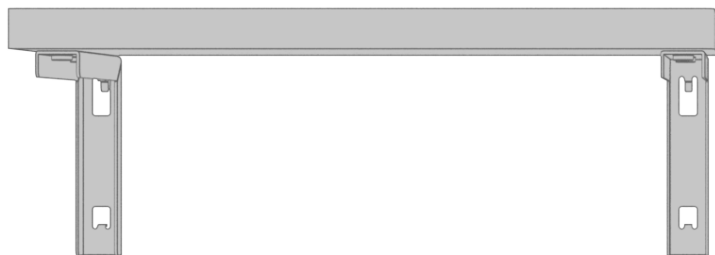

5.11 ASSEMBLE THE SHELVES



 
3

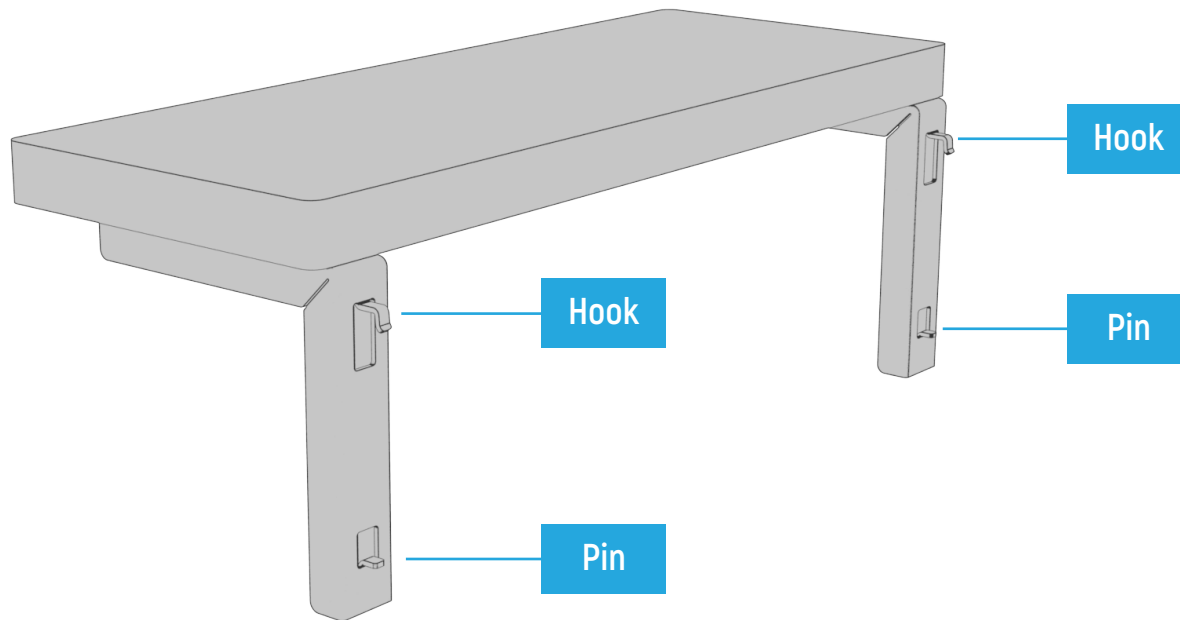

5.11 ASSEMBLE THE SHELVES



 
4

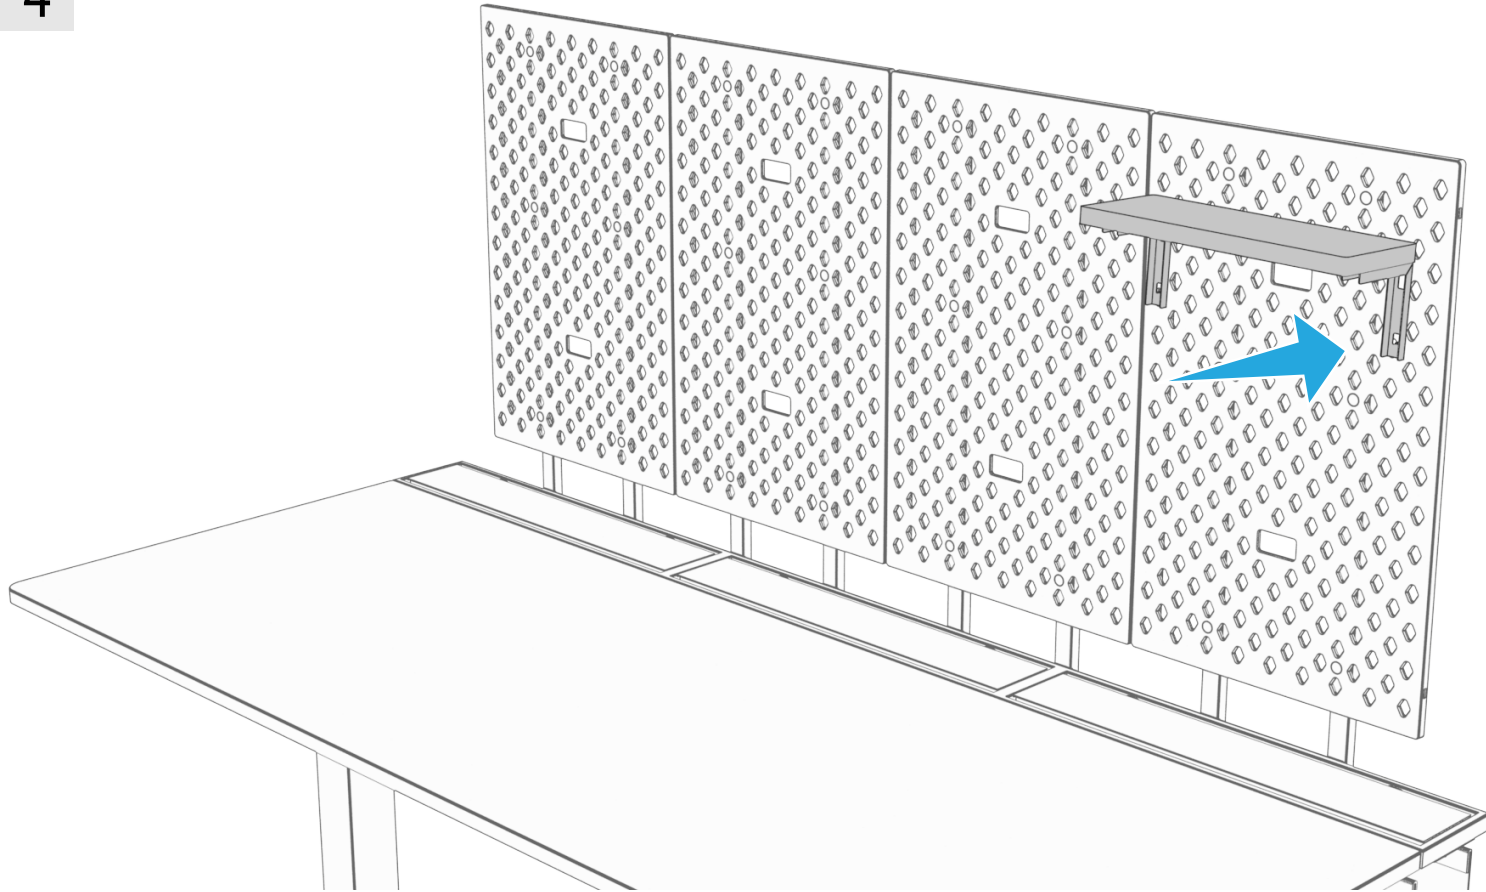

5.11 ASSEMBLE THE SHELVES



 
4 Mount

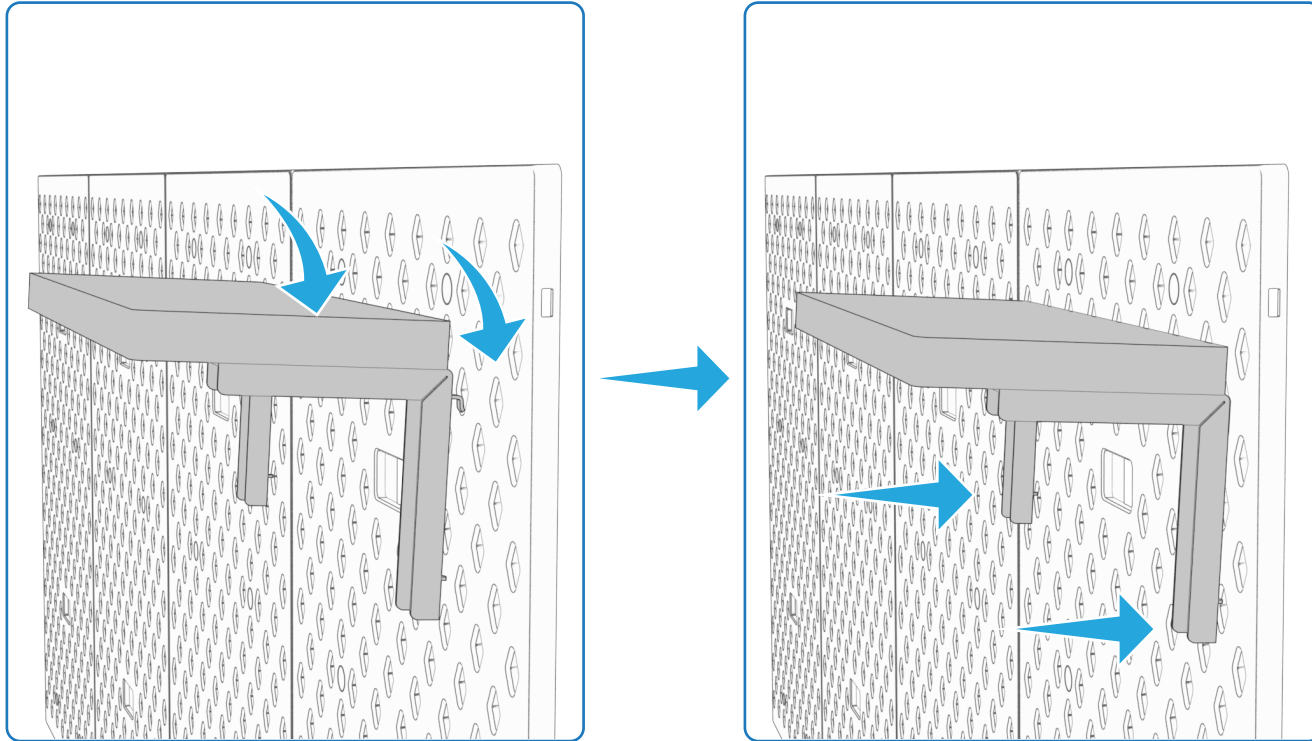

5.11 ASSEMBLE THE SHELVES



 5 Remove

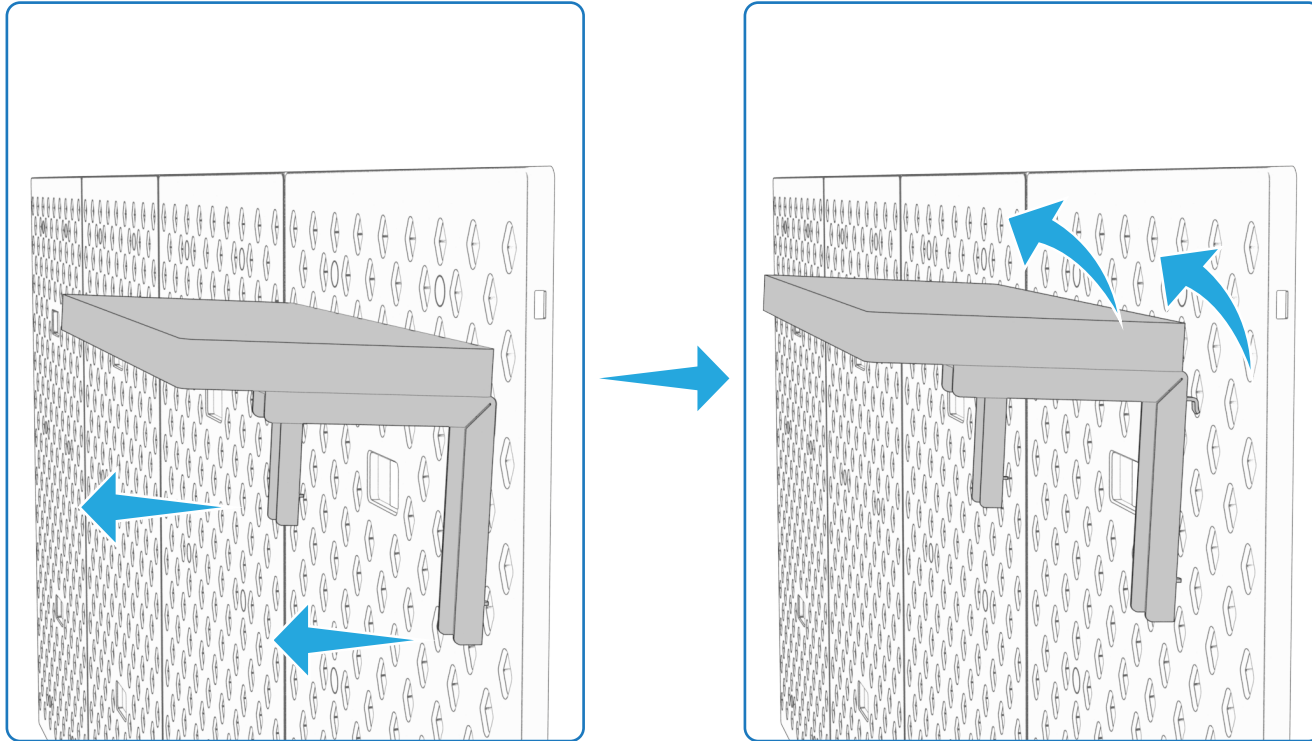

6 COMPATIBLE ACCESSORIES



 
 
 
6.1 Compatible Desk Accessories 94

6.2 Compatible D-Board Accessories 96



6.1 COMPATIBLE DESK ACCESSORIES



6.1 COMPATIBLE DESK ACCESSORIES

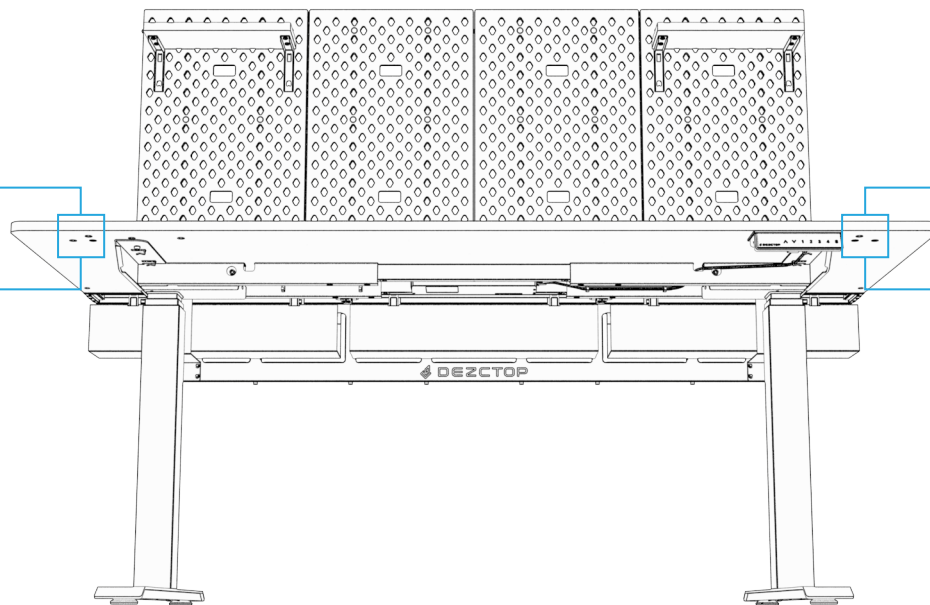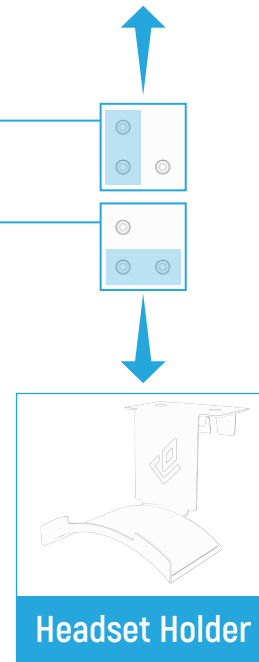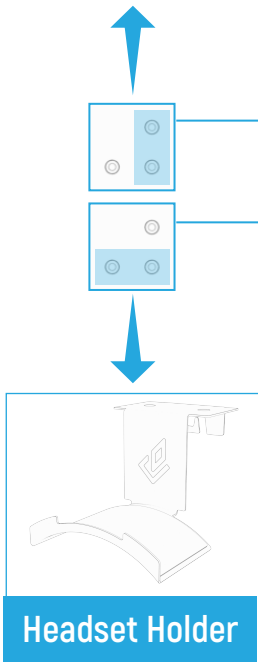




6.2 COMPATIBLE D-BOARD ACCESSORIES

  
6.2 COMPATIBLE D-BOARD ACCESSORIES

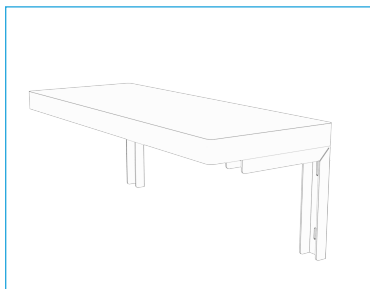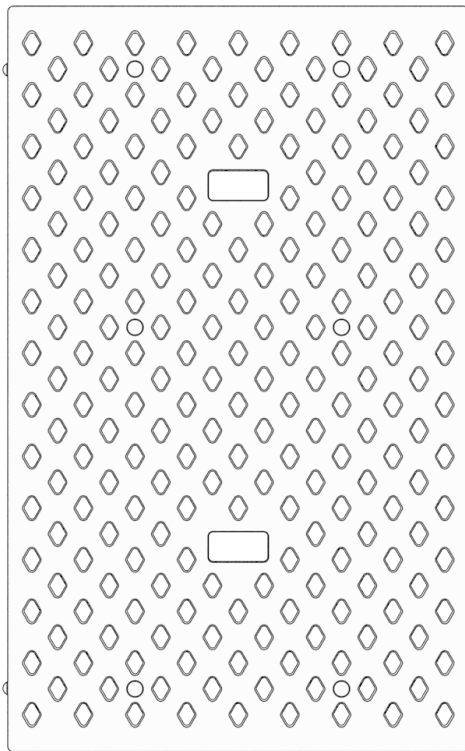


D-Board Shelves

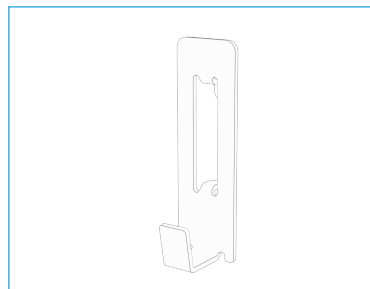 


D-Board Hook

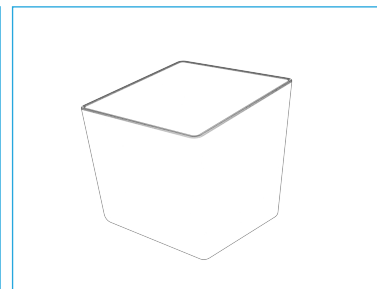 

D-Board Container

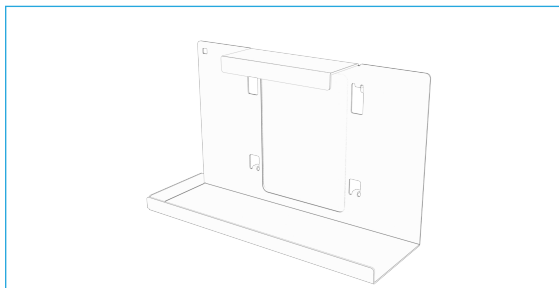 

D-Board Holder for Nintendo Switch

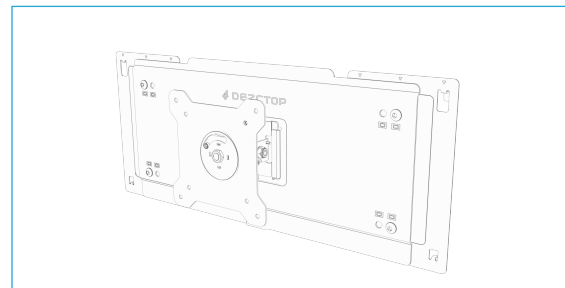 

D-Board Monitor Mount

7 DEZCTOP WARRANTY POLICY



I. WHAT IS COVERED

This warranty only covers DEZCTOP products which you purchase from an authorized DEZCTOP reseller. This warranty is limited to the original purchaser and is nontransferable.

II. WARRANTY PERIOD

All DEZCTOP products carry a 2-year warranty from the date of purchase. Proof of purchase is required for warranty service.

III. WHAT IS NOT COVERED

This warranty does not cover the following:

- > any product or serial number/warranty sticker modification applied without permission from DEZCTOP;
- > any damage that is not a manufacturing defect;
- > damage, deterioration or malfunction resulting from: accident, abuse, misuse, neglect, fire, water, lightning, or other acts of nature, unauthorized product modification or failure to follow instructions included with the product;
- > any improper installation, unauthorized alternations or modifications, or repair or attempted repair by anyone not authorized by DEZCTOP;
- > any other cause not related to a product defect in materials or workmanship;
- > shipping or transport damage (claims must be made with the carrier);
- > wear and tear from normal use.

DEZCTOP does not warrant that this product will meet your requirements. It is your responsibility to determine the suitability of this product for your purpose.

IV. EXCLUSION OF DAMAGES (DISCLAIMER)

DEZCTOP's sole obligation and liability under this warranty is limited to the repair or replacement of a defective product at our option. DEZCTOP shall not, in any event, be liable for any incidental or consequential damage, including but not limited to damages resulting from interruption of service and loss of data, business, or for liability in tort relating to this product or resulting from its use or possession.

V. LIMITATIONS OF IMPLIED WARRANTIES

There are no other warranties, expressed or implied, including but not limited to those of merchantability or fitness for a particular purpose. The duration of implied warranties is limited to the warranty period specified in Paragraph II.

VI. TO OBTAIN TECHNICAL SUPPORT

If you have already referenced the user guide of your products and still need help, please contact us via support@dezctop.com or check FAQs (in Supports) on DEZCTOP website dezctop.com.

VII. FOR WARRANTY SERVICE

Global warranty is not currently available. In the event that warranty repair or replacement is necessary, DEZCTOP will request and you must provide proof of purchase (store receipt or invoice) in order to receive warranty service. If your product needs to be returned or repair within the warranty period, please do so through the retailer or distributor from whom you purchased the product. If you can no longer return the product to your dealer, please contact DEZCTOP Customer Support for assistance. Please note, proof of purchase from an authorized DEZCTOP retailer is required for all warranty servicing.

8 SUPPORT & SERVICE



If you have any other questions or problems with DEZCTOP product you purchased, please contact us by e-mail **DEZCTOP Customer Support** { support@dezctop.com }.

Please include a detailed explanation and take some photos of your problem and your proof of purchase.

For comments and suggestions, you can also e-mail support@dezctop.com.

For more information about DEZCTOP, please visit us online. **DEZCTOP Website** : dezctop.com

DEZCTOP Customer Support : support@dezctop.com

DEZCTOP Website : dezctop.com

Warranty & FAQs : [Supports on dezctop.com](http://Supports.on.dezctop.com)